






Contents

Quick guide	5
Answer a call	5
Listen to the answering machine	8
Auto-switching on and scrolling	11
Intercom	14
Control a light/rolling shutter	16
Switch all the lights off	20
Insert the burglar alarm using an insertion scenario	23
Introduction	26
Fundamental concepts	26
General information	27
LEDs and pushbuttons	27
Home Page	28
Home status	30
Favourites	32
Add an object	32
Move an object	37
Delete an object	39
Video door entry functions	41
Use of the functions from the device	42
Answer a call	42
Look (auto-switching on/scrolling)	45
Door lock release	49
CCTV	50
Events	52
Answering machine	53
System messages	55
Commands	58
Cameras	60
Intercom	64
Use of the functions from Door Entry for HOMETOUCH App	67
Introduction	67
Account registration	68
Authentication	71
Forgotten password	72
Account cancellation	74
Association of the device	75
Home page	76
Display the cameras or Entrance Panels	76
Open door locks	78
To receive a video door entry call	78
Call home: Call your HOMETOUCH	80
Menu	81
Answering machine	82
Activations	84
Users	85
Settings	87
Account	89
Help	92


Home-automation functions (MyHOME_Up)	93
Use the functions from the device	94
Light	94
On/off	94
Dimmer	98
Coloured light	101
Shutter	104
Rolling shutter without opening level adjustment	104
Rolling shutter with opening level adjustment	106
Player	111
Controlled socket	114
ON/OFF	114
Scenarios	117
Temperature control	118
Burglar alarm	122
Insertion scenarios	124
Partitions	125
Zones	127
Alarms and Faults	128
Use of the functions from MyHOME_Up	131
Settings	132
General	134
Date and time	134
Language	138
Information	138
Network	139
Connection to the network using Wi-Fi technology	140
Connection to the network using Ethernet technology	143
Screen	145
Audio	146
Answering machine	147
Account	149
Check updates	152
Notify a problem	154
Advanced settings	155

Quick guide

Answer a call

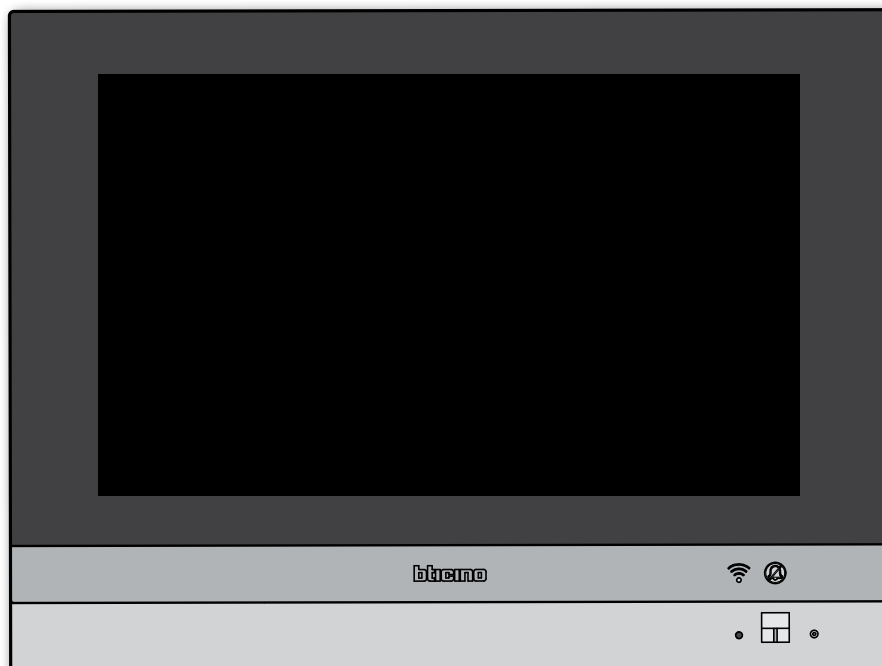


When a call is received by an Entrance Panel, the LED turns flashing green and after a few seconds the image recorded by the Entrance Panel camera is displayed.

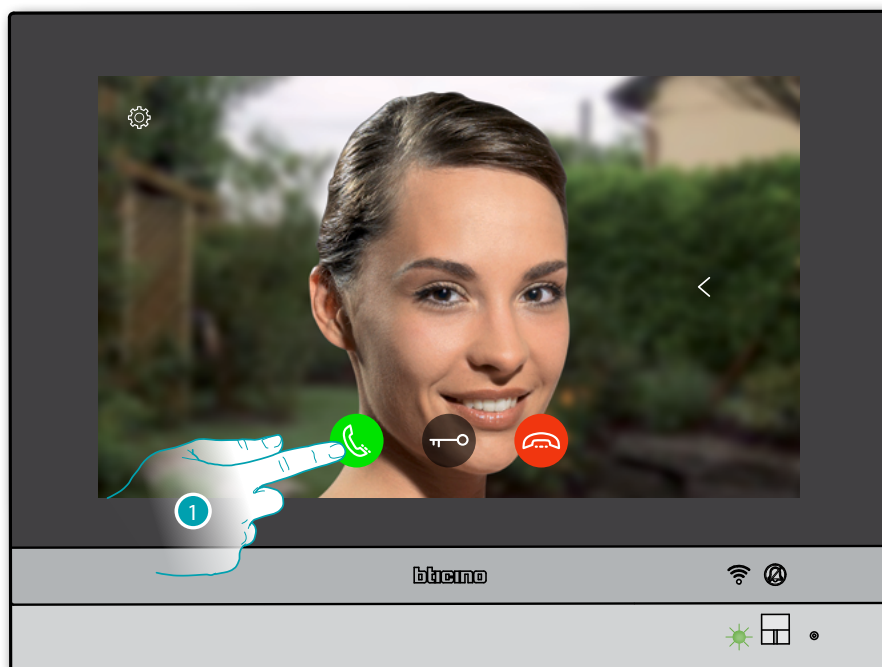


1. Touch to answer the call

The LED turns steady green

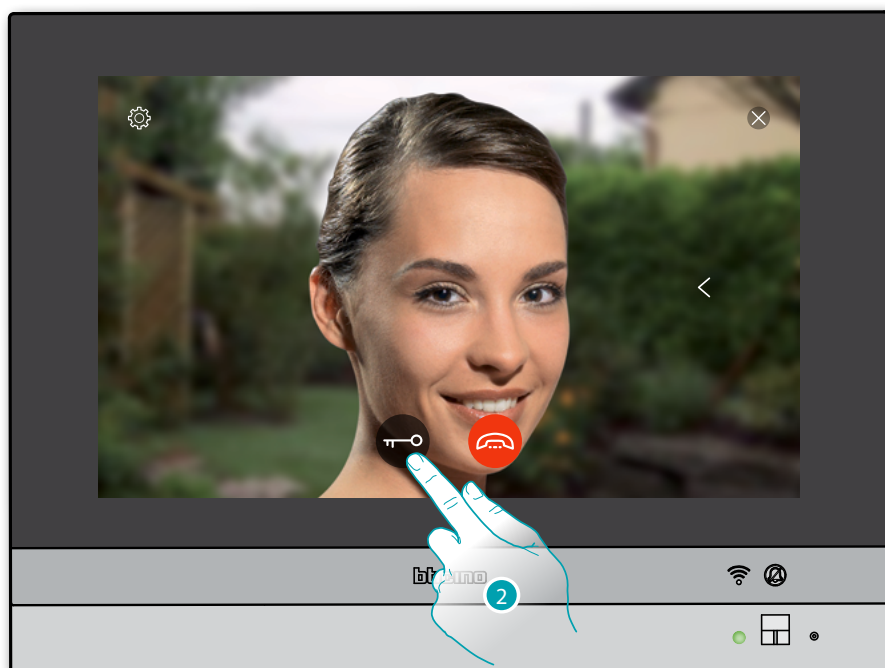

2. Touch to open the Entrance Panel door lock

The LED turns steady blue and a message indicates that the door lock has been released

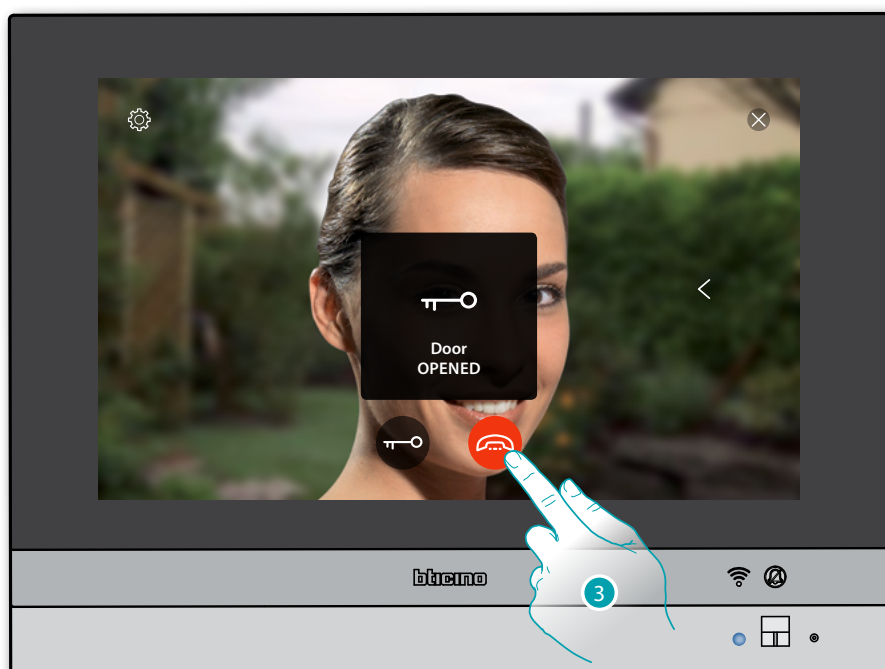


3. Touch to end the call

HOMETOUCH returns to the Home Page



Listen to the answering machine

A steady white LED indicates that there are one or more unread messages

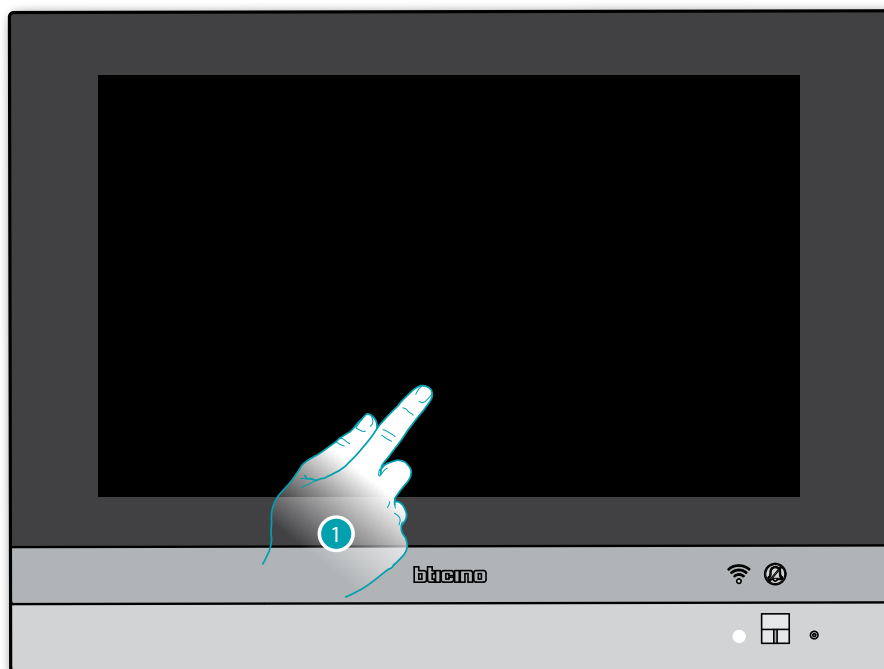


1. Touch to activate HOMETOUCH

A visual indication also appears on the event icon (📧)



2. Touch to open the events section and display the messages

In this page it is possible to display any Entrance Panel audio/video messages recorded in your absence.

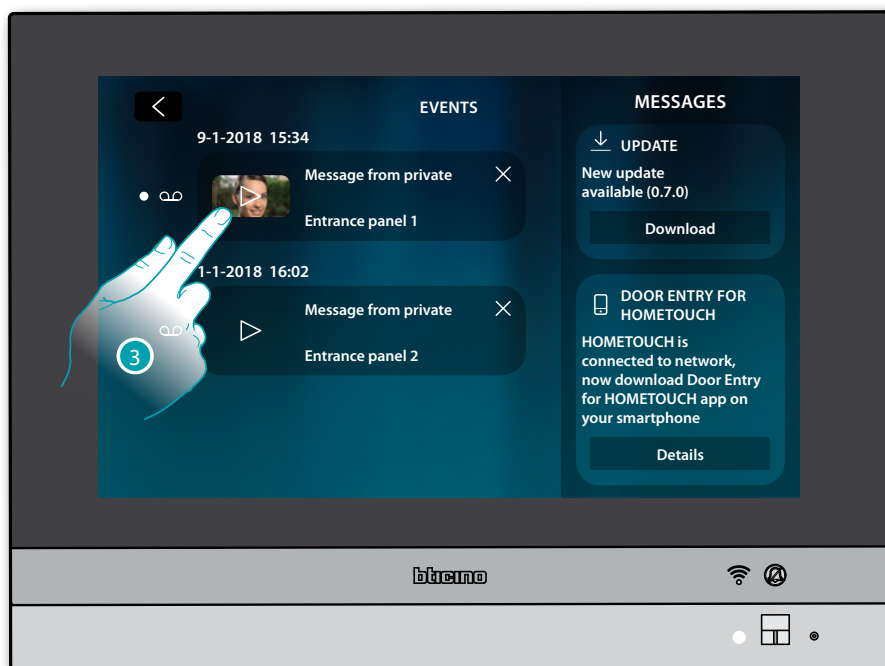

3. Touch to display the message
The message is played back automatically



4. Touch to close the message




4. Touch to return to the Home Page




Auto-switching on and scrolling




1. Touch to display the images recorded by the Entrance Panel camera
The LED turns flashing green

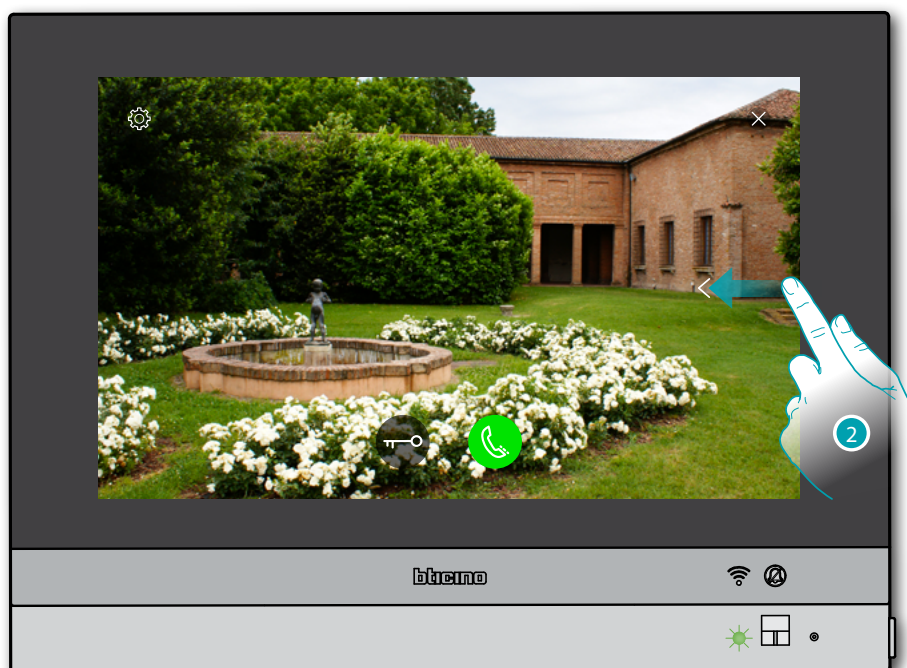

2. Touch or scroll to display another camera

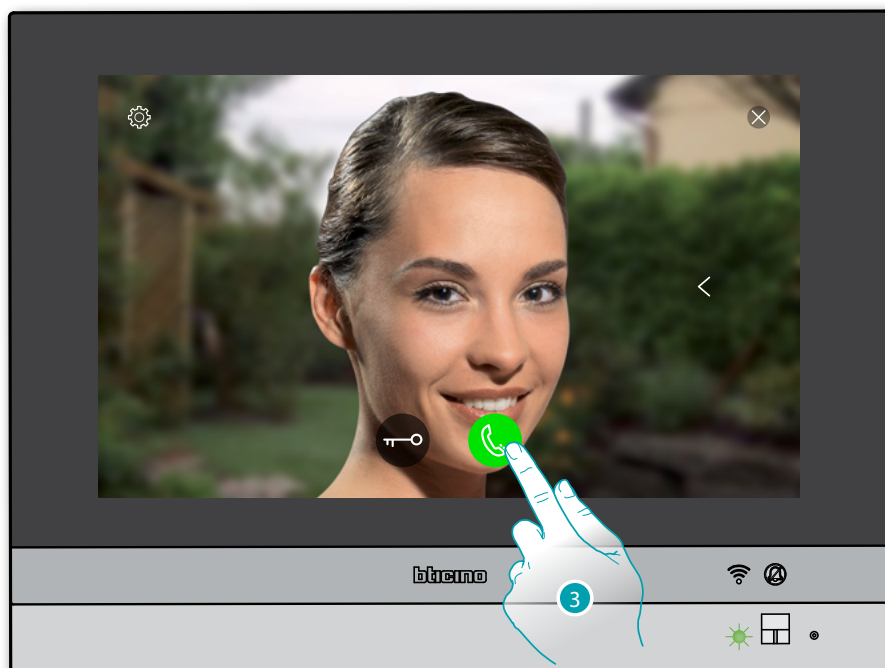


3. Touch to activate the audio communication with the Entrance Panel
The LED turns steady green

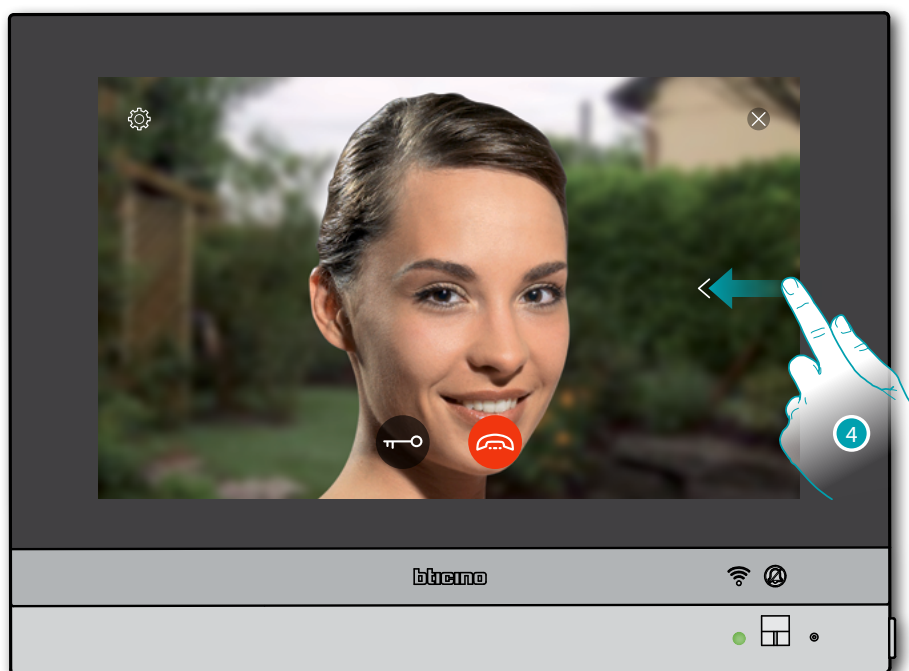

4. Touch or scroll to display another camera

Note: audio communication remains active also when switching cameras; switching from one camera to another is also possible without enabling the audio

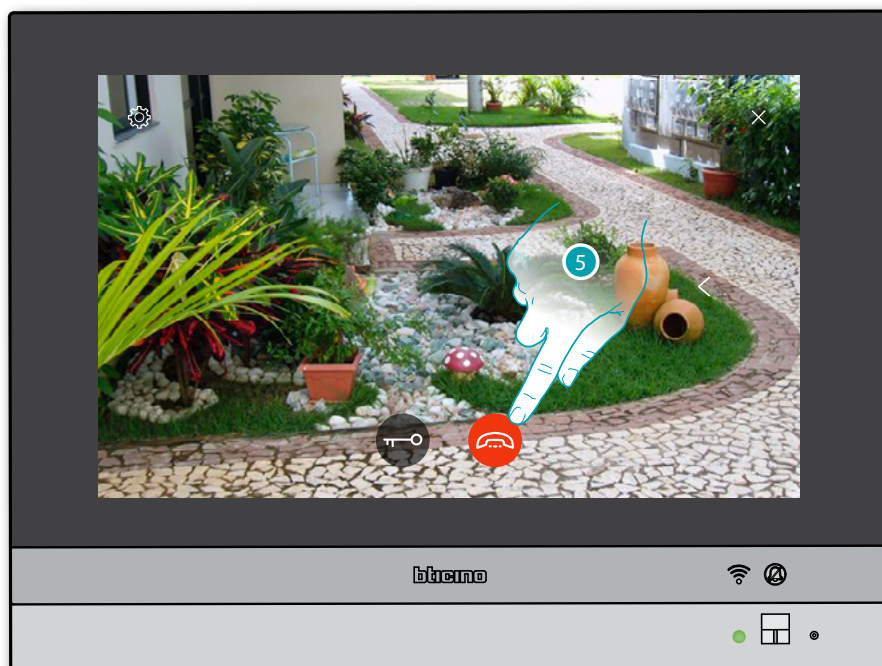

5. Touch to end the audio and video communication
HOMETOUCH returns to the Home Page




Intercom




1. Touch to activate the intercom with the desired Internal Unit

The LED turns flashing green and the display shows the Internal Unit communication screen

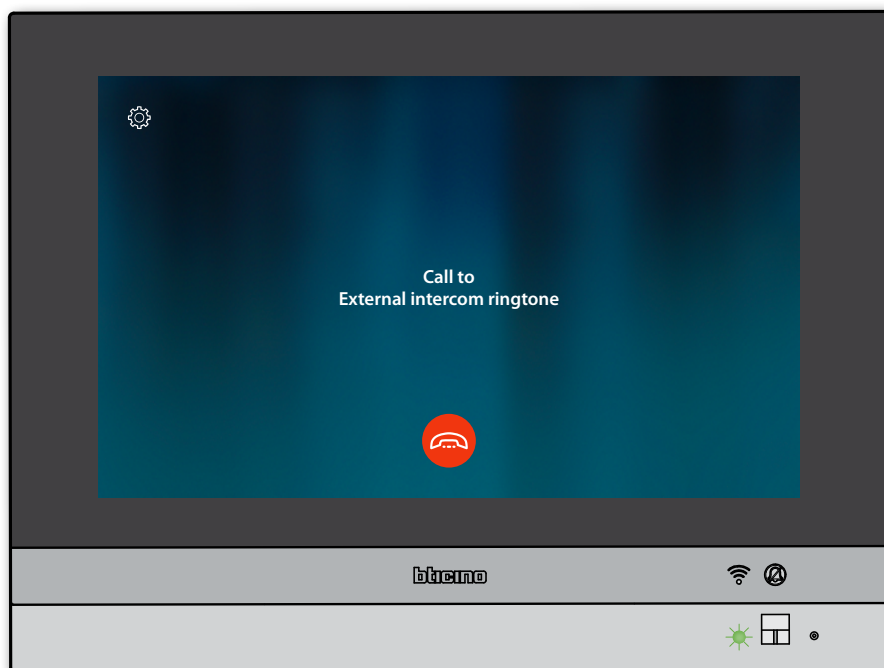

When the called extension answers, the duration of the call is displayed and the LED turns green steady

Note : When a call is received from the Entrance Panel while the internal unit is in "intercom" mode, the system follows the priority rules and ends the active call.

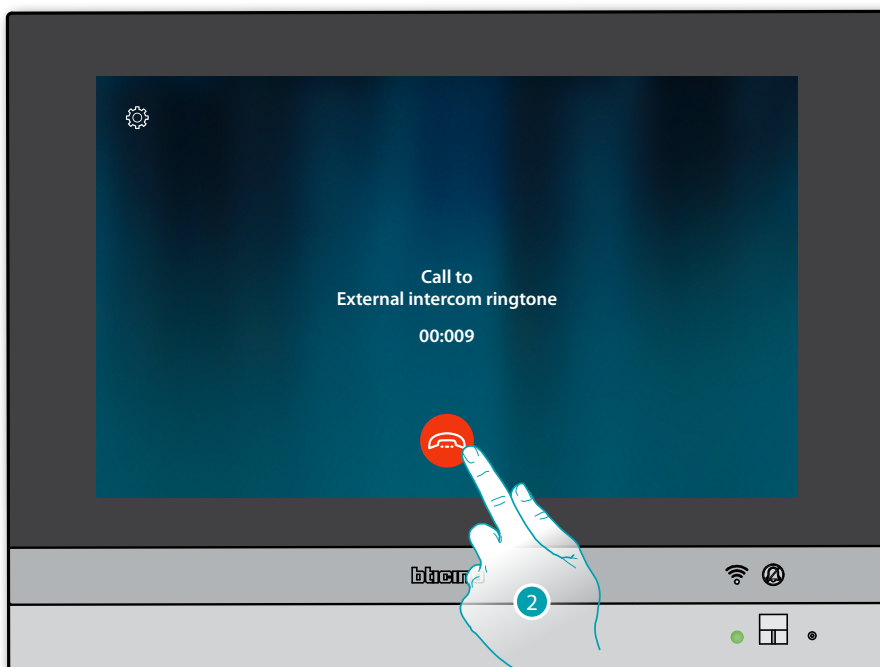

2. Touch to end the communication
HOMETOUCH returns to the Home Page



Control a light/rolling shutter


Lights



1. Touch to switch on the light and/or adjust its intensity



2. Touch to switch the dimmer on

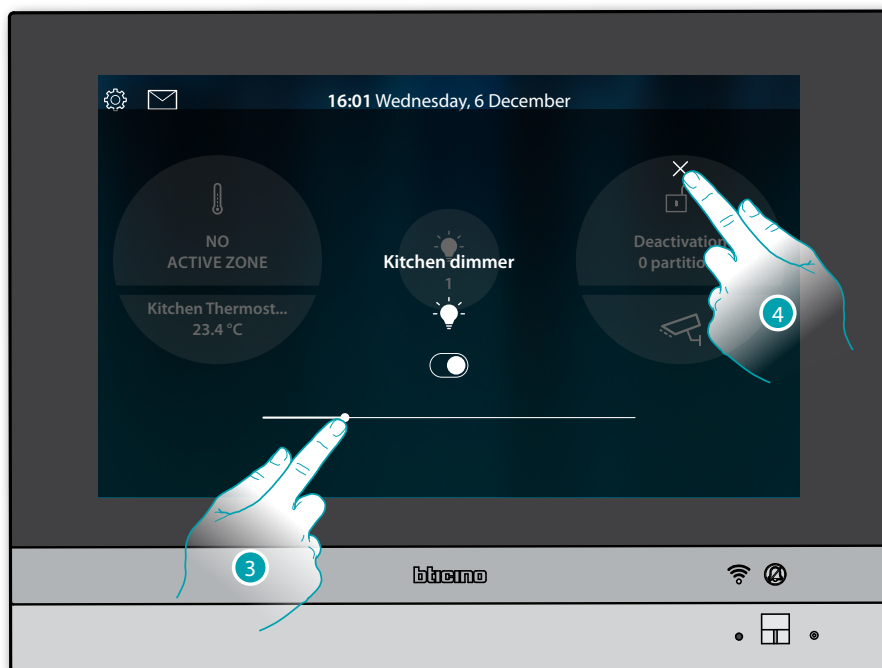

3. Touch and scroll to the left/right to decrease/increase the brightness
4. Touch to close and return to the Home Page



Shutters



1. Touch to rise/lower the shutter



2. Touch to raise the rolling shutter to the end of travel
- Or
3. Touch and scroll left to open the rolling shutter to the point required. The command is performed when you stop pressing.



4. Touch to stop the rolling shutter
5. Touch to close and return to the Home Page



Switch all the lights off

When the lights are on, an indication appears in the Home Status preview screen




1. Touch to open the page



2. Touch to switch all the lights off




3. Touch to confirm

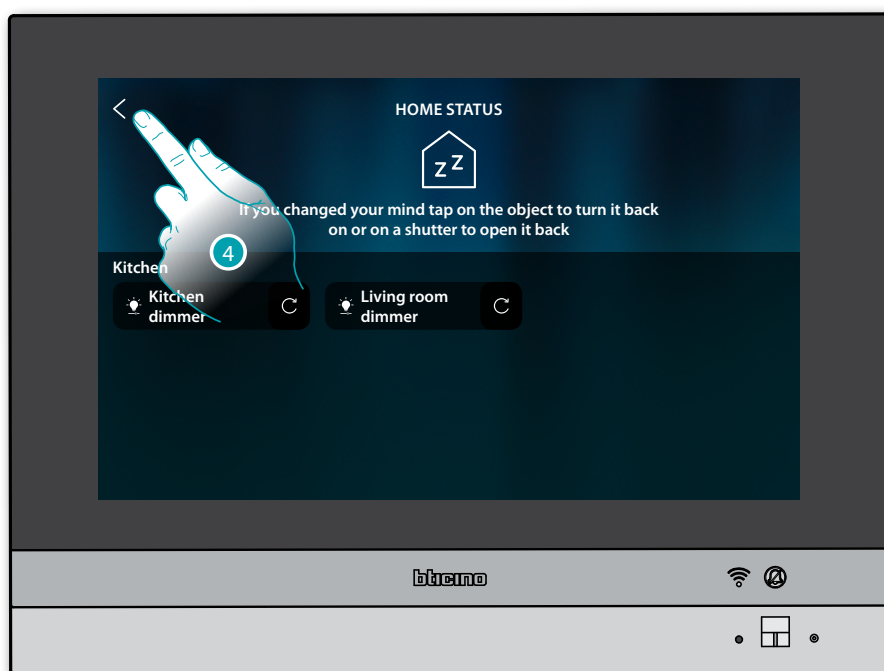

The lights are only available in the Home Status screen until the screen turns off


4. Touch to return to the Home Page

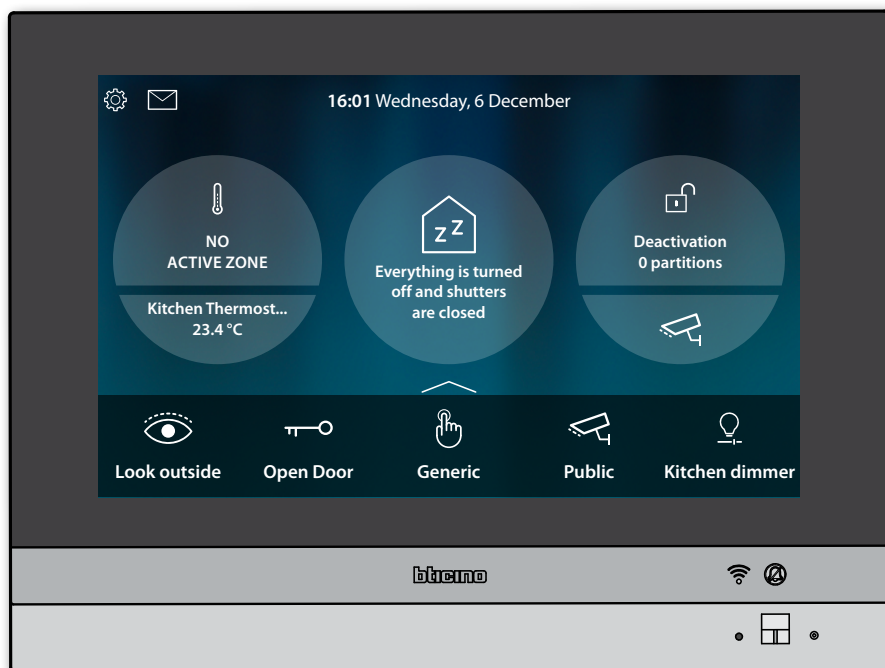

Insert the burglar alarm using an insertion scenario



1. Touch to open the Burglar-alarm page

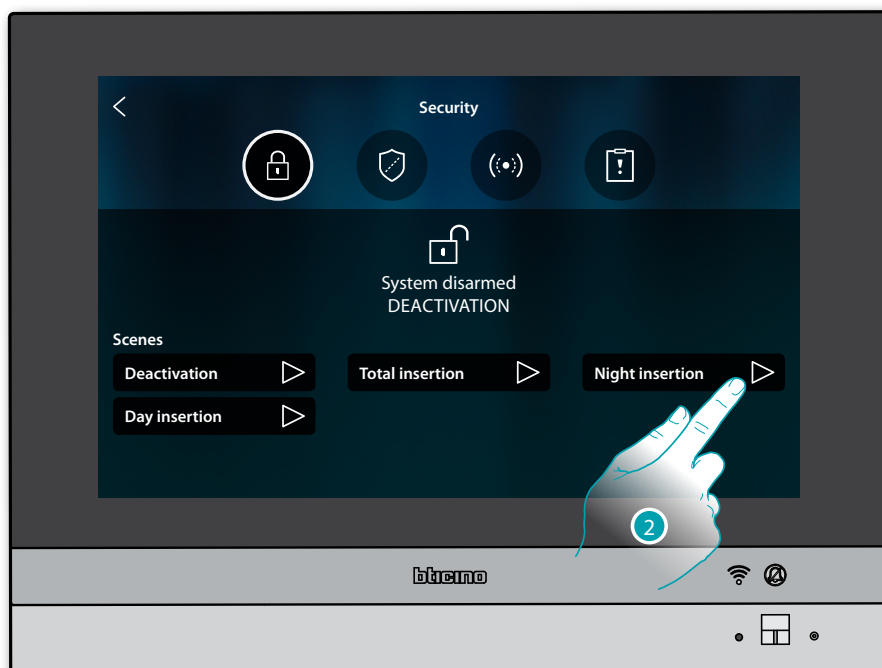


2. Touch the desired insertion scenario among the ones available




3. If required enter the code

4. Touch to confirm

A message indicates that the insertion scenario has been activated and that the system for the partitions of that scenario has been activated.

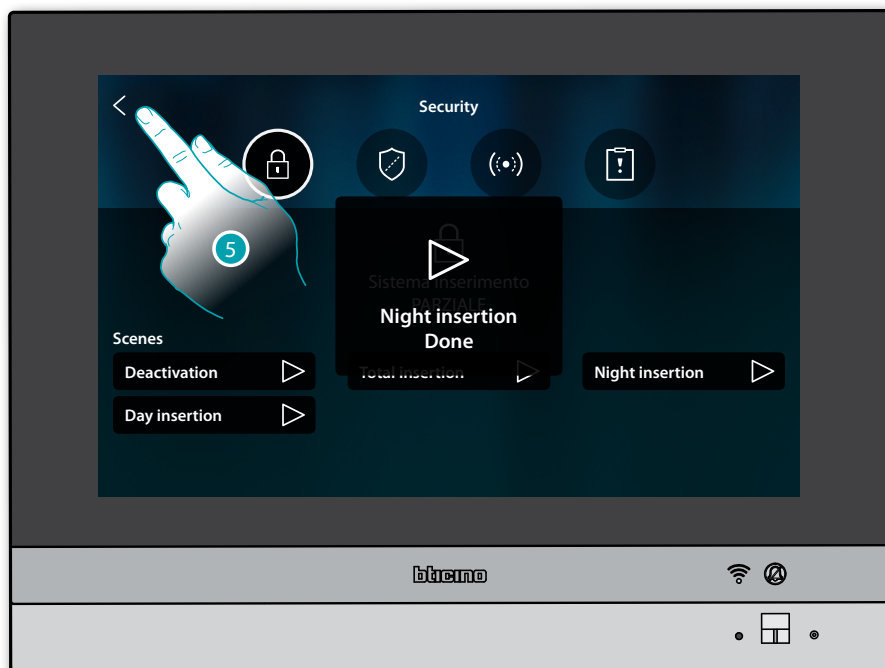

5. Touch to return to the Home Page

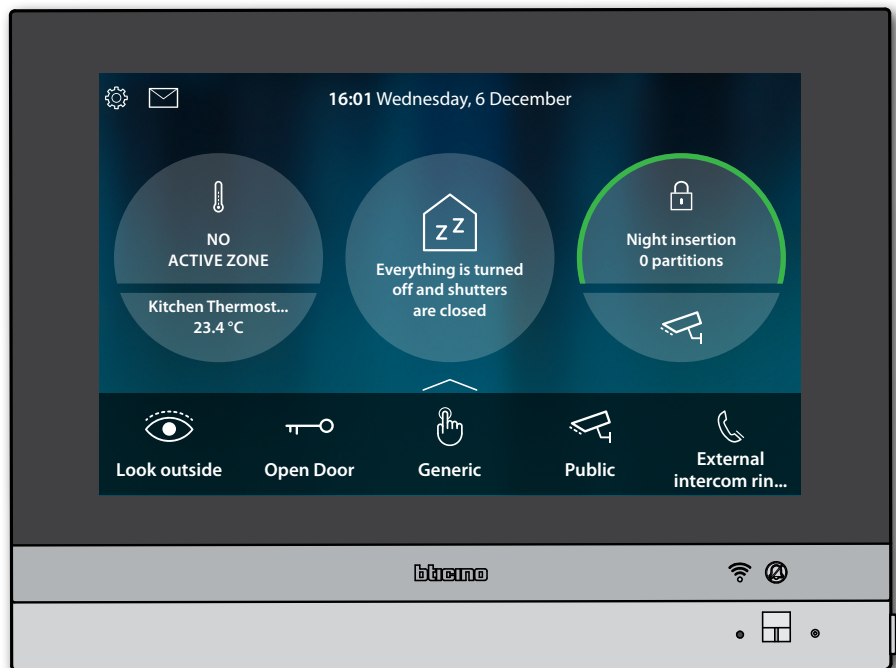

Introduction

Fundamental concepts

HOMETOUCH is a connected device with [video door entry functions](#) and, if associated with the MyHOME_Up system, with [home automation functions](#).

It is possible to use the video door entry functions:


- directly from the device, using objects always present in the [Home Page](#) or added to the [Favourites area](#);
- remotely, using the [DOOR ENTRY for HOMETOUCH App](#)



It is possible to use the home automation functions:

- directly from the device, using objects always present in the [Home Page](#) or added to the [Favourites area](#);
using the [Home Status](#) section, it is also possible to interact with the lights switched on, the rolling shutters active, the music players playing and the powered sockets of the home (e.g.: if the garden light is switched on, the corresponding icon is displayed in the [Home Status](#) section: you can go to the section and switch it off);
- remotely, using the [MyHOME Up App](#)

In order to use the home automation functions, your installer must have connected to MyHOMEServer1

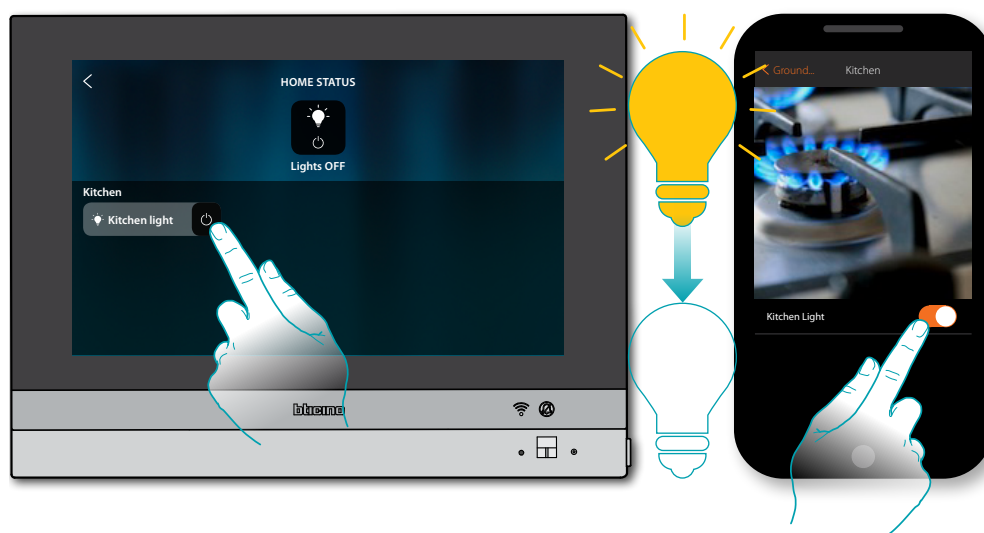

General information

LEDs and pushbuttons



Note: the image* shows the device with all its functions enabled.

In this manual check how to enable them.

* The background and icons shown may differ from those on the device.

1. 7" (Touch Screen) display
2. Wi-Fi Status:
LED flashing = Wi-Fi is active but not connected to a network
3. Ringtone exclusion status:
LED on = call ringtone disabled
4. Video door entry key:
– door lock release (long pressure)
– audio enabling/disabling (short pressure during a call)
5. Microphone
6. Proximity sensor
7. RGB Multifunction LED:


LED	Status	Meaning
	Steady blue	The function shows the "door open" status" (only if the system has been set correctly using the appropriate actuator)
	Steady green	The device is communicating
	Steady white	Notification of messages (answering machine, update availability or other system messages)
	Flashing red	No Internet connection
	Flashing green	Incoming call
	Flashing white	Update in progress (download or installation)

Note: it is not possible to perform other operations from the display when the DOOR ENTRY for HOMETOUCH App is connected to the system (e.g. call in progress, camera CCTV, etc.)

Home Page

The content of this page will change based on the configuration mode and the systems connected to MyHOMEserver1

Below is the Home Page with all the enabled functions.

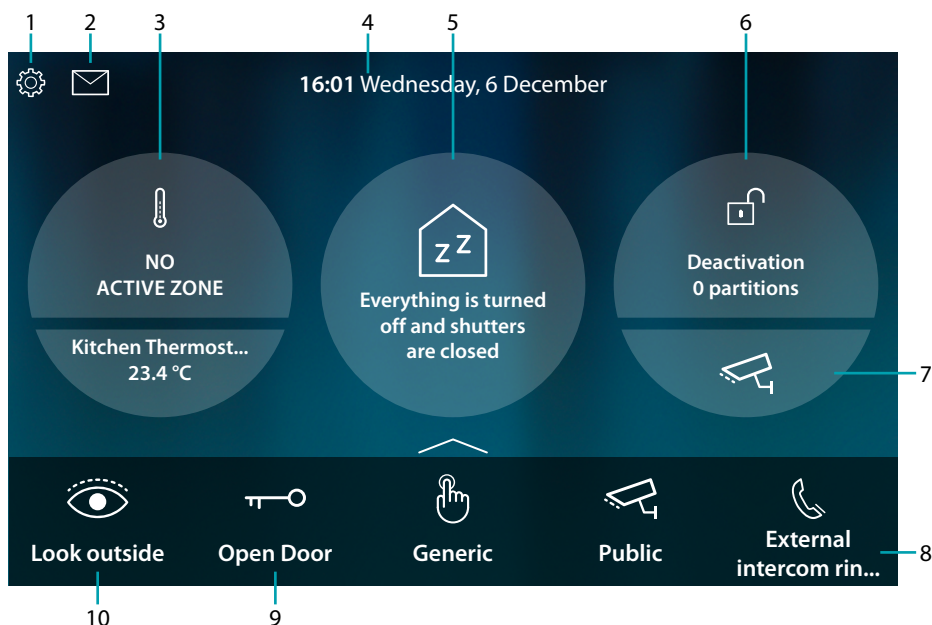

1. **Settings**
Touching it will give access to the Settings section, which contains a range of customisations that will enable you to make the most of your HOMETOUCH
2. **Events**
Opens the Events section where it is possible to display the audio/video messages of the video door entry answering machine and the system messages.
3. **Temperature control**
Shows some temperature control system data: touch to open the Temperature Control section and use its functions.
4. **Time/date**
Displays current time and date
5. **Home status area**
Displays the active home automation devices of the home.
Touch to open the [Home Status](#) section and use its functions.
6. **Security area**
Displays the status of the burglar alarm system and other data: touch to open the Burglar Alarm section and use its functions.
7. **CCTV area**
Opens the CCTV area, where it is possible to display the CCTV cameras
8. **Favourites**
This area includes (in addition to the fixed icons of the functions of items 9 and 10) commonly used video door entry system and home automation objects added by yourself for the management of the home
9. **Door lock release (*)**
Touch to open the associated Entrance Panel door lock
10. **Look (*)**
Touch to switch on the camera of the associated Entrance Panel (auto-switching on) and to scroll through the connected cameras and/or Entrance Panels.

***Note:** the icons of the functions of items (9) and (10) are always included in the Home Page when the device is used as a video internal unit. In case of devices used both for the video door entry system and the home automation functions, they are displayed in the Favourites area (example shown)

Caution: remote activation may cause damage to people or property

Note: communication between HOMETOUCH and Mhserver1 is always through the IP network (Wi-Fi or Ethernet); therefore, the commands sent (e.g.: scenarios) may not be delivered in case of network fault.

Note: a domestic Wi-Fi with Internet access is needed for the connection between the HOMETOUCH video internal unit and the Smartphone.

To use the service, the Customer must acquire the technical equipment which allows access to the Internet, on the basis of an agreement made by the Customer himself with an ISP (Internet Service Provider). BTicino plays no part in this.

The customer must install the DOOR ENTRY for HOMETOUCH app on his Smartphone so that he can use some services which BTicino supplies as extras to the normal basic functions of the HOMETOUCH.

The services offered by means of the App require being able to interact with HOMETOUCH remotely and through the Internet.

In these cases the integration and good working between HOMETOUCH and App may depend on:

- a) quality of the Wi-Fi signal;
- b) type of access contract to the home internet;
- c) type of data contract on the smartphone.

The DOOR ENTRY for HOMETOUCH app operation with screen off (background) may be compromised by the applications installed on the smartphone that:

- optimise the use of the battery and the energy saving;
- protect the device (antivirus or similar programs)

The product in fact supports a VoIP streaming system. You must therefore check with your smartphone data network contract that it does not block it.

We would like to inform you that the service provided by BTicino by means of remote use via the App involves the use of data. The cost linked to data usage depends on the type of contract which the customer has with his ISP (Internet Service Provider) and is solely the customer's responsibility.


Home status

This function allows you to display some devices of the MyHOMEServer1 active on your system, in particular:


- when there are lights on
- when there are rolling shutters open
- when music is being played by a music player
- when a controlled socket is powered




The Home Status zone shows an indication of the active devices and their numbers. Touch the zone (A), to open a management page

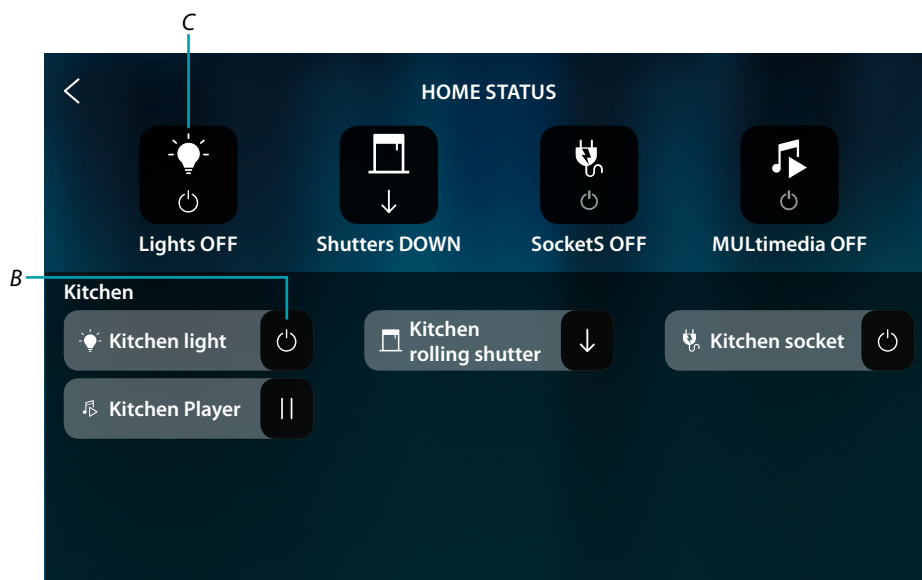

In this page it is possible to change the status of objects (B) (e.g.: if a light is on, it can be switched off and vice versa), or to switch all objects off (C).

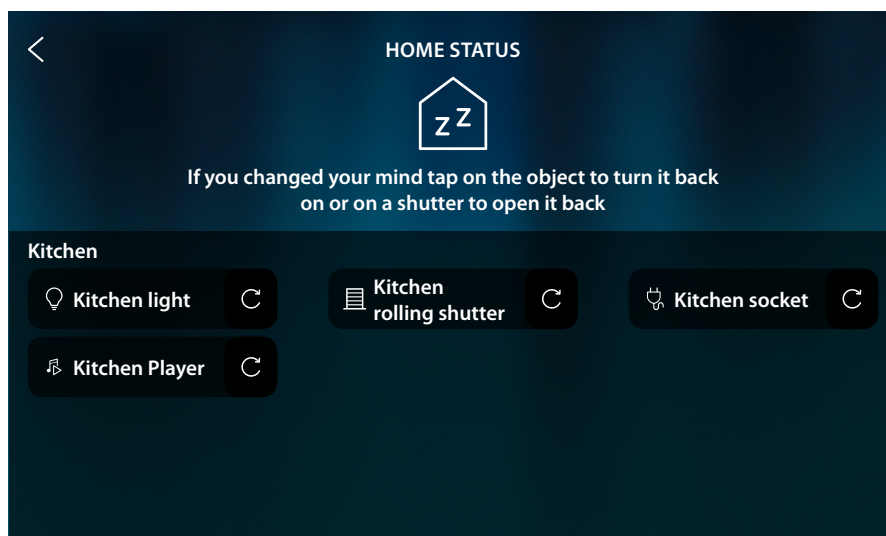

When the objects are switched off, their OFF commands disappear, but the objects remain available until the screen switches off.

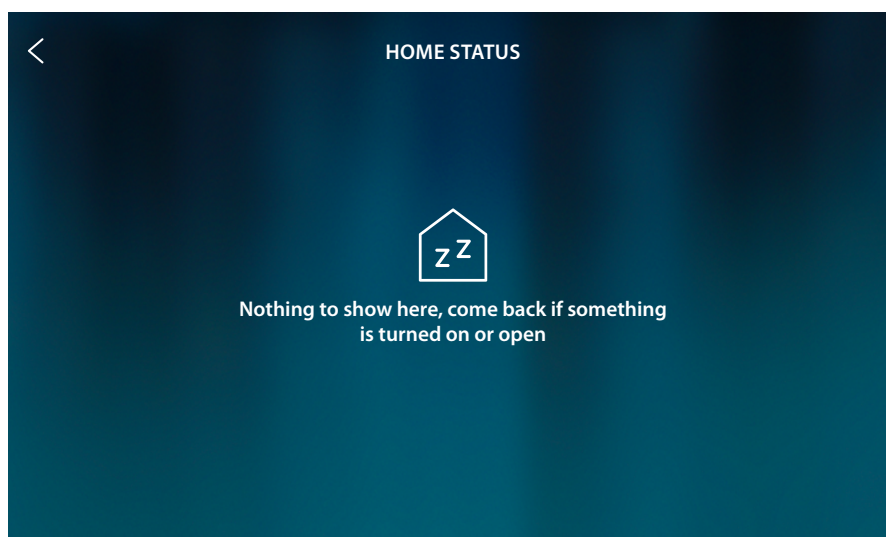

When the screen is switched off, the objects also disappears and the page becomes empty

Favourites

In addition to being available in the [Home Status](#) screen, the objects may also be added to the Favourites area, from where they can also be managed in a simpler way.


Once added to the Favourites area, the object is **always available**, and therefore it will always be possible to display its status and control the associated device.

In order to add objects to the Favourites area, HOMETOUCH needs to be correctly configured by the installer

The Favourites area also includes the fixed [Look Outside](#) and [Open Door](#) objects (they cannot be removed)

Note: in case of management of the video door entry system only, the “Look Outside” and “Open Door” objects are shown in the Home Page as areas


Add an object

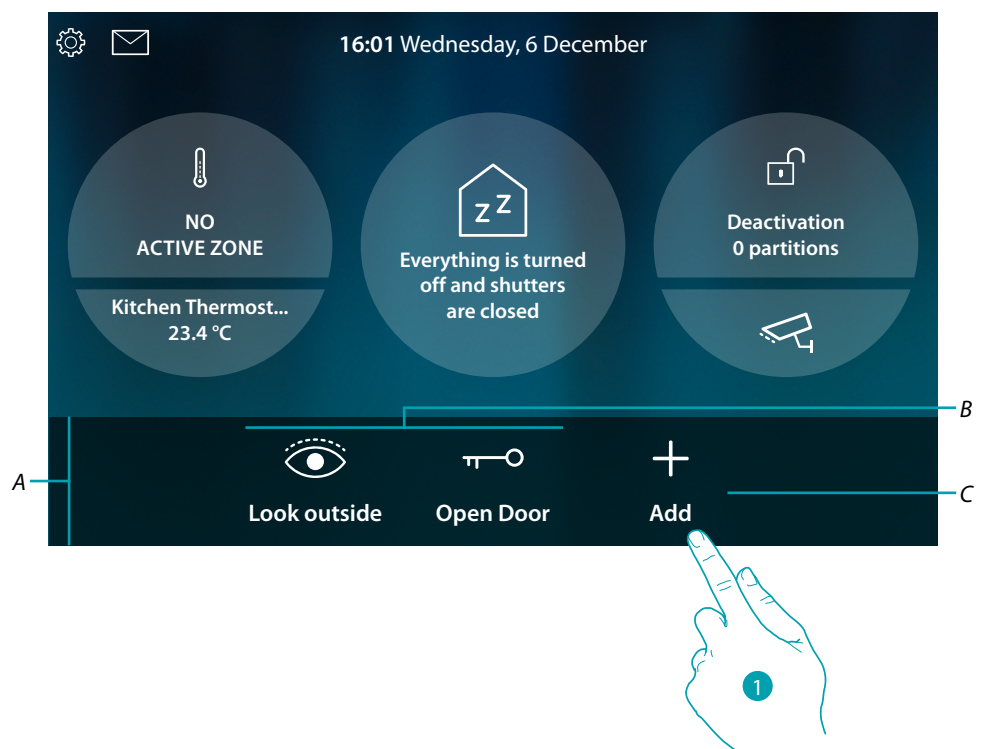

- A Favourites area
- B Fixed video door entry system objects
- C Add an object to the favourites
- 1. Touch to add an object


Home automation objects

This page includes the objects created in MyHOME_Up: Light, Rolling shutter, Player and Controlled socket.

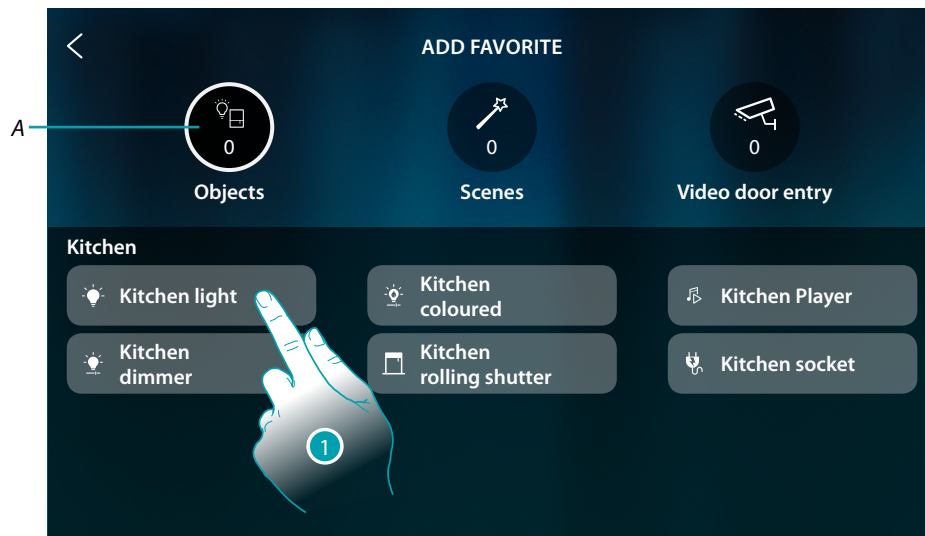

A Number of objects added to the Favourites area


1. Touch to add an object

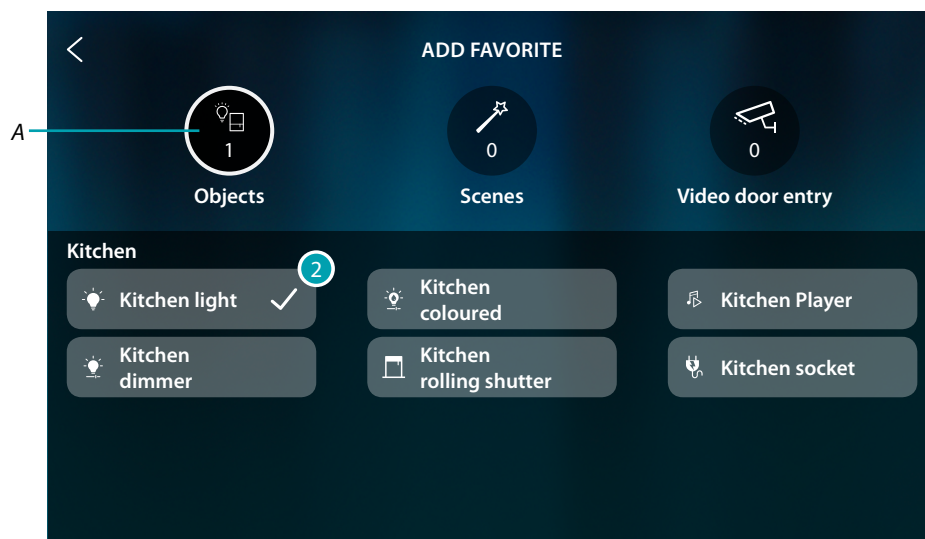


2. The tick indicates that the object has been added

Scenarios

This page includes the scenarios created with MyHOME_Up

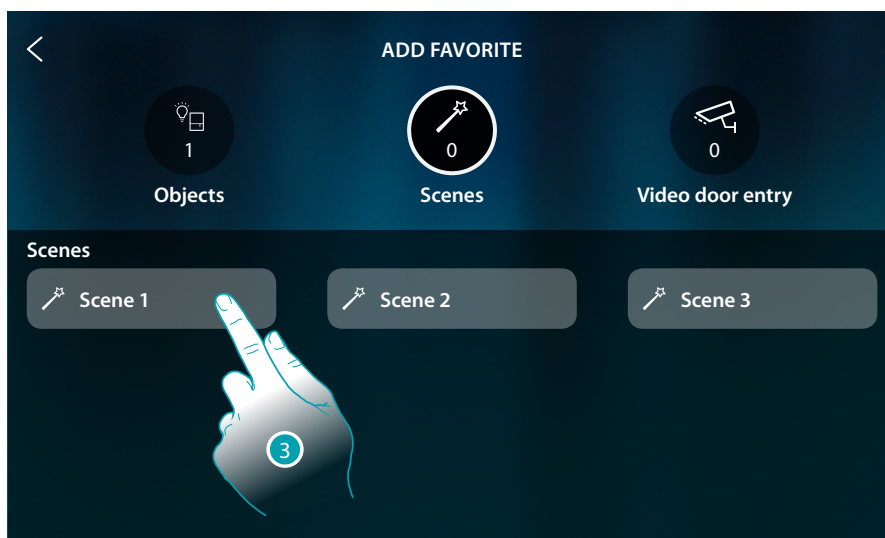


3. Touch to add a scenario

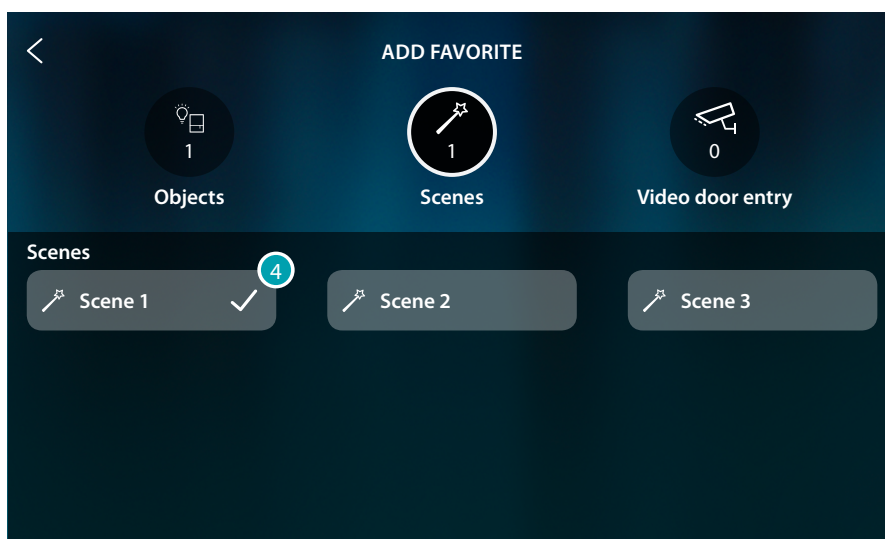


4. A tick indicates that the scenario has been added

Video door entry objects

This page includes the objects created and configured in the [Advanced settings/video door entry system](#) section: Commands, cameras and intercom

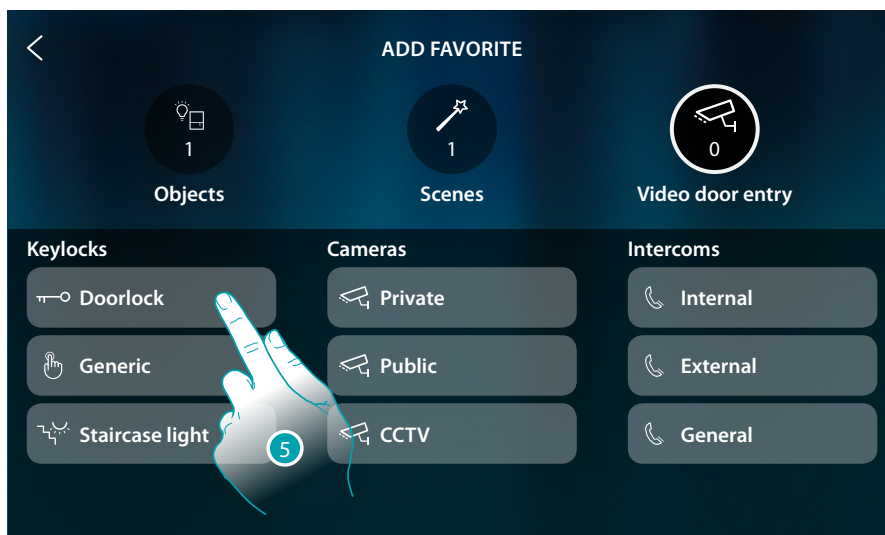

5. Touch to add an object

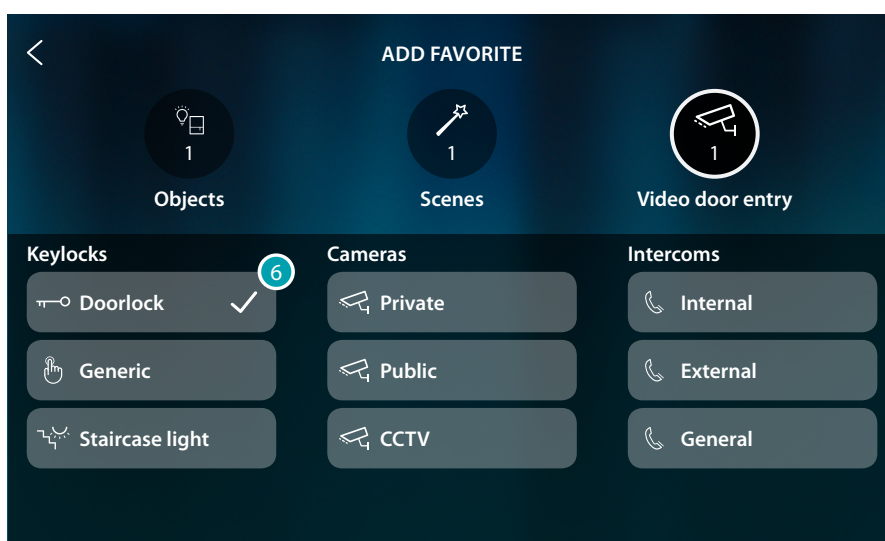


6. The tick indicates that the object has been added



Now the objects have been added to the Favourites area (see the [video door entry system functions](#) and [home automation functions](#) paragraphs to use them)

With more than five objects, an icon appears that allows you to display them all

7. Touch to open the page

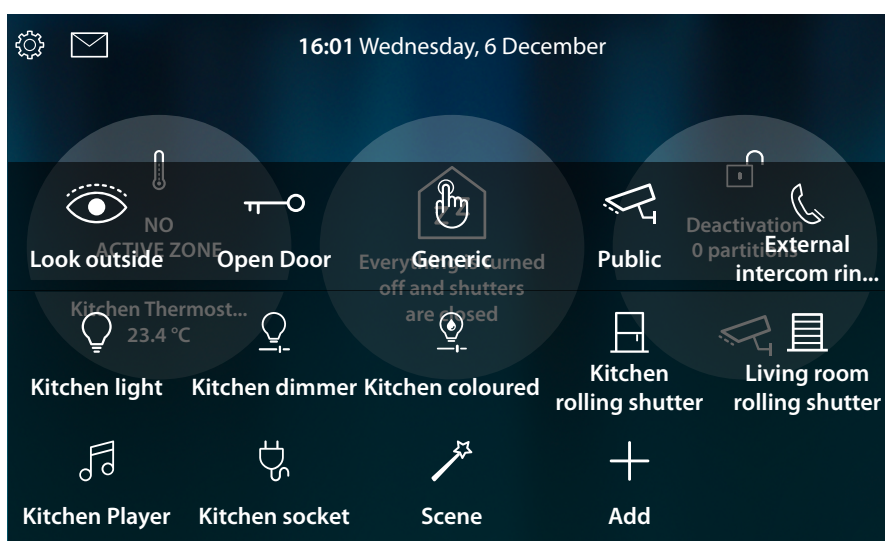

Move an object




1. Touch and keep an object pressed

Note: when pressing the "Look Outside" and "Open Door" objects, the procedure does not activate.



2. Drag the object to the desired position and release it
3. Touch a free area of the page to end the procedure

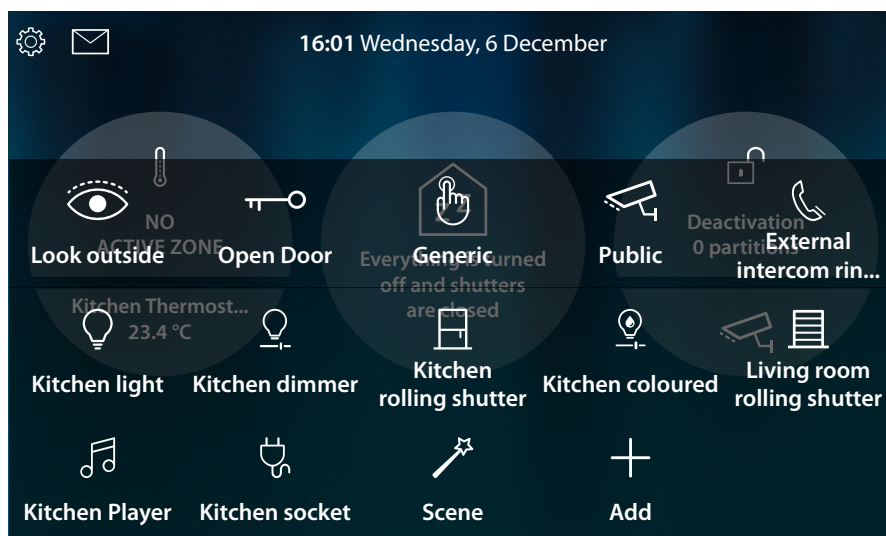

The object has been correctly moved

Note: the "Look Outside" and "Open Door" objects cannot be moved.

Delete an object




1. Touch and keep an object pressed

Note: when pressing the "Look Outside" and "Open Door" objects, the procedure does not activate.



2. Touch the icon to delete the object
3. Touch a free area of the page to end the procedure

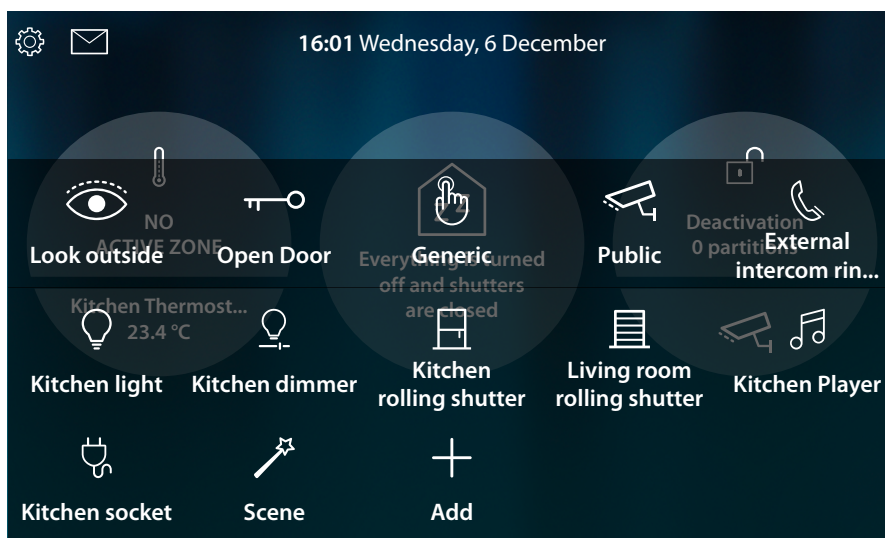









The object has been correctly deleted

Note: the "Look Outside" and "Open Door" objects cannot be removed.

Video door entry functions

If appropriately enabled (at the first switch on, or at a later stage in the [advanced settings/video door entry system section](#)), you will have available a number of video door entry system functions that will give you the possibility of communicating with Entrance Panels and Internal Units, display cameras and check the video answering machine.

You can use these functions [directly from the device](#) using the Home Page or Favourites area icons, or through the specific [DOOR ENTRY for HOMETOUCH App](#).

	Answer a call	In case of call from an Entrance Panel, this function gives you the possibility to display the images recorded and, if you want, enable the audio and answer the call.
 Look outside	Look outside (auto-switching on/scrolling)	This function gives you the possibility of displaying the images recorded from the camera of the Entrance Panel and display in sequence all the connected cameras.
 Open Door	Door lock opening	This function opens the associated Entrance Panel door lock
	CCTV	With this function it is possible to enable one of the video surveillance system cameras inside the apartment or the common areas (e.g. garages, garden).
	Events	In this page it is possible to display the audio/video messages of the video door entry answering machine and the system messages
 Staircase light 1	Commands	This function enables certain actuators (e.g. door locks, garden light, etc.) in your system.
 Private	Cameras	With this function it is possible to monitor your home by enabling one of the cameras inside the apartment, the common areas (e.g. garages, garden), and at the Entrance Panels.
 Internal	Intercom	With this function it is possible to communicate with other video/audio internal units installed in your home, or in other apartments.

Use of the functions from the device

Answer a call



When a call is received by an Entrance Panel, the LED turns flashing green and after a few seconds the image recorded by the Entrance Panel camera is displayed.

A Displays the other Entrance Panels and/or cameras in sequence ([cycling](#))


B Rejects/terminates the call

C Opens the Entrance Panel door lock

D Answers the call


E Image adjustment

1. If necessary, touch to open the image adjustment panel

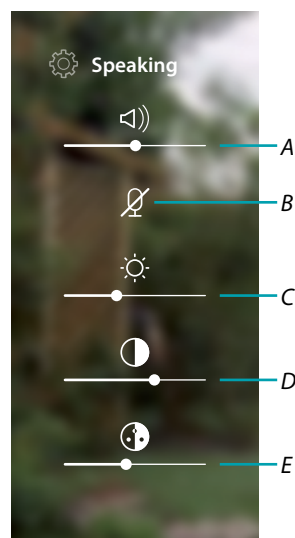


- A Adjusts the volume
- B Disables the microphone
- C Adjusts the image brightness
- D Adjusts the image contrast
- E Adjusts the image colour

Note: the functions and settings shown refer to a call from an audio/video Entrance Panel; some will not be available if the call is received from an audio only entrance panel.

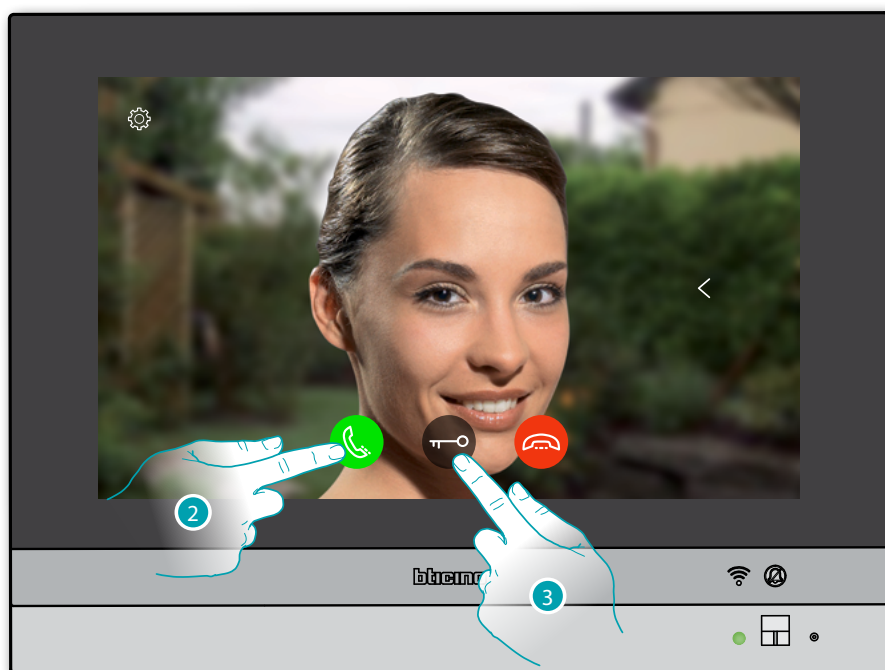

- 2. Touch to answer the call; the LED turns green steady
- 3. Touch to open the Entrance Panel door lock

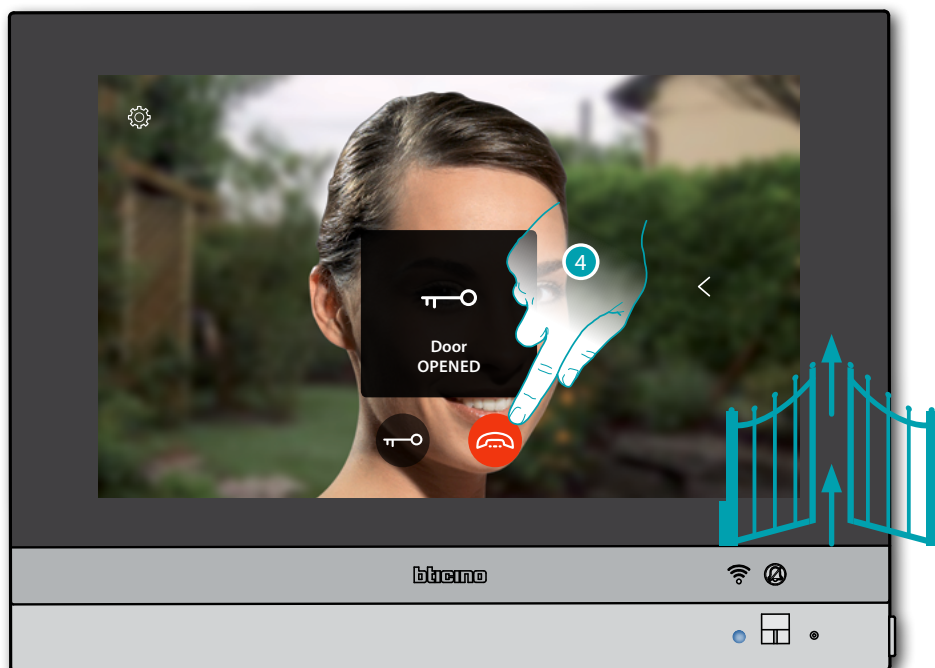

LED status: the steady blue colour and a message indicate that the door lock has been released

Note: the door lock can also be released without answering the call


4. Touch to end the call

Look (auto-switching on/scrolling)


This function gives the possibility of viewing the images recorded by the associated Entrance Panel camera, and to scroll through the various connected cameras and/or Entrance Panels. It is also possible to activate the audio communication, which as a standard is disabled.




1. Touch to display the images recorded by the Entrance Panel camera

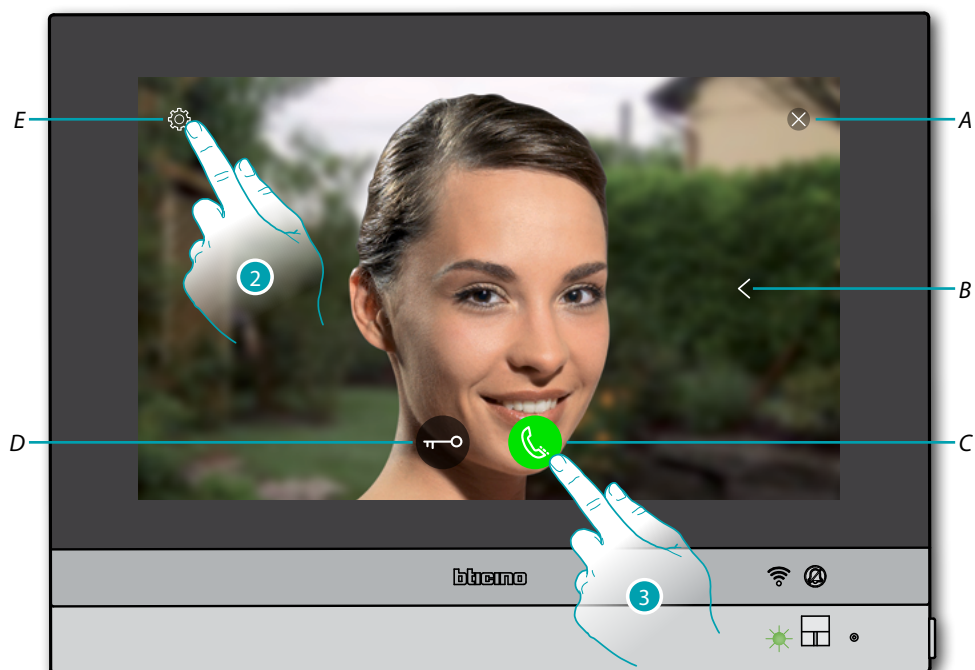

- A Closes the connection
 - B Displays the other Entrance Panels and/or cameras in sequence ([cycling](#))
 - C Activates the audio communication
 - D Opens the Entrance Panel door lock
 - E Image adjustment
- LED status: flashing green**
2. If necessary, touch to [adjust the image parameters](#)
 3. Touch to activate the audio communication with the Entrance Panel

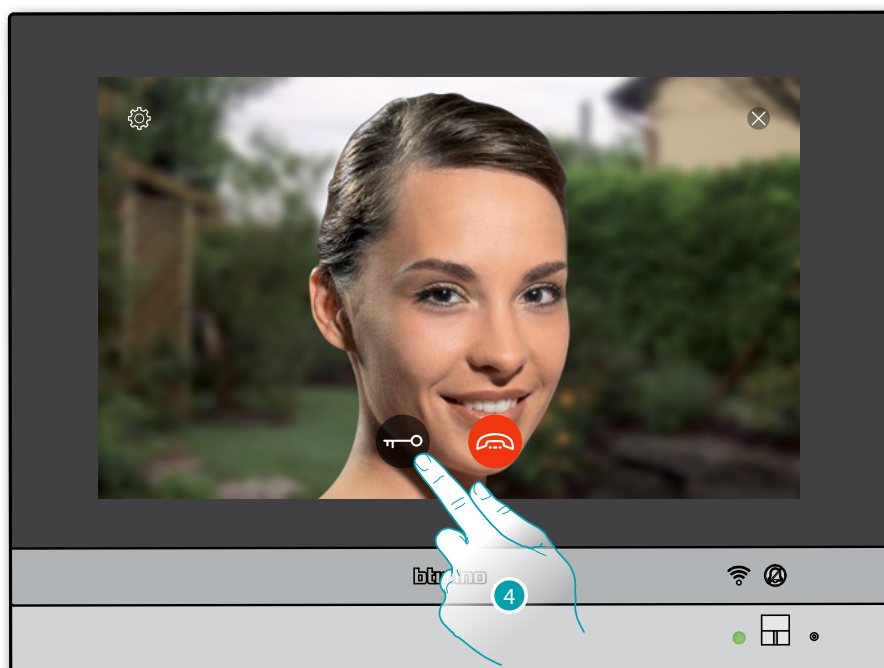


- LED status: fixed green**
4. Touch to activate the Entrance Panel door lock

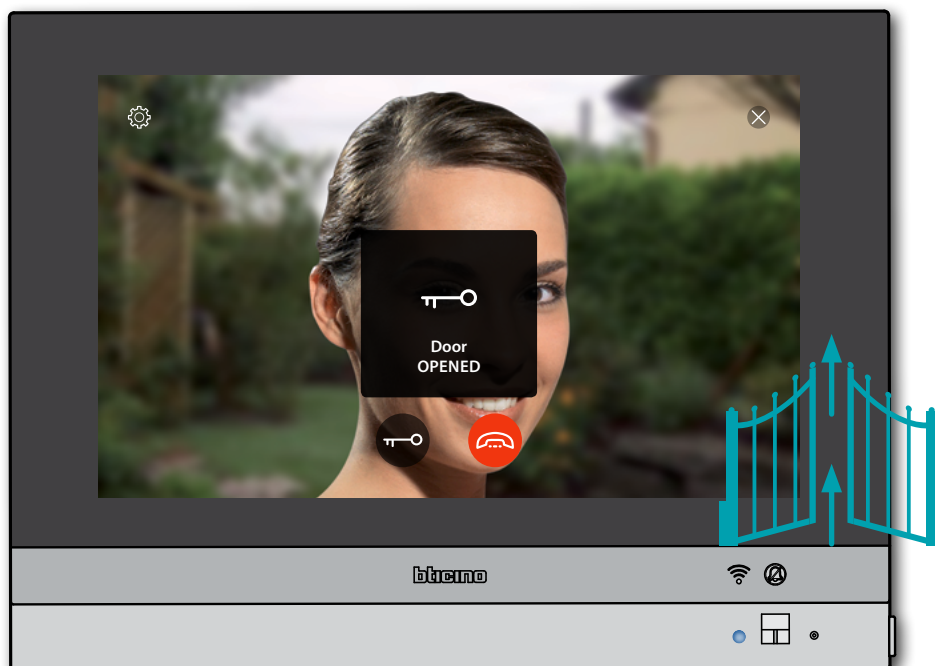

LED status: the steady blue colour and a message indicate that the door lock has been released

Note: the door lock can also be released without activating the audio communication

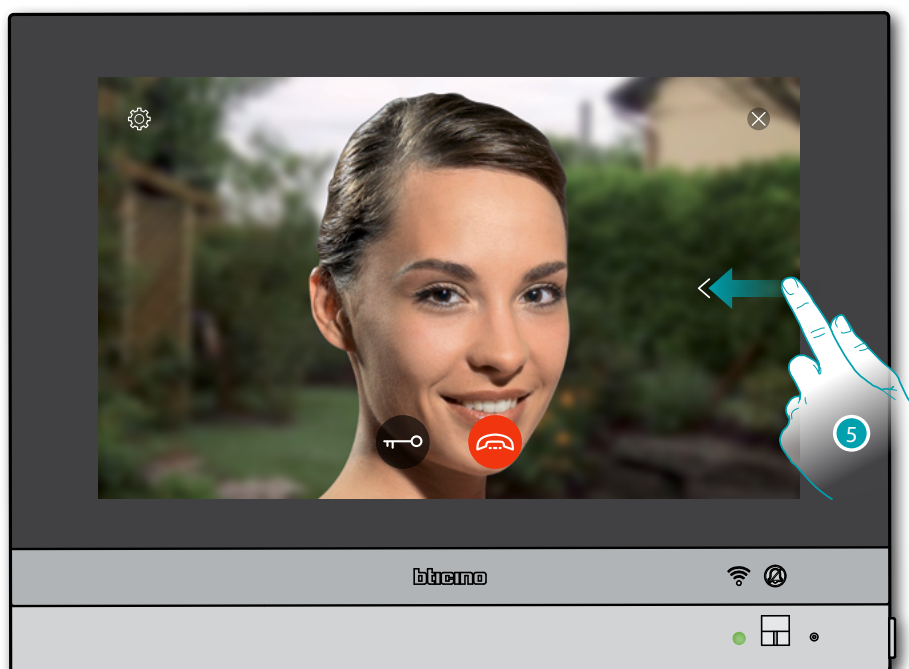

5. Touch or scroll to display another camera (cycling)



Note: audio communication remains active also when switching cameras; switching from one camera to another is also possible without enabling the audio


6. Touch to end the audio and video communication

Door lock release

This function opens the associated Entrance Panel door lock



1. Touch to send the command

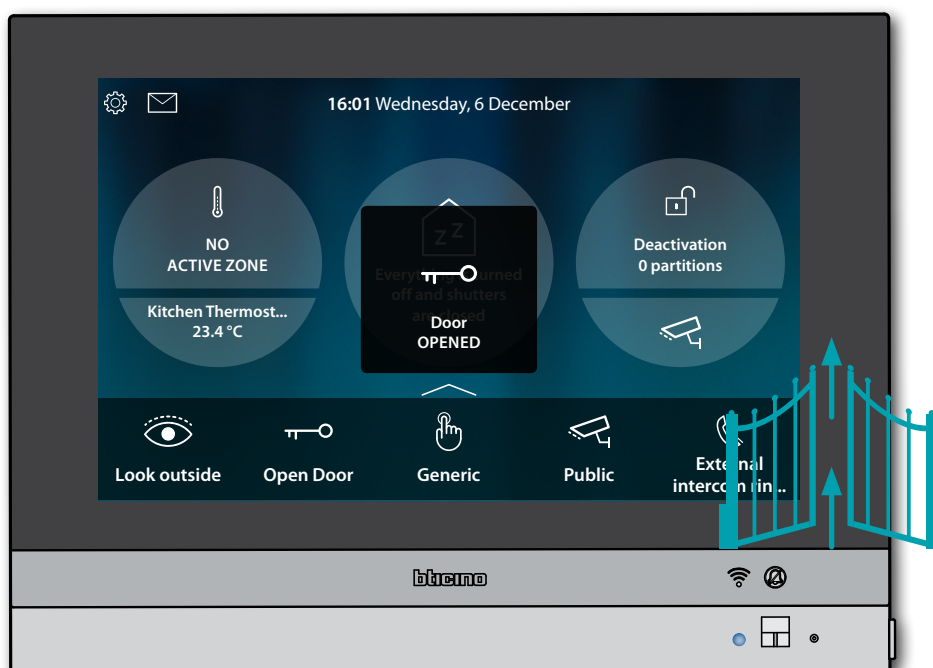


LED status: the steady blue colour and a message indicate that the door lock has been released

CCTV

This section can be used to monitor your home by enabling one of the video surveillance system cameras inside the apartment or the common areas (e.g. garages, garden).



1. Touch to display the cameras in your system

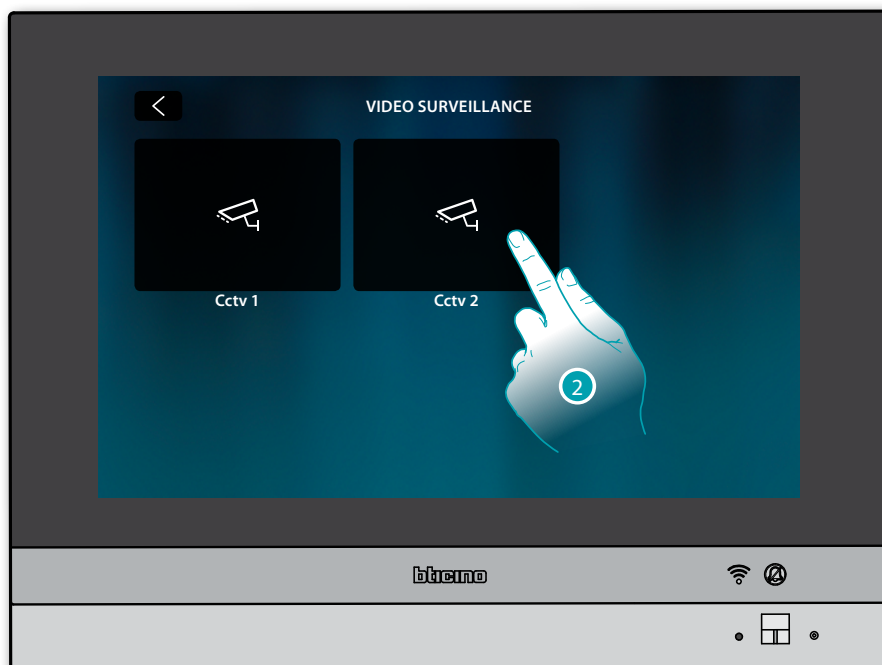

2. Touch to activate the desired camera



A Image adjustment

B Stops camera display


The image is displayed for three minutes.

The camera cycling function is not included

Note: for the camera cycling or multi-vision function, a device performing these functions must be installed (e.g. Digital Video Recorder).

For more information contact your installer.

Image adjustment

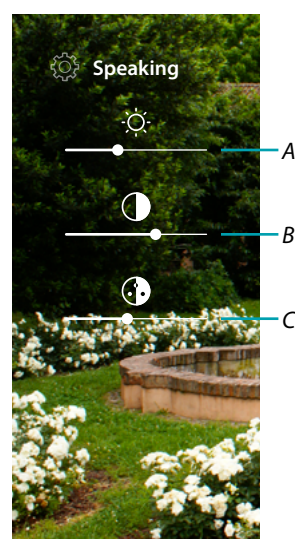

A Adjusts the image brightness

B Adjusts the image contrast

C Adjusts the image colour


Events

In this page it is possible to display the audio/video messages of the [video door entry answering machine](#) and the [system messages](#).

If there are new messages recorded on the answering machine or, for example, a system message indicating that a software update is available, a visual notification (A) appears on the event icon and the LED (B) becomes white steady.



1. Touch to open the events section and display the messages

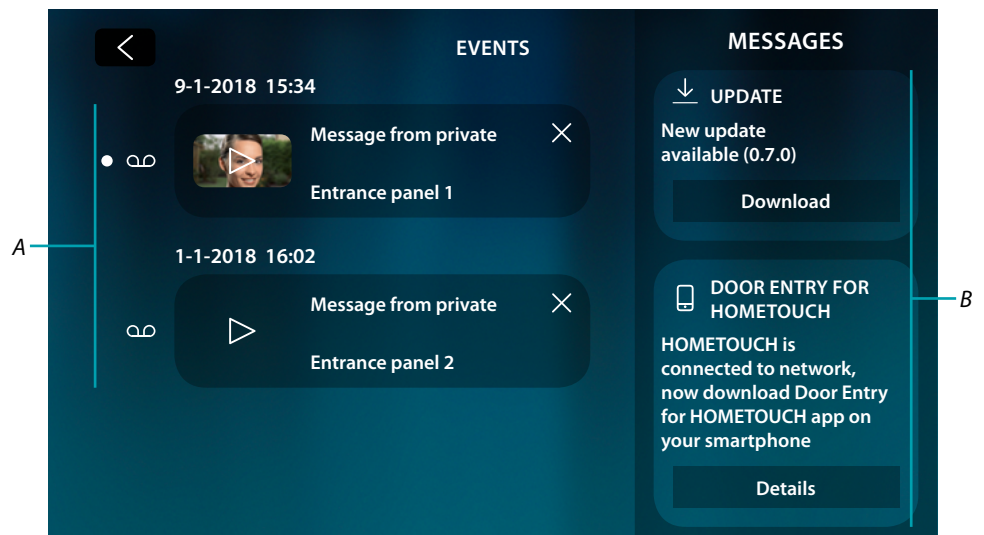


A Audio/video messages of the [video door entry answering machine](#)

B [System messages](#)

Answering machine


In this page it is possible to display any Entrance Panel audio/video messages recorded in your absence.

To activate the function and set the other parameters (recording quality and welcome message), see the [Settings/answering machine](#) section.

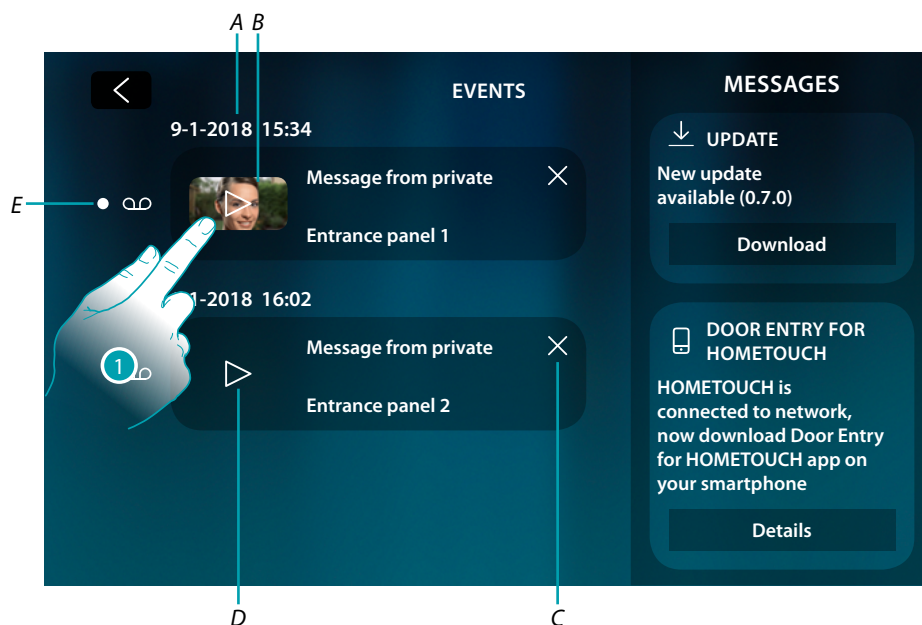

- A Date/time of recording
- B Video message (with image and preview)
- C Removes the message (the message is removed immediately without confirmation)
- D Audio message
- E Message not read indicator (after reading the message the indicator disappears)
- 1. Touch to display the message

The message is played back automatically

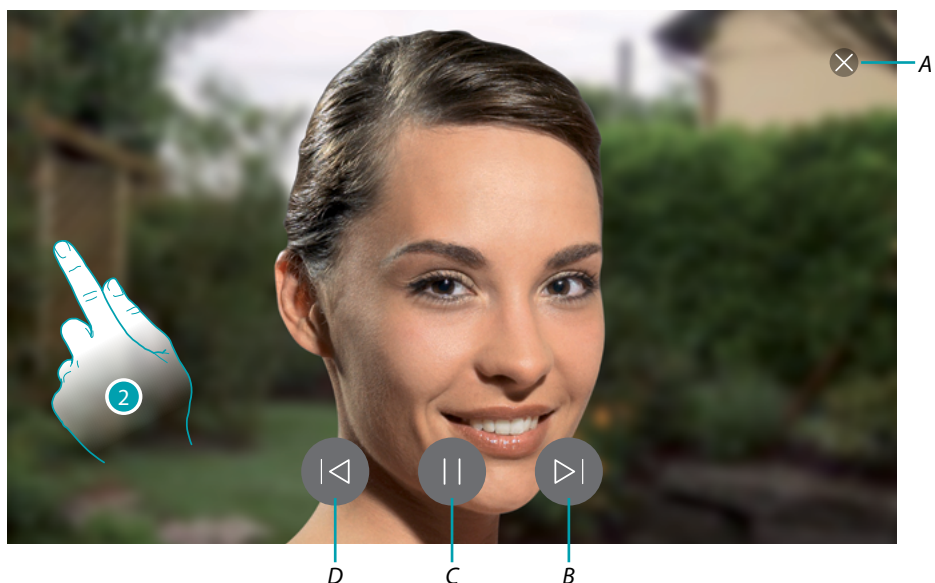

A Closes the message

B Plays the next message

C Stops/plays a message

D Plays the previous message

2. If necessary, touch/scroll to open the audio adjustment panel




A Adjusts the volume

System messages


In this page it is possible to display any system messages, which can be of two types:

- Available firmware download message (A)
- Message confirming the connection to the network and the App download page (B)

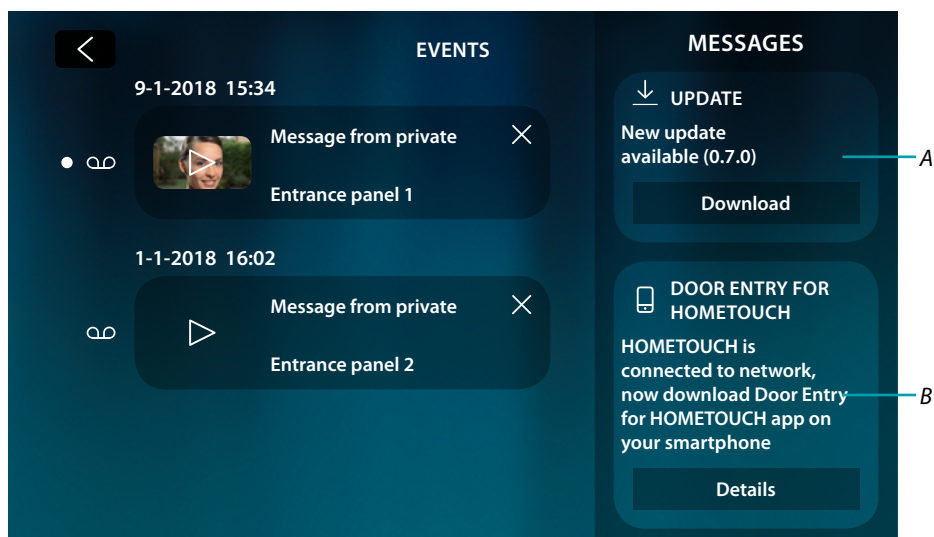


Available firmware download message

When a new firmware update is available, the system sends you a notification message. You can then download and install the firmware from this position, or directly from the [Settings/check for updates](#) section.

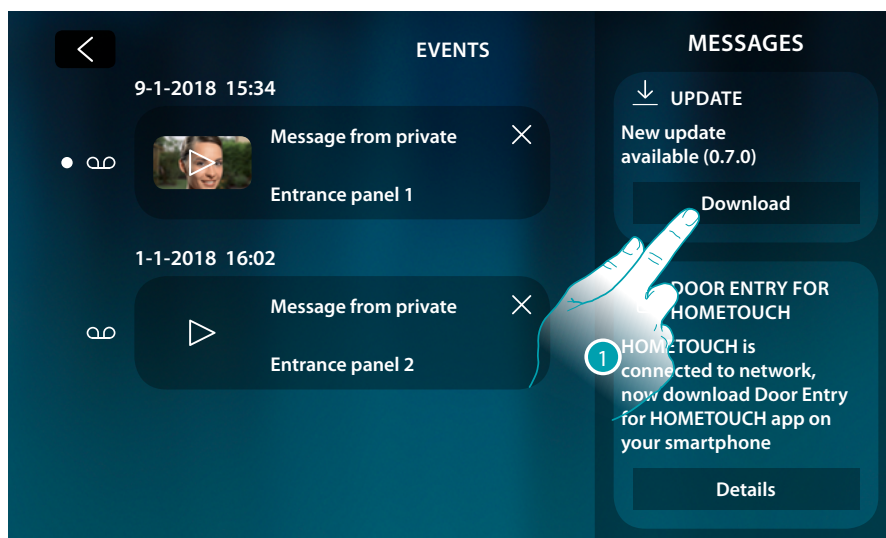


1. Touch to start the firmware update procedure (download + installation)

If the device is left unattended and the screen switches off, at the end of the download the device automatically restarts and at the next access the screen shows a message (2) reminding the user to complete the procedure by installing the firmware

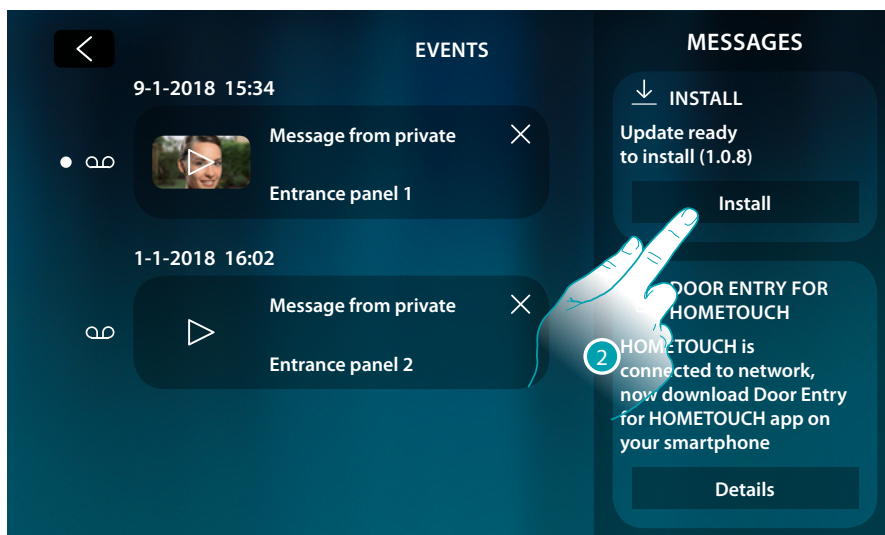

Message confirming the connection to the network and the App download page

After successfully establishing the connection to the home network, the system notifies that it is possible to download the DOOR ENTRY for HOMETOUCH App on your smartphone.

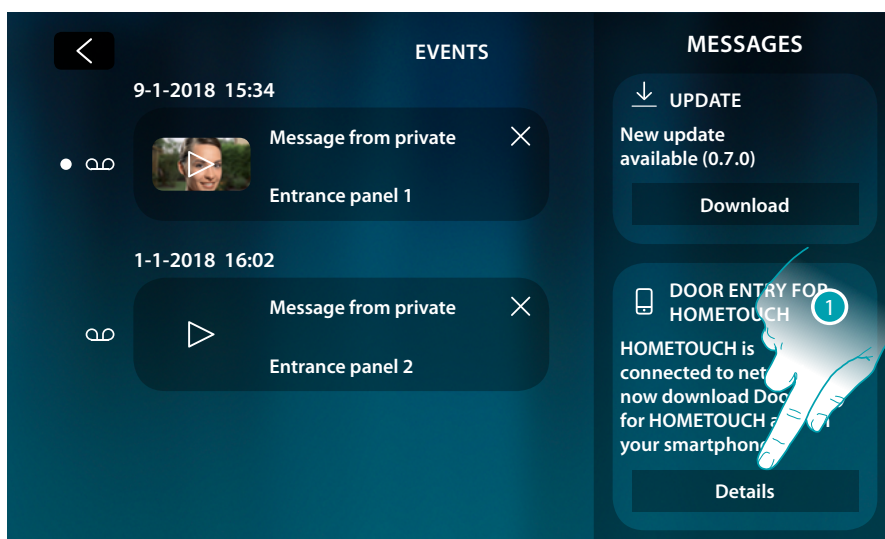


1. Touch to open the App download page



Point to the QR code with your smartphone to frame it, download the App from the specific store and then complete the procedure for [association](#) with the device.

2. Touch to return to the previous page

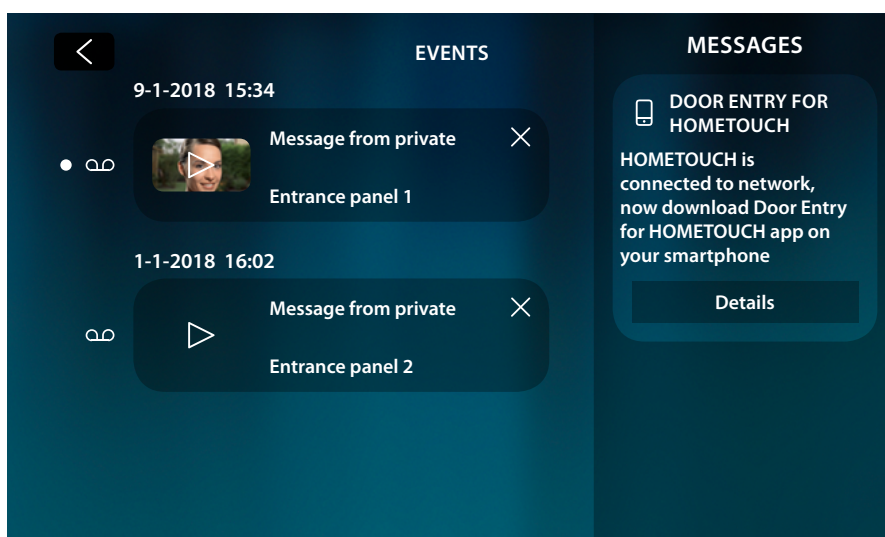


The App download message will be displayed until the association with the device has been completed successfully.

Commands


The Favourites area shows any previously added command group objects. These objects enable certain actuators (e.g. door locks, garden light, etc.) in your system.



Door lock: sends a command to open a door lock of your system

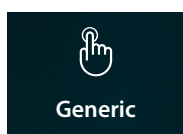

General: sends a command, for example to switch the garden light on

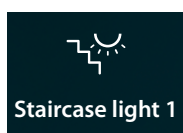

Staircase light: sends a command to switch the staircase light on

Note: in order to be able to add them to the Favourites area, commands must first be configured in the [Advanced settings/video door entry system/commands](#) section



1. Touch to send the command




LED status: the steady blue colour (Door lock and General only) and a message indicate that the command has been executed


Cameras

The Favourites area shows any previously added camera group objects. These objects monitor your home by enabling one make it possible cameras inside the apartment, the common areas (e.g. garages, garden), and at the Entrance Panels. After enabling a camera, it is possible to "scroll" (display in sequence) the other cameras.

Note: if the system has an audio Entrance Panel, this is still displayed in the sequence, but it will only be possible to activate the audio and release the door lock

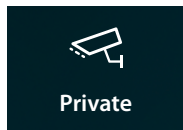

Private: it gives the possibility of displaying the images from a Camera/ Entrance Panel installed in the own apartment

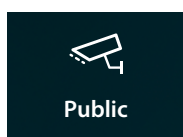

Public: displays the images from a camera/Entrance Panel installed in a common area, visible to all residents



CCTV: displays the images from a camera of a video video surveillance system integrated with the video door entry SCS system, see section [CCTV](#)


Note: in order to be able to add them to the Favourites area, the camera objects must first be configured in the [Advanced settings/video door entry system/cameras](#) section



1. Touch to display the camera

The icons that appear and the corresponding available functions depend on the type of device connected.

The example shown is for an audio and video Entrance Panel.

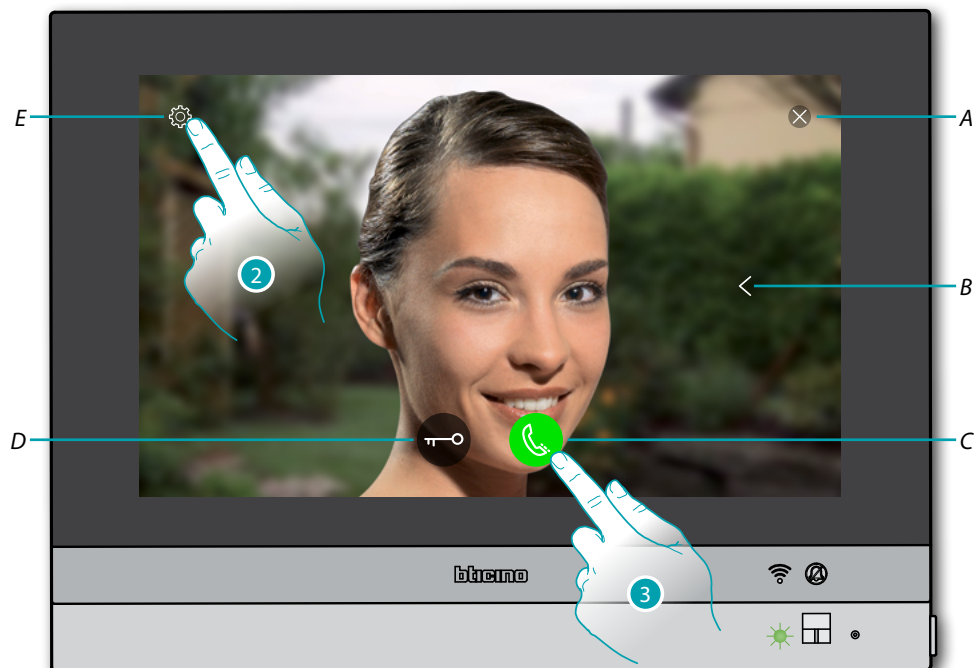

A Closes the connection

B Displays the other Entrance Panels and/or cameras in sequence ([cycling](#))

C Activates the audio communication


D Opens the Entrance Panel door lock

E Image adjustment

LED status: flashing green


2. If necessary, touch to [adjust the image parameters](#)

3. Touch to activate the audio communication with the Entrance Panel

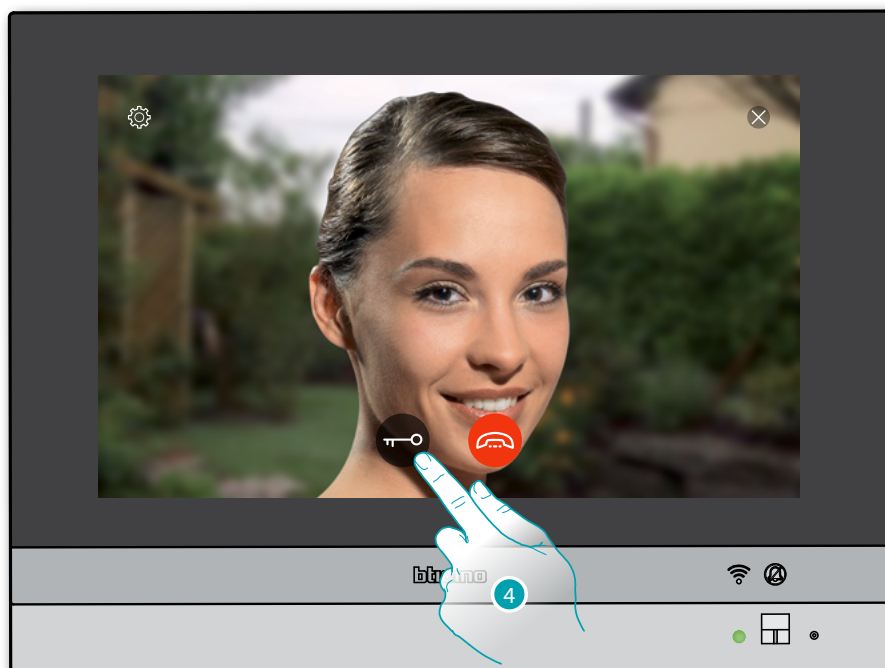


LED status: fixed green

4. Touch to activate the Entrance Panel door lock

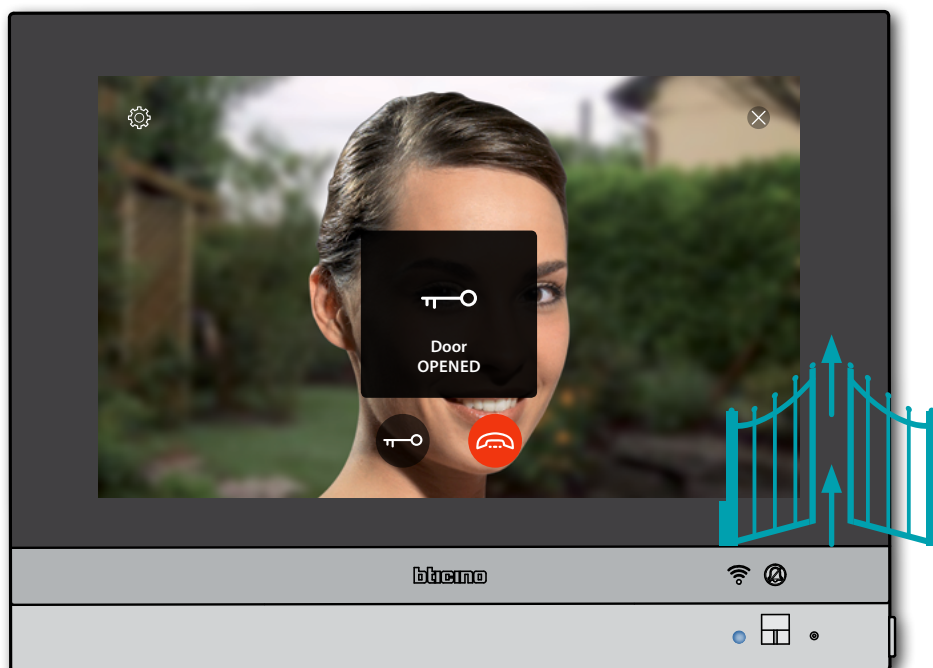


LED status: the steady blue colour and a message indicate that the door lock has been released

Note: the door lock can also be released without activating the audio communication

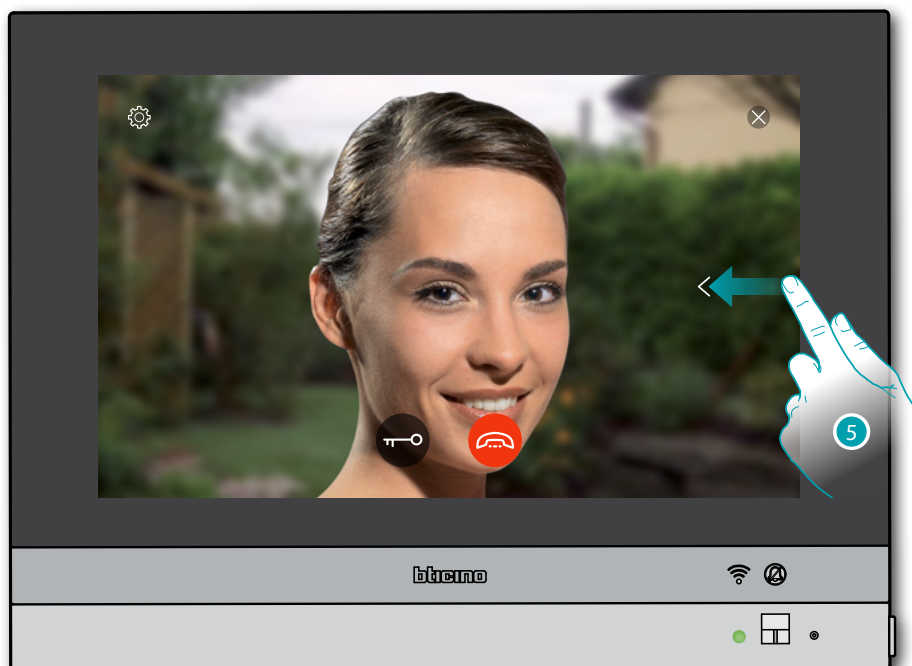

5. Touch or scroll to display another camera (cycling)

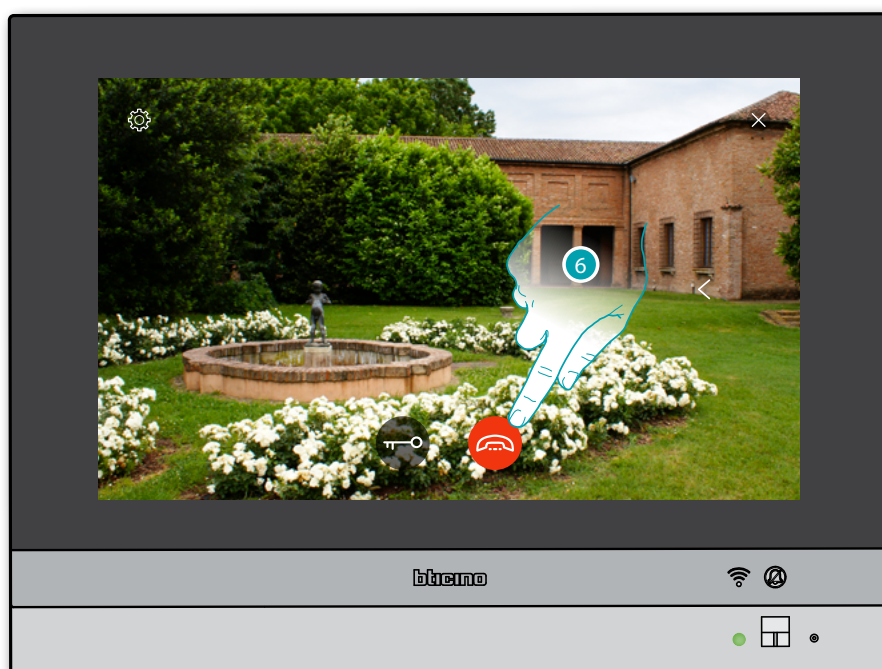


Note: audio communication remains active also when switching cameras; switching from one camera to another is also possible without enabling the audio

6. Touch to end the audio and video communication


Intercom

The Favourites area shows any previously added intercom group objects.


These objects communicate with other video/audio internal units installed in your home, or in other apartments.

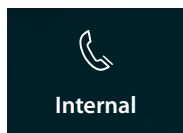

Internal: it enables the communication among rooms of the same apartment

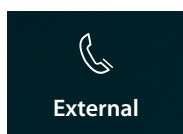

External: it enables the communication among rooms of different apartments

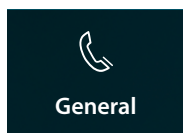


General: it enables the communication with all Internal Units


Note: in order to be able to add them to the Favourites area, the intercom objects must first be configured in the [Advanced settings/video door entry system/intercom](#) section



1. Touch to activate the intercom with the desired Internal Unit

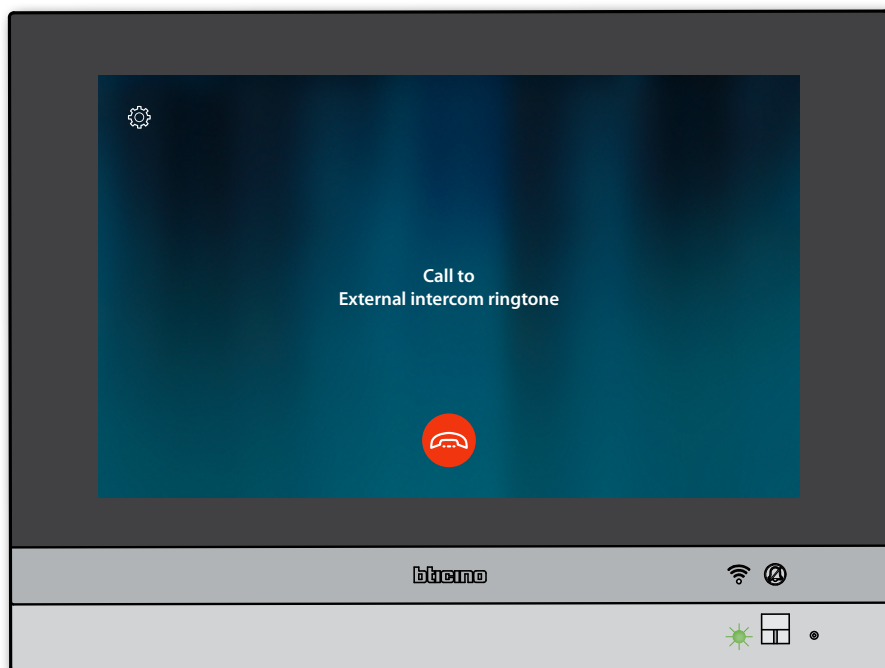

The LED turns flashing green and the display shows the Internal Unit communication screen

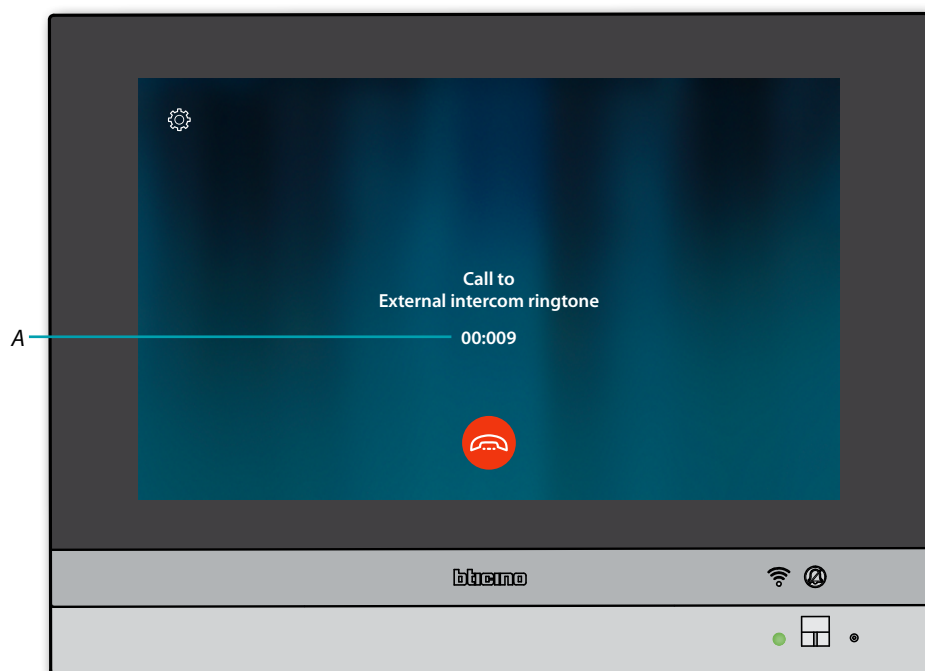


When the called extension answers, the duration of the call is displayed (A) and the LED turns green steady

Note: When a call is received from the Entrance Panel while the internal unit is in "intercom" mode, the system follows the priority rules and ends the active call.



2. If necessary, touch to open the audio adjustment panel

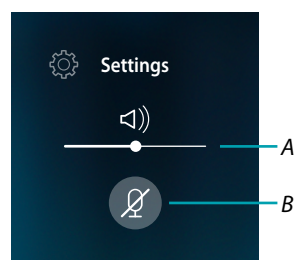

- A Adjusts the volume*
 - B Disables the microphone*
3. Touch to end the communication

Use of the functions from Door Entry for HOMETOUCH App

Introduction

You can interact with your HOMETOUCH using the free Door Entry for HOMETOUCH App. After [registering](#) and [authenticating](#), you must make the [association with the device](#); at this point you can:

- answer a video door entry call from the Entrance Panel;
- CALL HOME (call your HOMETOUCH)
- display the images from the entrance panels and cameras;
- open the door lock of the Entrance Panels;
- activate generic actuators wired on the system;
- update the firmware of your HOMETOUCH.
- enable the video answering function and display the audio/video messages recorded from the Entrance Panel.



To download the Door Entry for HOMETOUCH App (for iOS devices from App Store, for Android devices from Play Store), scan the QR Code with your smartphone:




You can find the same QR code in the [App download](#) page.

Account registration


You must first register to be able to use the Door Entry for HOMETOUCH App and thus use the interface functions with your HOMETOUCH.

After opening the App follow the registration instructions: when the account has been created it will be common to all the connected Legrand/BTicino device App

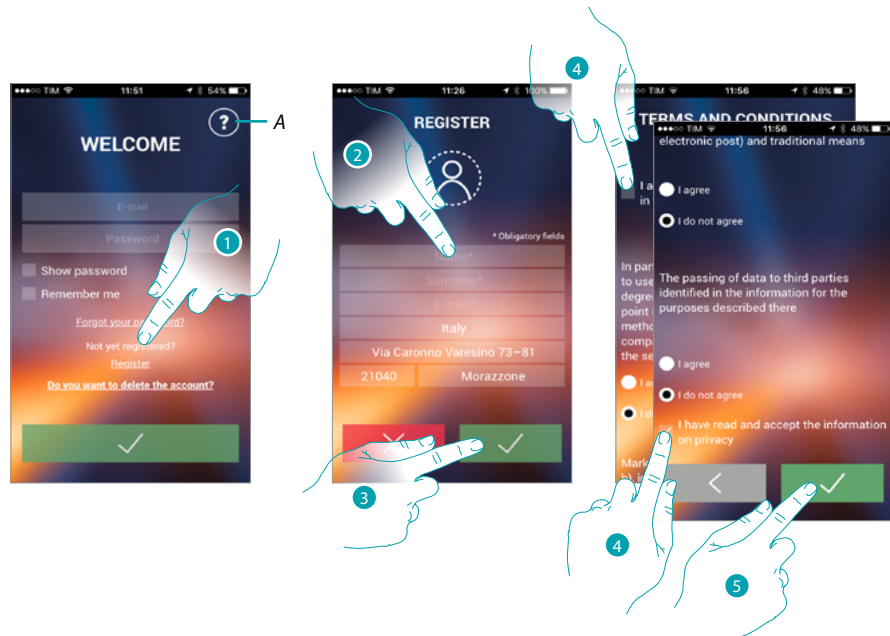


A. Open the contacts page with various references for assistance.

1. Touch to register and create an account
2. Enter your data
3. Touch to confirm
4. Tick to accept the terms and conditions of use laid down in the associated text (obligatory)
5. Touch to continue

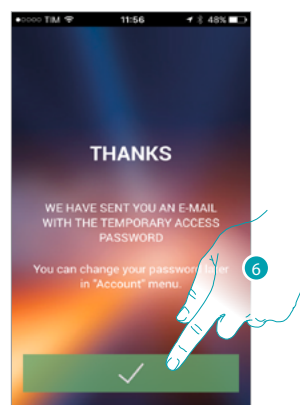

6. Touch to end the procedure

After confirming, the system will send the data (temporary password) to the email address indicated by you in the registration phase for the first access

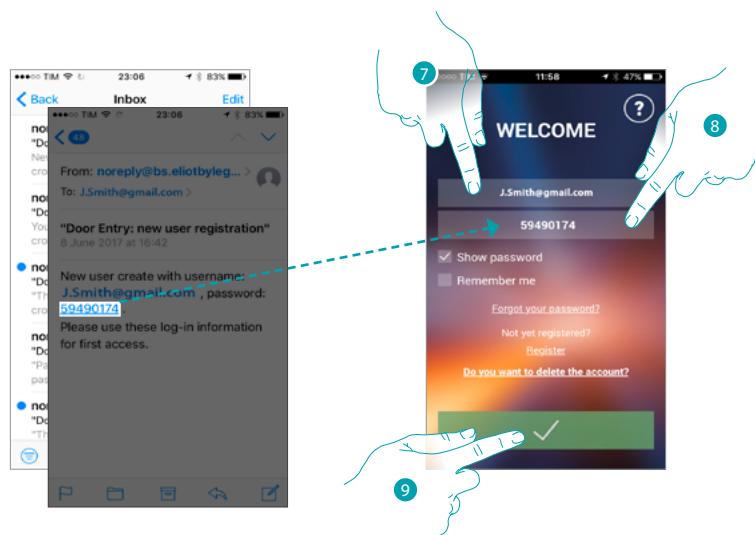


7. Enter the e-mail

8. Enter the temporary password sent to you via email

9. Touch to make the login

For safety reasons you will be asked to change the temporary password for a customised one

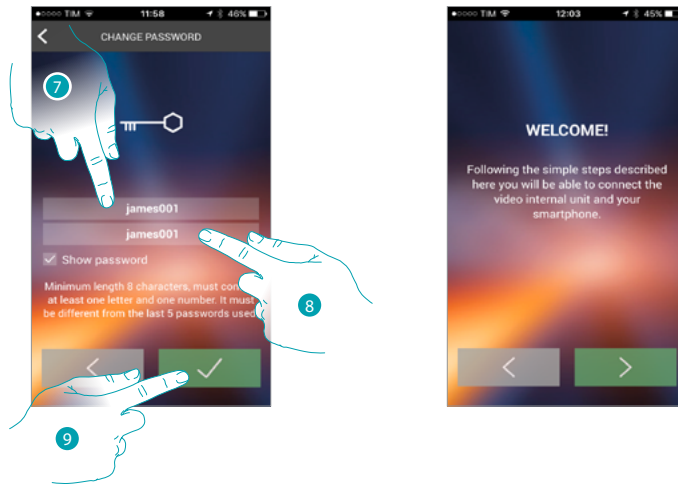

7. For security reasons enter a new password with these features:
 - minimum length 8 characters;
 - must contain at least one letter and one number;
 - it must be different from the last 5 passwords used.
8. Enter the password again
9. Touch to confirm. If the modification has been successful you will receive a confirmation email

At this point the system will show you a tutorial to help you [associate your HOMETOUCH to the Door Entry for HOMETOUCH App](#)

Note: if your HOMETOUCH is already associated and you want to add another user who can also use the same functions, you must invite him using the [procedure](#) directly from your smartphone. You can use the same account on several smartphones simultaneously.

Authentication

After registering with the portal, you can authenticate by entering email and password




- A. Touch to start the password recovery procedure
 - B. Touch to create a new account
 - C. Touch to start the account deletion procedure.
Account deletion cannot be reversed and is common to all the connected Legrand/BTicino device App
 - D. Tick the box to access subsequently without having to repeat the authentication
 - E. Touch to make the password visible
1. Enter email and password
 2. Touch to access


Note: after three failed access attempts (wrong password) in an hour, the system blocks the account for 15 minutes.

Forgotten password

When you have forgotten the password:

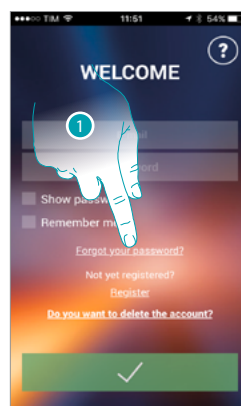


1. Touch to activate the password recovery procedure

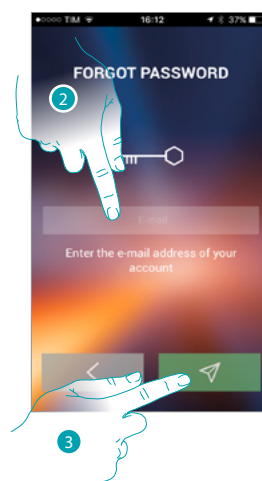


2. Enter the email address linked to your account to which the new password will be sent
3. Touch to zero the password and quit the procedure

Now your account password has been reset and a new password which you can use to access the Door Entry for HOMETOUCH App has been sent to the email address entered in point 2.

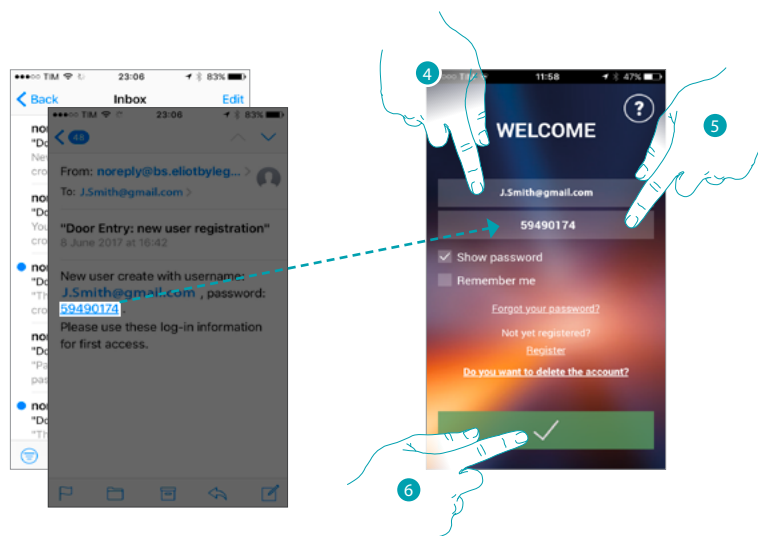


4. Enter the e-mail
5. Enter the temporary password sent to you via email
6. Touch to make the login

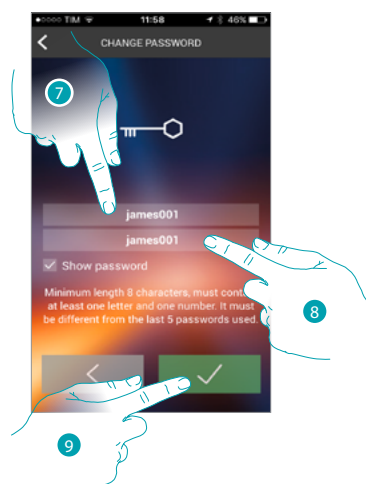


7. For security reasons enter a new password with these features:
 - minimum length 8 characters;
 - must contain at least one letter and one number;
 - it must be different from the last 5 passwords used.
8. Enter the password again
9. Touch to confirm. If the modification has been successful you will receive a confirmation email

Account cancellation


You can delete an account using the procedure

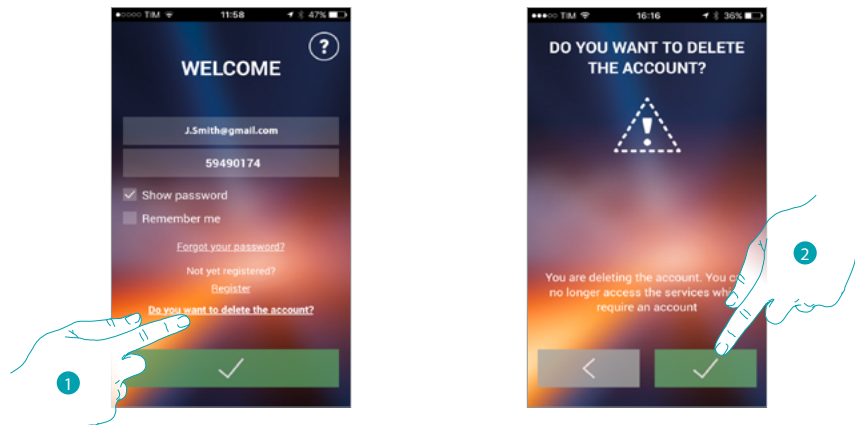

1. Touch to start the procedure
2. Touch to continue

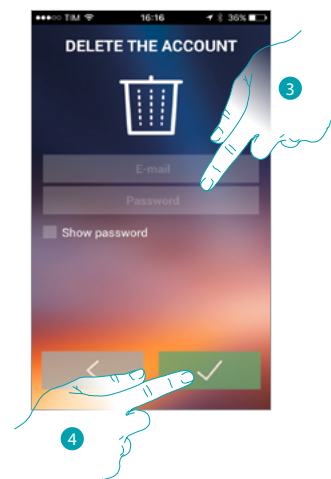

3. Enter e-mail address and password of the account to delete
4. Touch to confirm. Remember that when the procedure is complete your account will be definitively cancelled

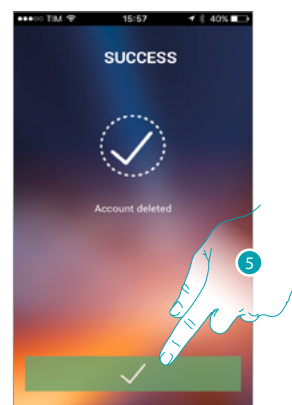

5. Touch to end

Note: the account is common to all the Apps of the Legrand/BTicino connected devices. If it is modified or deleted you will no longer have access to all the connected devices.

Association of the device


After registering and authenticating for the first time (the first smartphone) you will be shown a tutorial. Follow this to associate your account to the HOMETOUCH.

Note: the HOMETOUCH must be connected to the same Wi-Fi network as the smartphone on which the Door Entry for HOMETOUCH App is connected.


If this operation has been successful it is only necessary on the first access and allows you to activate the connection between the two devices.

You can also invite other users so that they can use the connected HOMETOUCH functions.

To make the association first [connect your HOMETOUCH to a Wi-Fi network](#)

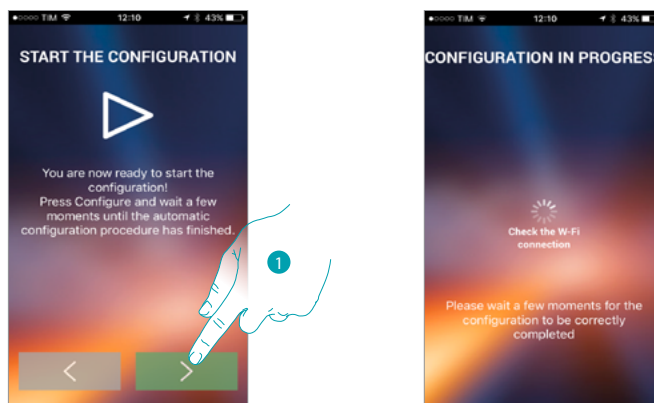

1. Touch to start the procedure.

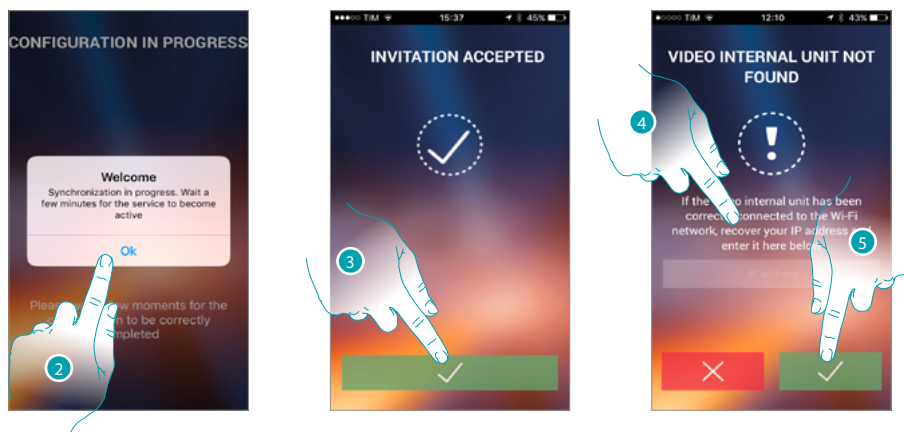

2. Touch to confirm.
3. Touch to end the procedure and go to the Home Page.


When you cannot find the HOMETOUCH in network in automatic mode a screen appears where you enter the HOMETOUCH [IP address](#) manually.

4. Enter the IP address of the HOMETOUCH.
5. Touch to start the procedure.

Home page

After being [authenticated](#), from this page you can interact with your HOMETOUCH and with the video door entry system.

You can also make various settings via the pull-down menu.

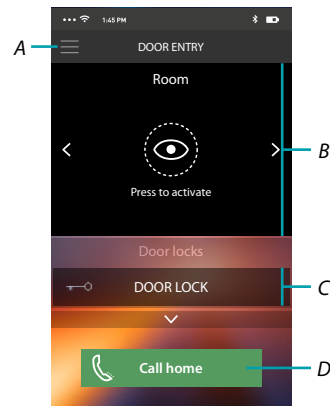


- A. Retractable menu.
- B. Selection and display the cameras or Entrance Panels.
- C. Door lock activation.
- D. Call your HOMETOUCH.

Note: the Door Entry for HOMETOUCH App operation with screen off (background) may be compromised by the applications installed on the smartphone that:


- optimise the use of the battery and the energy saving;
- protect the device (antivirus or similar programs)

Display the cameras or Entrance Panels


By means of this function you can display the cameras and Entrance Panels configured on the HOMETOUCH by your installer.

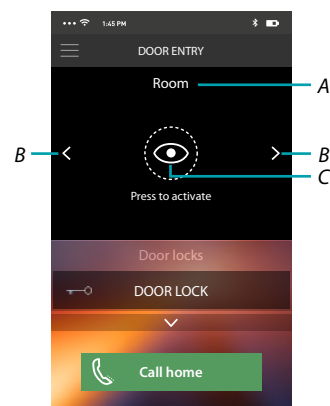

- A. Name of camera or Entrance Panel.
- B. Scroll the cameras or Entrance Panels.
- C. Display the camera or Entrance Panel.

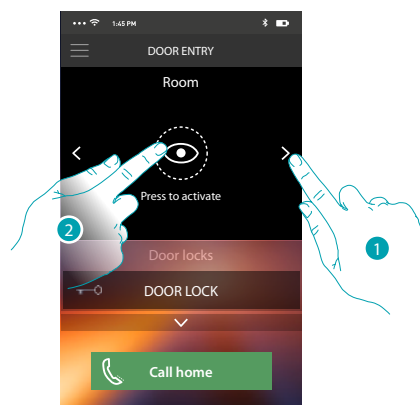

1. Select the desired camera or Entrance Panel.
2. Touch to display.

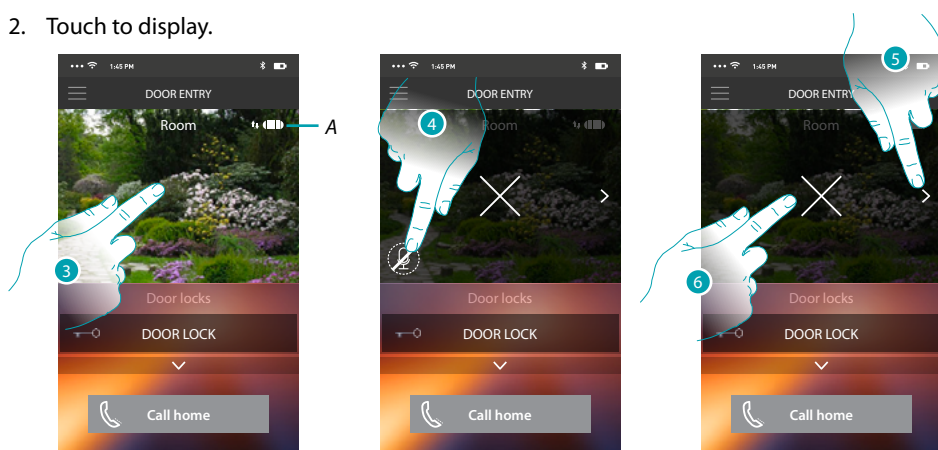

- A. Call quality indicator: indicates if the conditions are good enough (Cloud, Wi-Fi and 3G/4G connection) for the communication.



Good quality




Average quality



Poor quality


3. Touch to make the management keys appear
 4. Touch to activate the microphone and communicate with the Entrance Panel.
 5. Touch to cycle to the next camera.
 6. Touch to stop the image capturing
- On turning the smartphone horizontally, you can activate just the displayed Entrance Panel door lock.

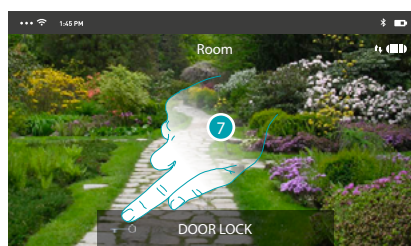

7. Drag to the right to activate the door lock.

Open door locks


By means of this function you can open the door locks of the Entrance Panels configured on the device by your installer.

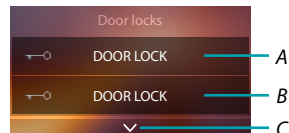

A. Door lock of the associated Entrance Panel.

B. Door locks.

C. Display other door locks if present.

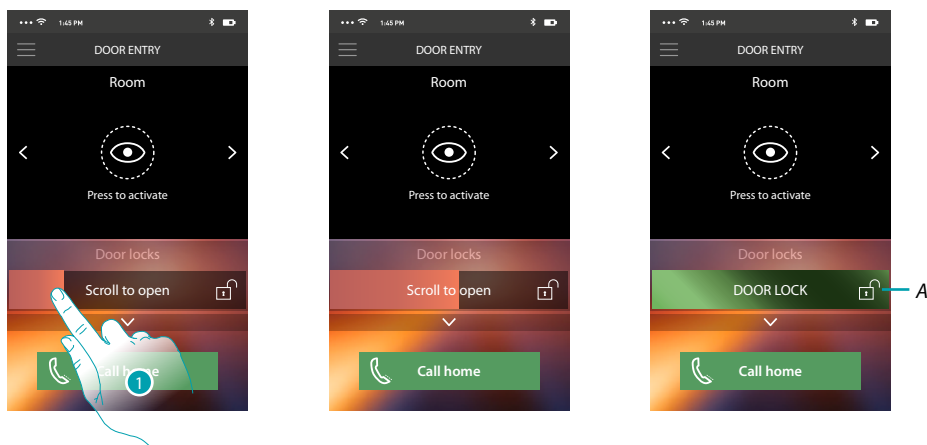


A. When it becomes green the door lock has been activated. If it remains red, the command has not been performed correctly.

1. Drag to the right to activate the door lock.

Note: the number of door locks you can display in the Home Page depends on your Smartphone's features. Use the pull-down menu to display them all.

To receive a video door entry call


Via this function you can receive the calls from the Entrance Panel.

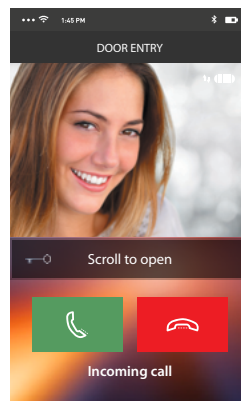


With smartphone in stand-by, following a call from the Entrance Panel:

- on Android, the image taken with the call* management icons appears;
- on iOS, the call notification appears.
- both systems will receive a push notification.

**The first three smartphones which receive the call will see the video image directly before answering, the others instead only after answering.
The answer from one device excludes all the others.*

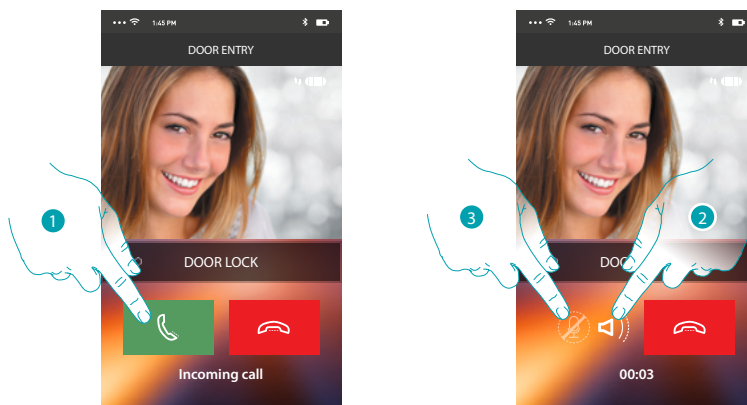


1. Touch to activate the audio and answer, the call audio is played automatically hands free.
2. Touch to change from hands-free mode to telephone mode.
3. If necessary touch to silence the microphone.

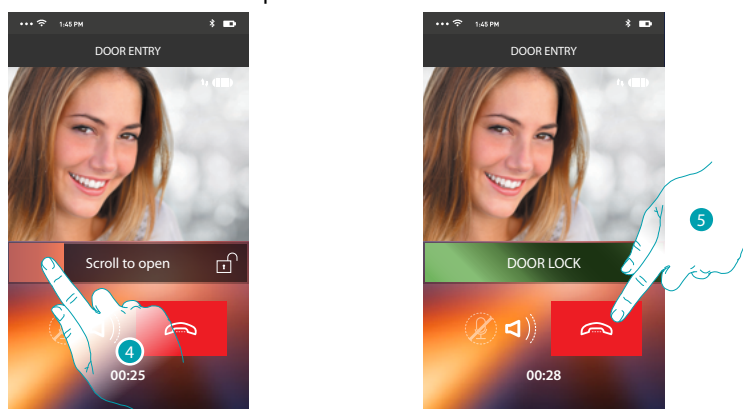


4. You can also open the door lock of the Entrance Panel from which the call comes, by dragging the switch. When it becomes green the door lock has been activated. If it remains red, the command has not been performed correctly.
5. Touch to end the call.

Call home: Call your HOMETOUCH


You can communicate with your HOMETOUCH by means of this function.

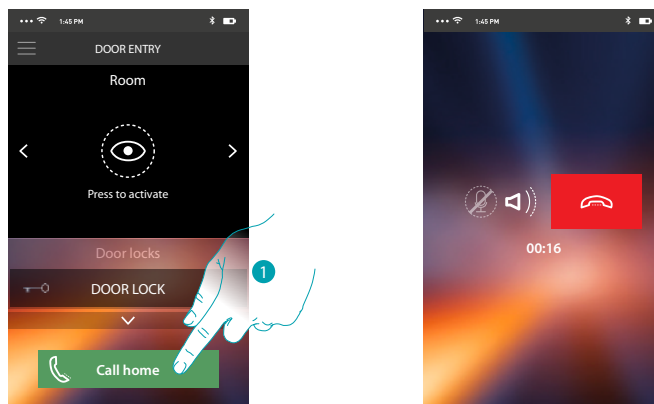

1. Touch to call the HOMETOUCH.

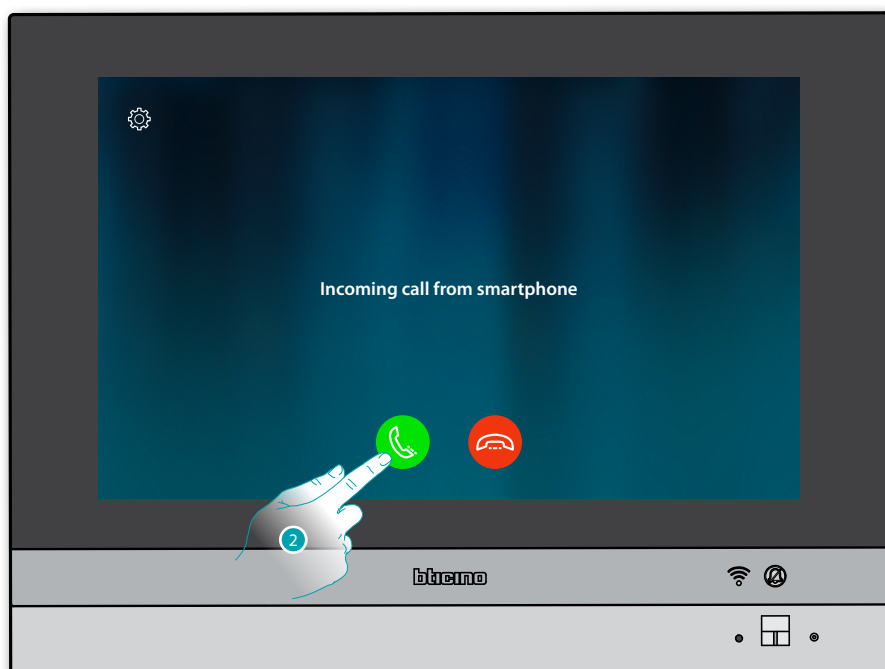

2. When the HOMETOUCH call answers the audio communication is activated.


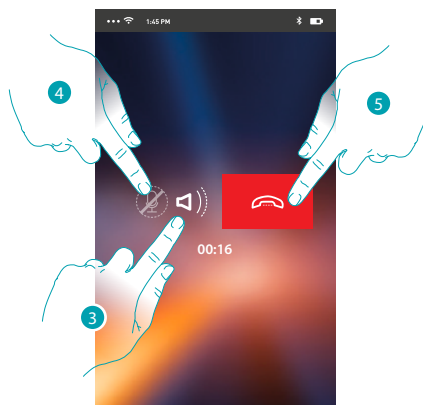


The communication is played automatically in hands free.

3. Touch to change from hands-free to telephone mode.
4. Touch to silence the microphone.
5. Touch to end the call.

Menu

Via this pull-down menu you can display the audio/video messages recorded by the Entrance Panel (answering machine), send commands, manage the associated users, update your HOMETOUCH firmware, modify your account data and display information on the App.

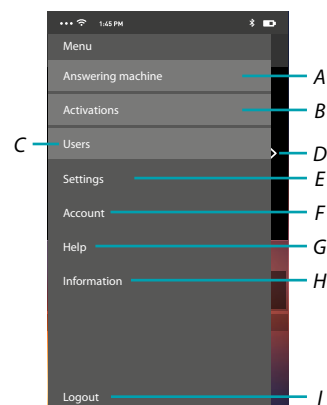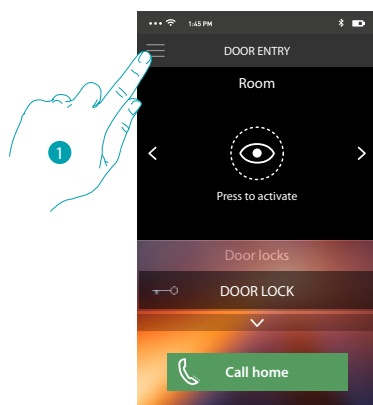


1. Touch to open the retractable menu.
- A. Opens the Answering machine section.
- B. Opens the Activations section.
- C. Opens the Users section.
- D. Opens the Settings section.
- E. Close the retractable menu.
- F. Opens the Account section.
- G. Opens the assistance contacts page.
- H. Opens a screen with some information on the App (version etc.).
- I. Log out.




Answering machine

In this section you can activate the answering-machine function to record an audio/video call from the entrance panel

It is also possible to display the recorded messages.


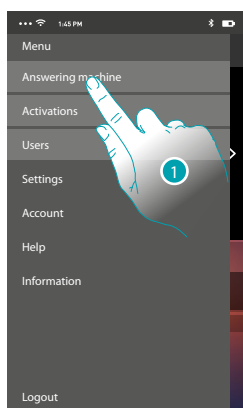


1. Touch to open the Answering machine section.
- A. Enable/disable the answering machine.
- B. Video message not read.
- C. Audio message.
2. Touch to display the recorded message

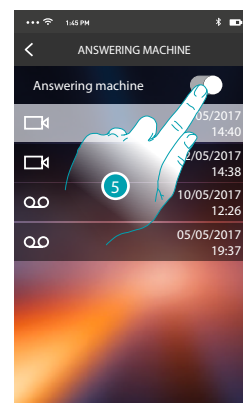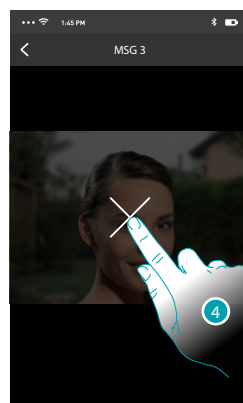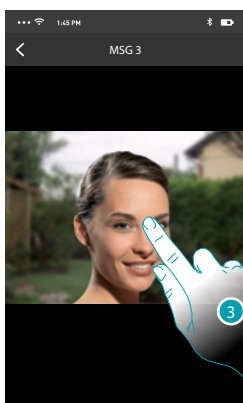

The message is played back automatically

3. Touch to make the key to stop the playing appear.
4. Touch to end the playing.
5. Touch to disable the Answering machine section.

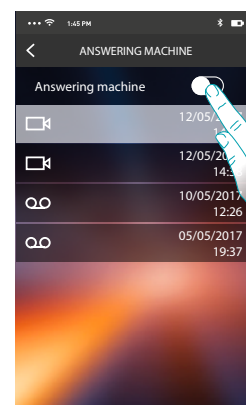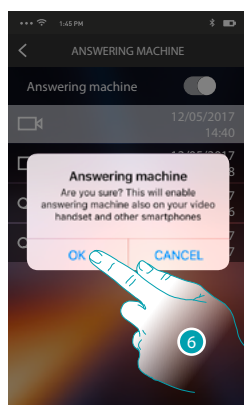

6. Touch to save it.



Caution: on confirming the operation the answering-machine function will also be disabled on your HOMETOUCH and all the associated smartphones

7. The video answering function is now disabled.



Activations

This section can be used to enable certain actuators (e.g. door locks, garden light, etc.).

The activations available are those in the [advanced settings/video door entry/commands](#) section of your HOMETOUCH.

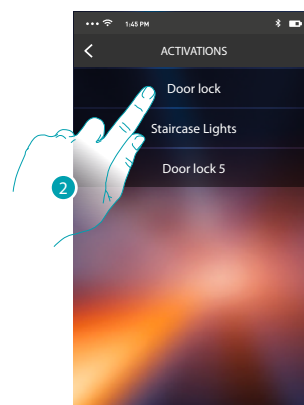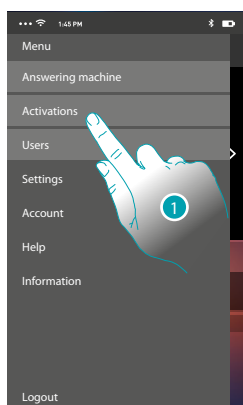

1. Touch to open the Activations section
2. Touch to activate the door lock.

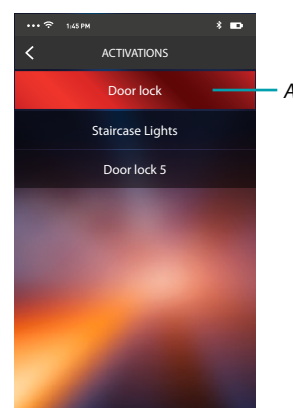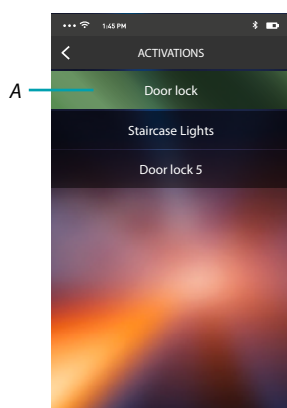


- A. If the key is green the activation has been successful. If it remains red, there has been a problem with the activation, which has not been performed.

Users

In this section you can dissociate your user and disconnect the smartphones connected to him. You can also invite other users to associate their accounts to your HOMETOUCH, so that they can use the connected HOMETOUCH functions.


After the user you have invited has registered with the portal and logged in, he is displayed in the list with the smartphones connected to him.

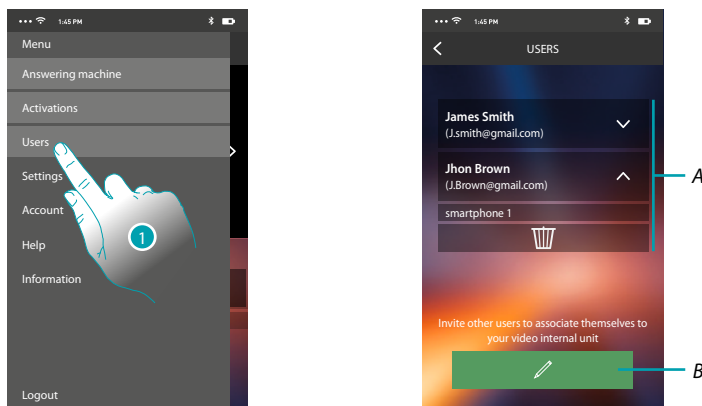

1. Touch to open the user section.

A. Associated users


B. Start the procedure.

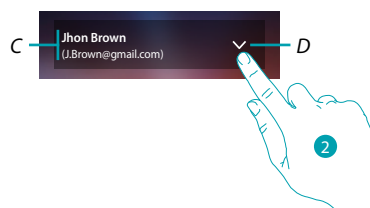

C. Name and login of the user.

D. Opens the list of smartphones connected to the user.

2. Touch to display the smartphones connected to the user.

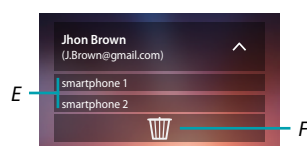

E. Connected smartphones.


F. Dissociate the user and thus all the connected smartphones

You can disconnect a single smartphone from the HOMETOUCH in the [Associated accounts](#) page.


Note: To associate your user again, it is necessary that another user [invites](#) you or, if there are no other users, make the [association](#) procedure again.

Invites a user

With this procedure you can invite other users to use the functions of your HOMETOUGH. In this way they can use the connected HOMETOUGH functions.

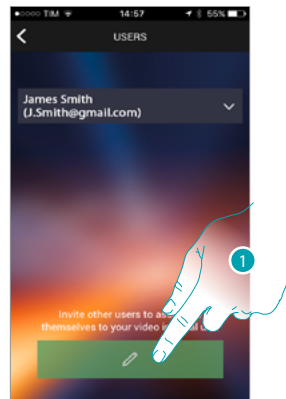




1. Touch Invite another user.

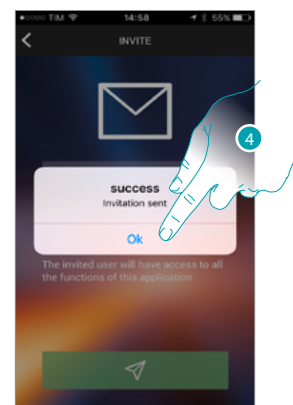


2. Enter the email of the user to associate and confirm it.
3. Touch to confirm the invitation.
4. Touch to save it.

Note: the invited user can operate on the system and use your HOMETOUGH connected functions.

The invited user will receive an e-mail with the invitation to check your system and register following the procedure, and then:

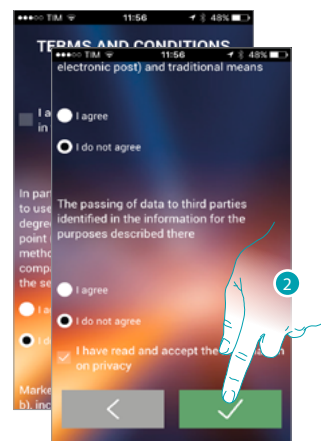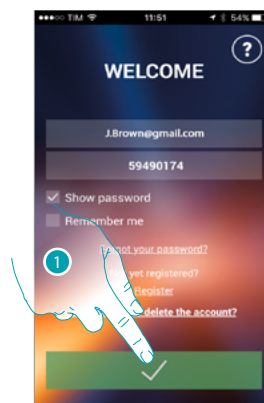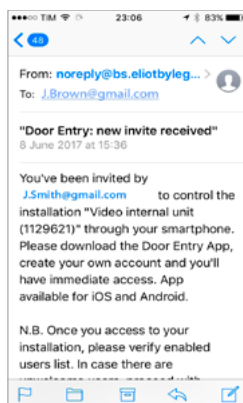


1. Authenticate
2. Accept the terms and conditions of use laid down in the associated text (obligatory).

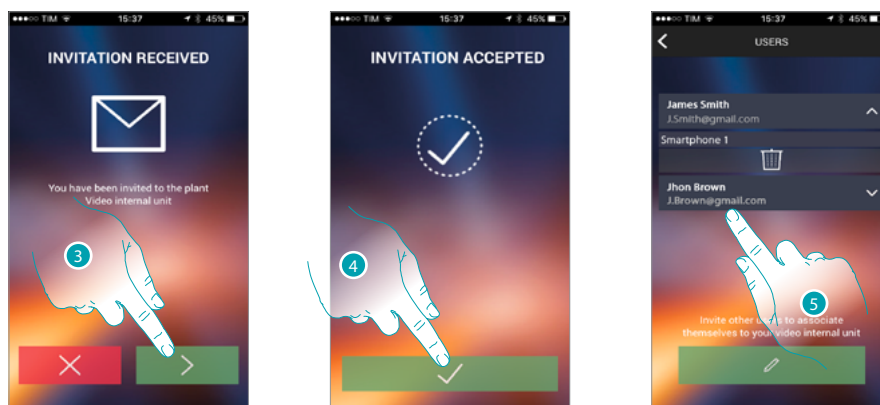

3. Enter the email of the user to associate and confirm it.
4. Continue.
5. At this point you will find him in the list of associated accounts.

Settings


In this section you can update your HOMETOUCH firmware and replace the video internal unit. This last function allows you to replace the faulty device with a new one. All the configurations will be recovered, apart from the device connection to the Wi-Fi network, which you must do before the association with the App.

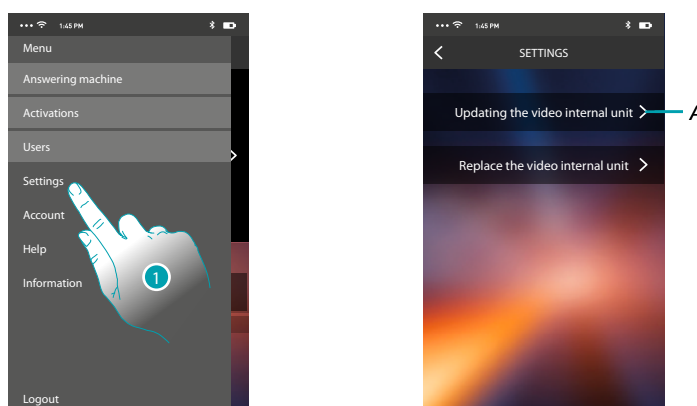

1. Touch to open the setting section.
- A. *Update the HOMETOUCH firmware.*
- B. *Perform the procedure to use when replacing the HOMETOUCH.*


HOMETOUCH firmware update (only if connected to the same Wi-Fi network of the HOMETOUCH)

When a new firmware is released you will be sent a notification on your smartphone, or you can update your HOMETOUCH firmware at any time by accessing this section.

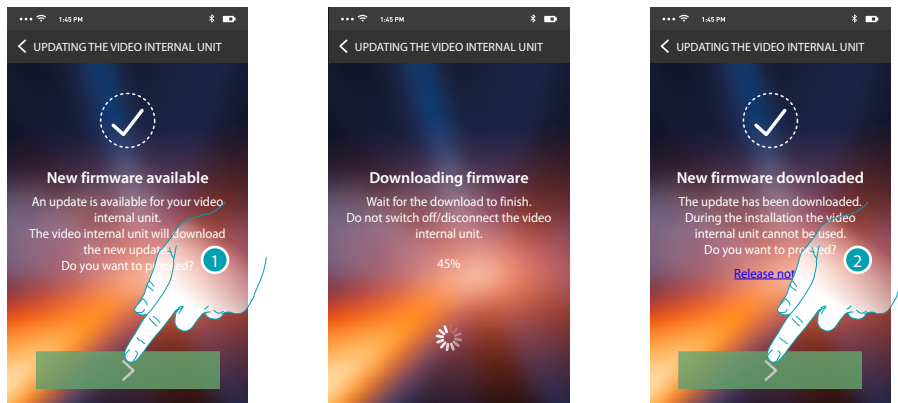

On entering the section, if an update is available, a key will be displayed to download it, otherwise the version currently in the HOMETOUCH appears.


1. Touch to download the update.
2. Touch to install it.

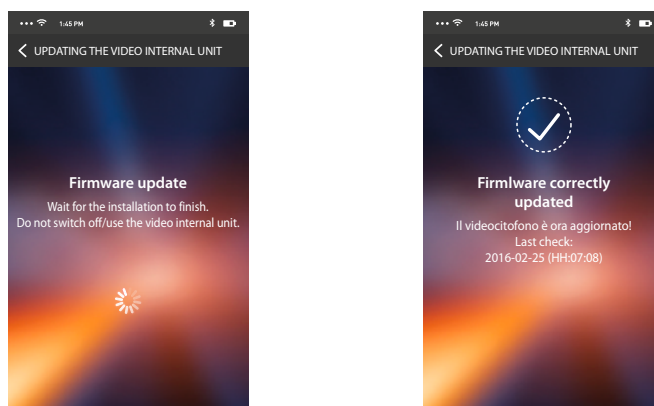

At the end of the installation you can display the firmware version installed in your HOMETOUCH.

Replacing the HOMETOUCH

If you need to replace the HOMETOUCH installed in your system, you must use this procedure.

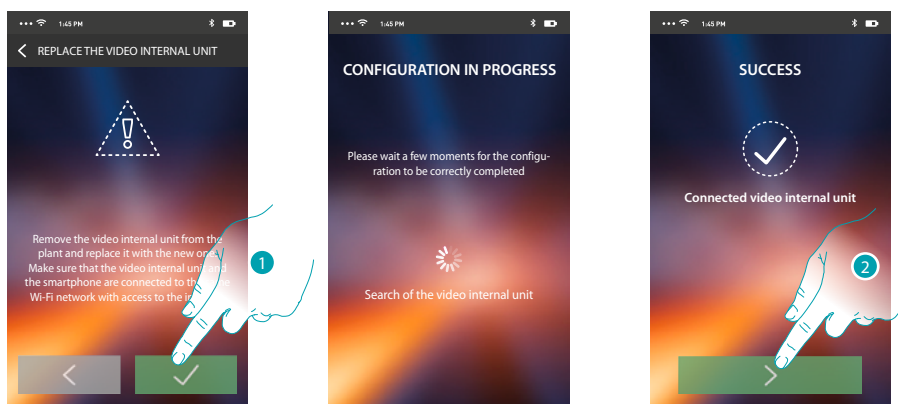



On entering the section a warning screen appears.

1. Remove the HOMETOUCH to be replaced and connect the new one, then press continue.
2. Touch to end the procedure.

Note: this procedure allows you to recover all the settings in the replaced HOMETOUCH, via the connection to the WiFi network.

Account


The account is common to all the connected Legrand/BTicino devices App. In this section you can display information on your account and/or cancel it. You can also edit your authentication password.

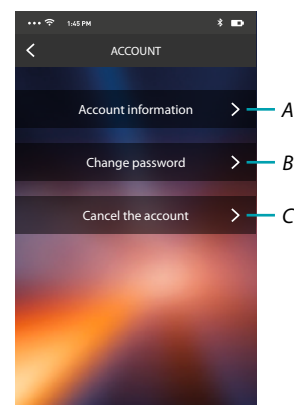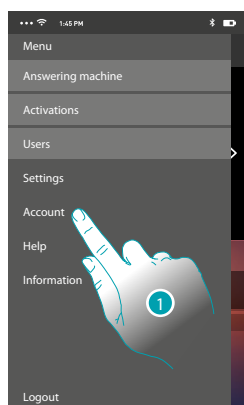

- A. Display and edit your account [data](#).
- B. Change your account [password](#).
- C. [Cancel](#) your account.
- 1. Touch to manage your account.


Account information

In this section you can edit your account data and display the terms and conditions of use.

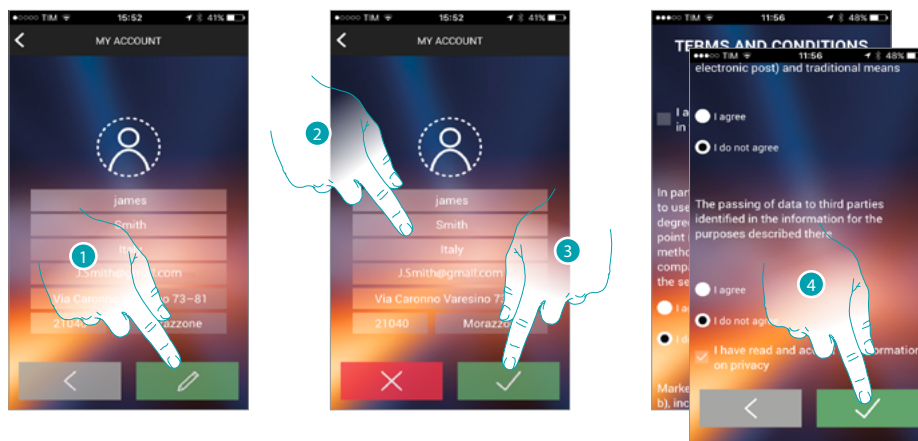

1. Touch to enable the modification.
2. Modify the data
3. Touch to save it.
4. Accept the terms and conditions of use laid down in the associated text (obligatory).


Change password

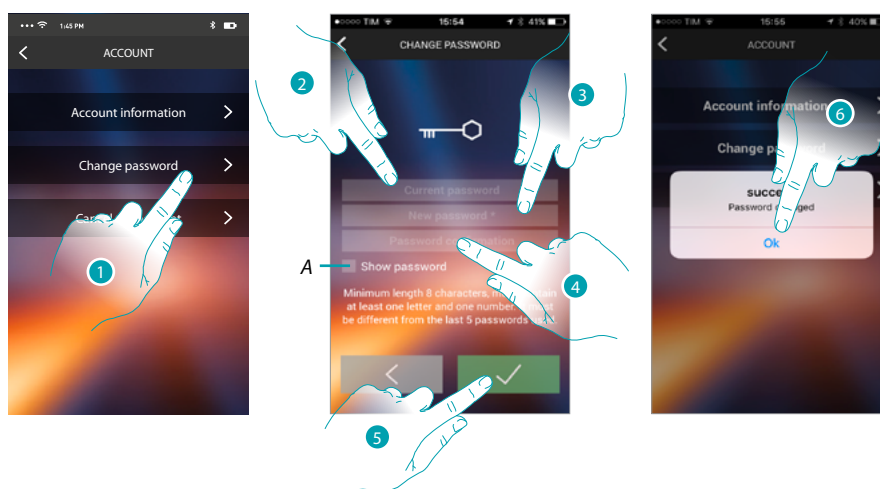

1. Touch to modify the password.
- A. Display the unencrypted password.
2. Enter the current password.
3. Enter the new password.
4. Confirm the new password.
5. Touch to save it.
6. Touch to end the procedure.


Delete the account

In this section you can cancel your account definitively

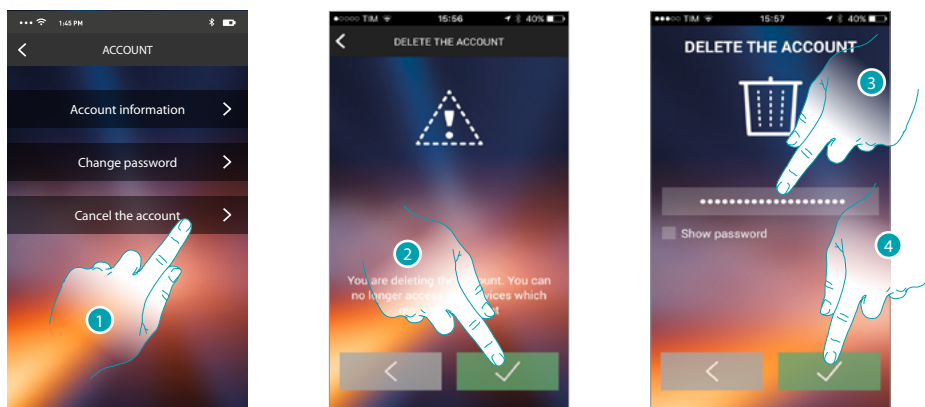

1. Touch to activate the account cancellation procedure.
2. Touch to continue.
3. Enter the password you used for authentication.
4. Delete the account.


Note: on cancelling the account you can no longer use the App functions. To use them again you must [register](#) again.

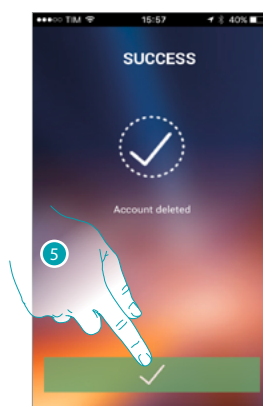

5. Touch to end the procedure.



Help

In this section you can display the after-sales service contacts page and send a notification about a problem you have found.

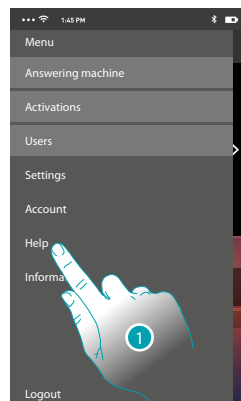




1. Touch to enter the Help section.

Customer_service

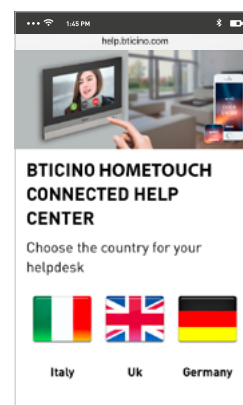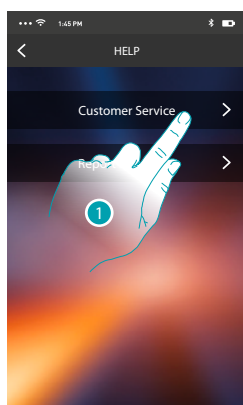

1. Touch to display the page of the Support Service contacts.
You will be readdressed on the www.help.bticino.com site

Logs Management

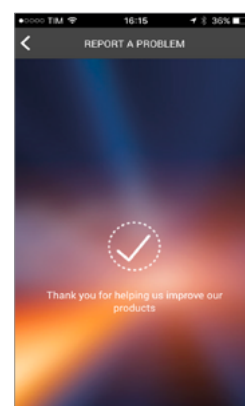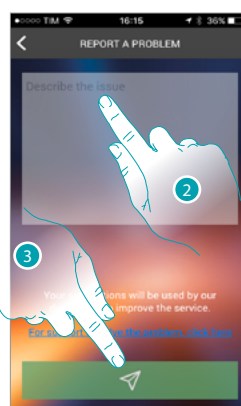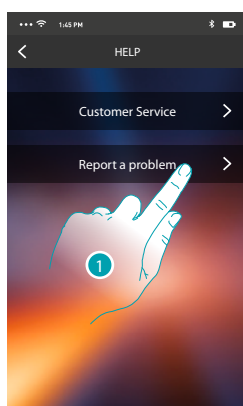

1. Touch to point out a problem which has occurred and send a notification to the after-sales service

Note: you will not receive a direct answer, but your signal will be used by developers to improve the service.

2. Describe the problem you want to point out in the correct field
3. Touch to send the message to the after-sales service


Home-automation functions (MyHOME_Up)

You can control your home through various functions: activate lights, rolling shutters, controlled sockets, scenarios, and manage some sound system, burglar alarm system and temperature control system functions.




[Light](#)

The light objects allow you to switch a light on/off and adjust its intensity and colour.

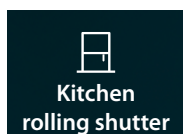

[Shutter](#)

The rolling shutters objects allow you to open and close rolling shutters, shutters and garage doors, and to display their status.

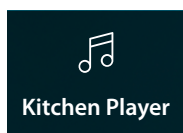


[Player](#)

This object allows you to control a music player, playing music tracks or listening to radio stations selected in the MyHOME_Up player object.



[Controlled socket](#)

This object supplies a controlled socket

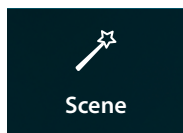

[Scenarios](#)

This object allows you to start a scenario created in MyHOME_Up



[Temperature control](#)

This page can be used to adjust the home temperature



[Burglar alarm](#)

In this page it is possible to insert the burglar alarm system in various modes and display any pending faults and alarms

Use the functions from the device

Light

The light objects allow you to switch a light on/off and adjust it.


Via the coloured light object you can also manage the coloured Philips Hue* and Lixf* Enttec ODE* LED lamps.

Note: the device may not be compatible with some models or their firmware versions.


Bticino is not responsible for any present and future malfunctionings or incompatibilities which can be attributed to third-party devices.



On/off: to switch a light on/off and display its status

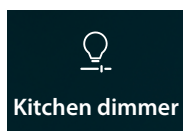

Dimmer: to switch a light on/off, adjust its intensity and display its status

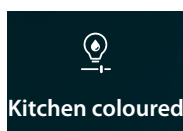

Coloured light: to switch a coloured light on/off, adjust its intensity and colour, and display its status

On/off


Control the object from [Favourites](#)




A Light status

B Light name

1. Touch to switch the light on

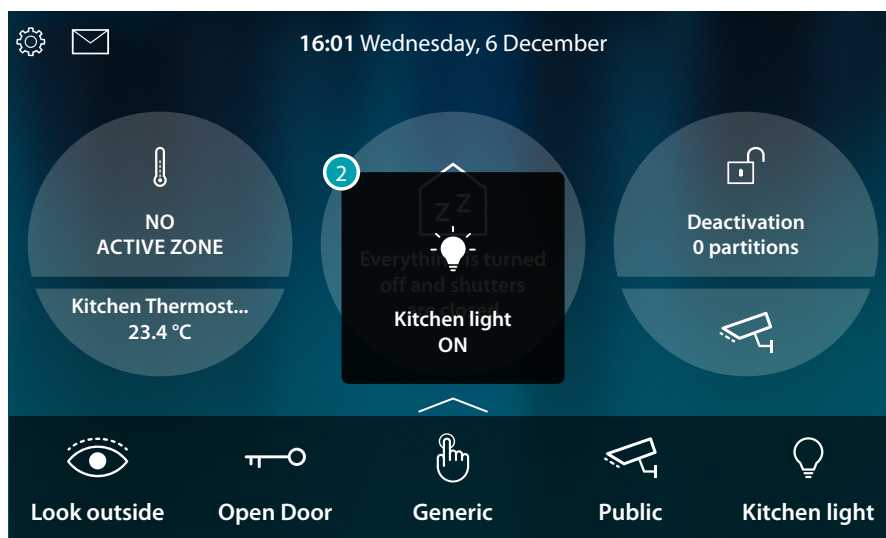

2. A message indicates that the light is switched ON

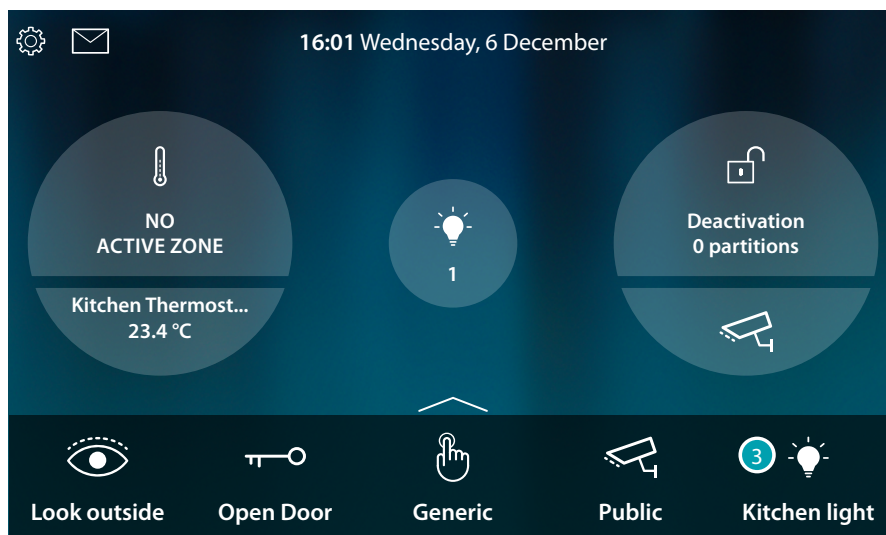


3. The icon now indicates the ON status

Control the object from [Home Status](#)



When the light is switched on, an indication appears in the Home Status preview screen

1. Touch to open the page

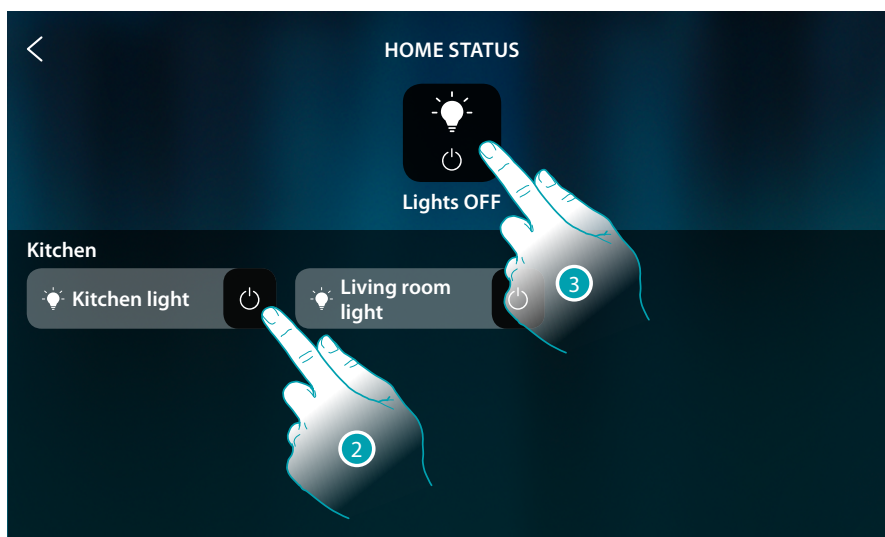


2. Touch to change the status of the light

If the light is switched off, it will only be available in this page until the screen turns off. For more information, see the [Home Status](#) section

In this page it is possible to switch all the system lights off using the **general lights command**. The command icon also appears if even only one light is on.

3. Touch to switch all the lights off

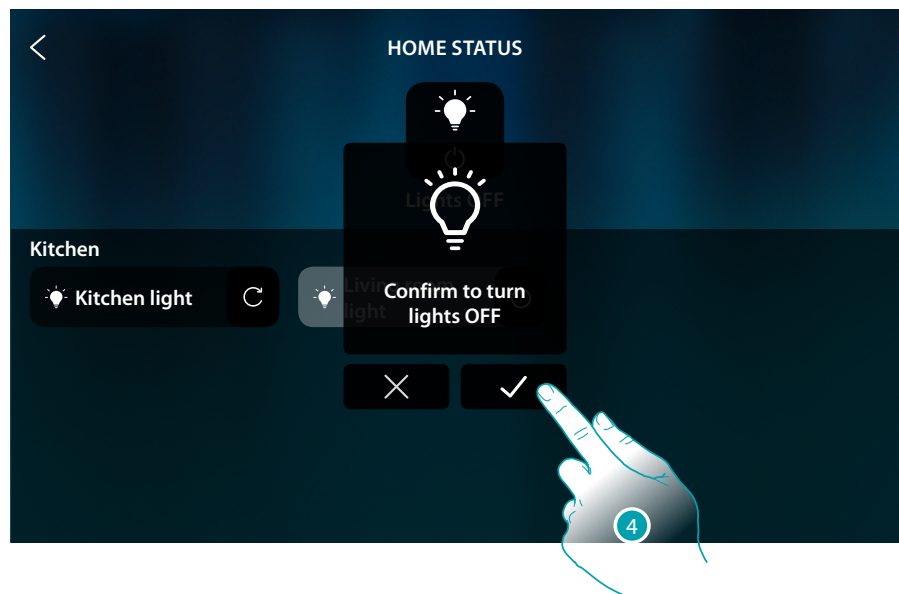

4. Touch to confirm

Dimmer

Control the object from [Favourites](#)




A Light status

B Light name

1. Touch to switch on the light and/or adjust its intensity



2. Touch to switch the dimmer on

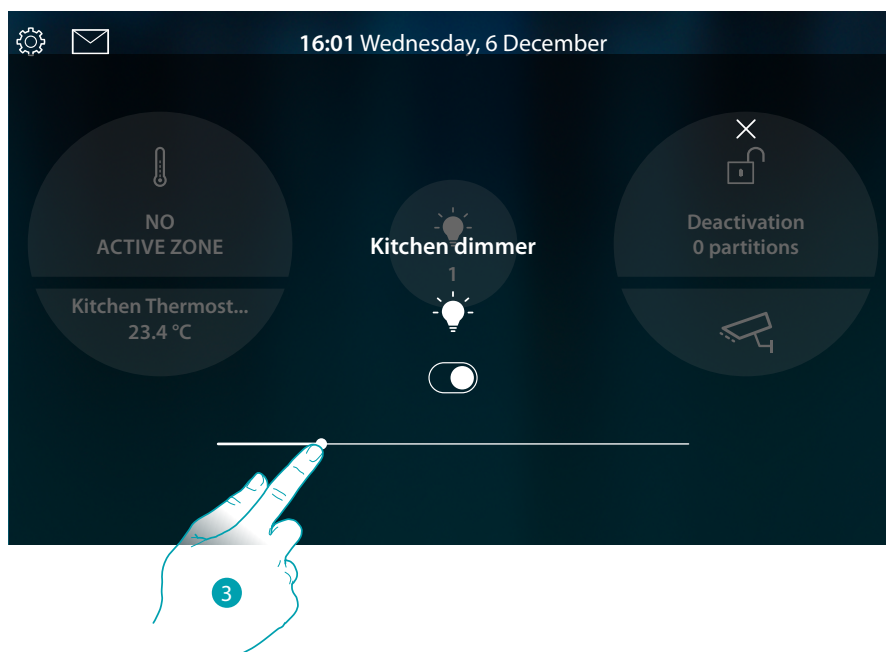


3. Touch and scroll to the left/right to decrease/increase the brightness

Control the object from [Home Status](#)



When the light is switched on, an indication appears in the Home Status preview screen

1. Touch to open the page

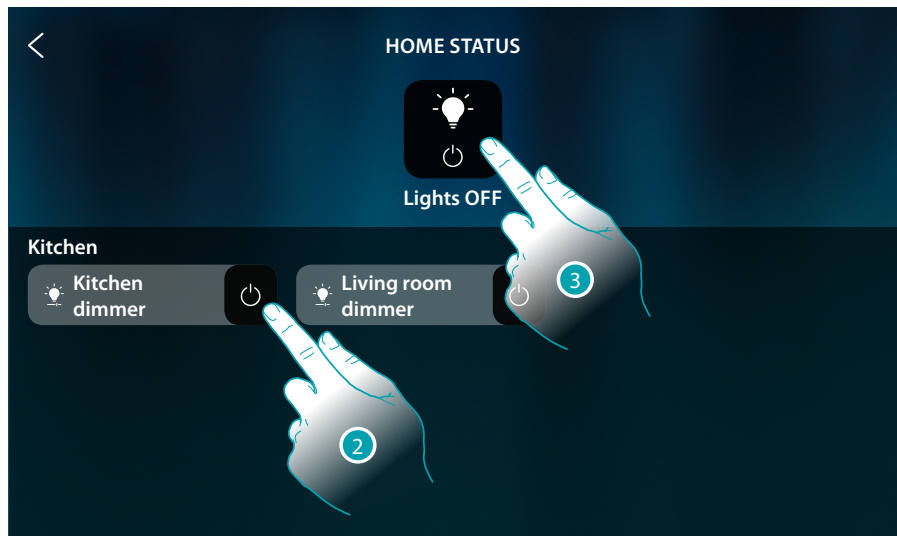


2. Touch to change the status of the dimmer (from this page it is not possible to adjust the light intensity).

If the light is switched off, it will only be available in this page until the screen turns off. For more information, see the [Home Status](#) section

In this page it is also possible to switch all the system lights off using the **general lights command**. The command icon also appears if even only one light is on.

3. Touch to switch all the lights off

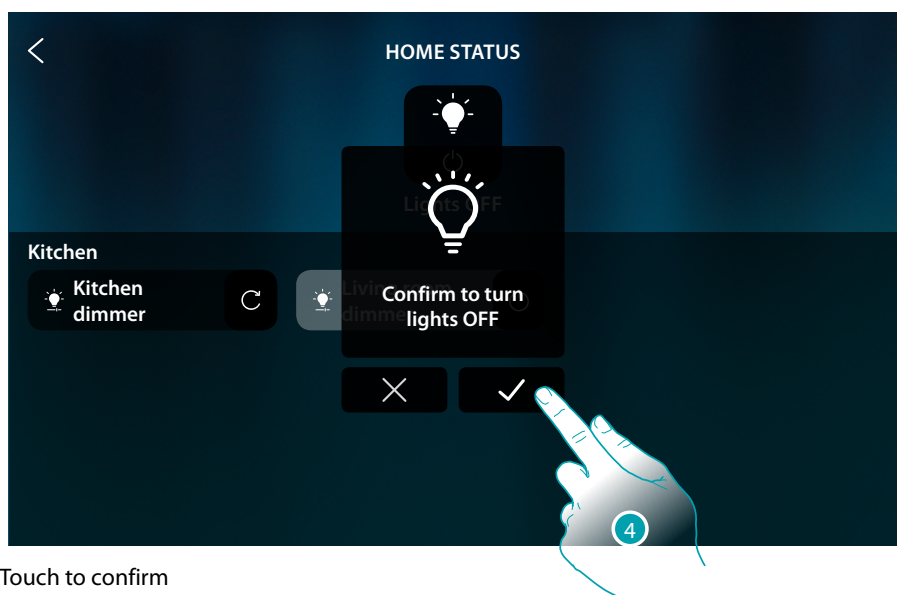

4. Touch to confirm

Coloured light

Control the object from [Favourites](#)




A Light status

B Light name

1. Touch to switch on the light and/or adjust its intensity and colour



2. Touch to switch the coloured light on

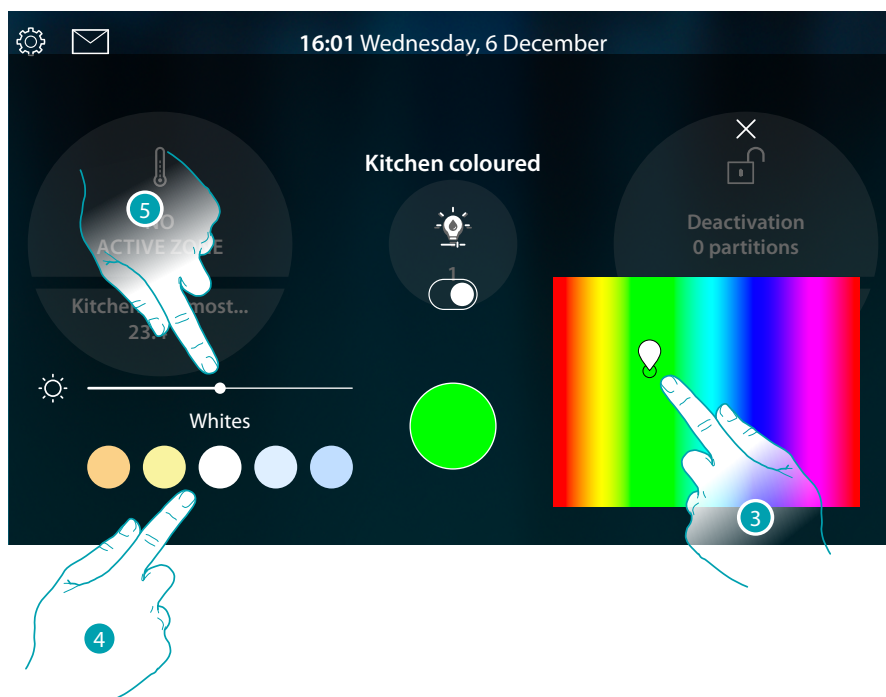


3. Touch and go to the area to set the colour of the light by selecting the hue
4. Touch to set the light colour temperature (warm or cool)
5. Touch and scroll to the right/left to increase/decrease the brightness

Control the object from [Home Status](#)



When the light is switched on, an indication appears in the Home Status preview screen


1. Touch to open the page

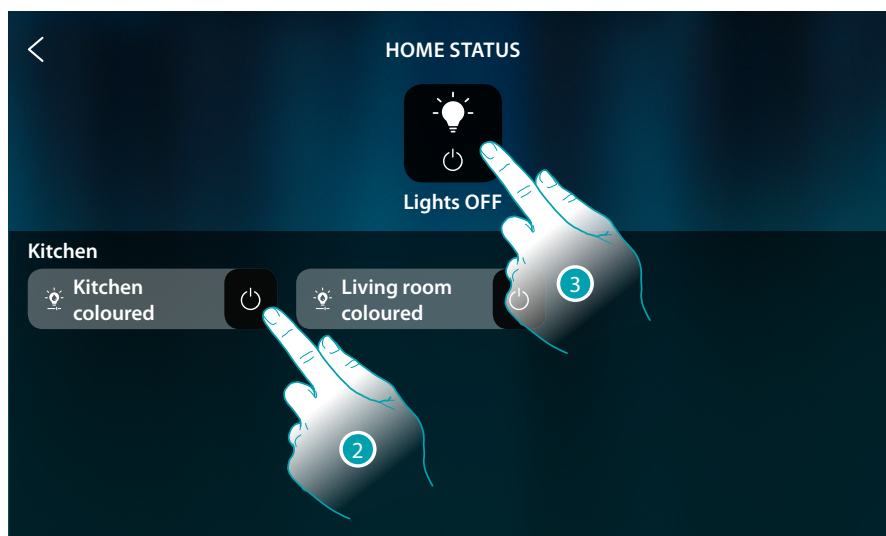

2. Touch to change the status of the light (from this page it is not possible to adjust the light intensity and colour).
If the light is switched off, it will only be available in this page until the screen turns off. For more information, see the [Home Status](#) section

In this page it is possible to switch all the system lights off using the **general lights command**. The command icon also appears if even only one light is on.


3. Touch to switch all the lights off

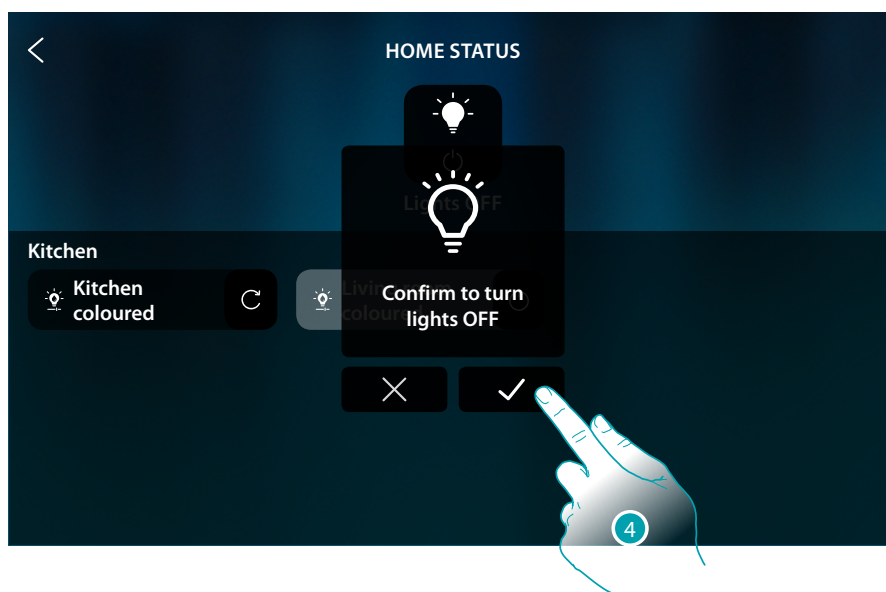


4. Touch to confirm

Shutter

The rolling shutter objects allow you to open and close rolling shutters, shutters and garage doors. You can also adjust the opening level (only for rolling shutters with opening level adjustment function).

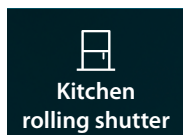

Rolling shutter without opening level adjustment function: open, close, stop, but no rolling shutter status display

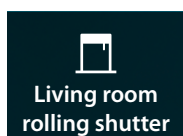

Rolling shutter with opening level adjustment function: open, gradual closing, stop and rolling shutter status display

Rolling shutter without opening level adjustment






A Rolling shutter name


1. Touch to rise/lower the shutter



A Rolling shutter movements


-  Rise the rolling shutter
-  Lower the rolling shutter
-  Stop the rolling shutter

2. Touch to rise the rolling shutter

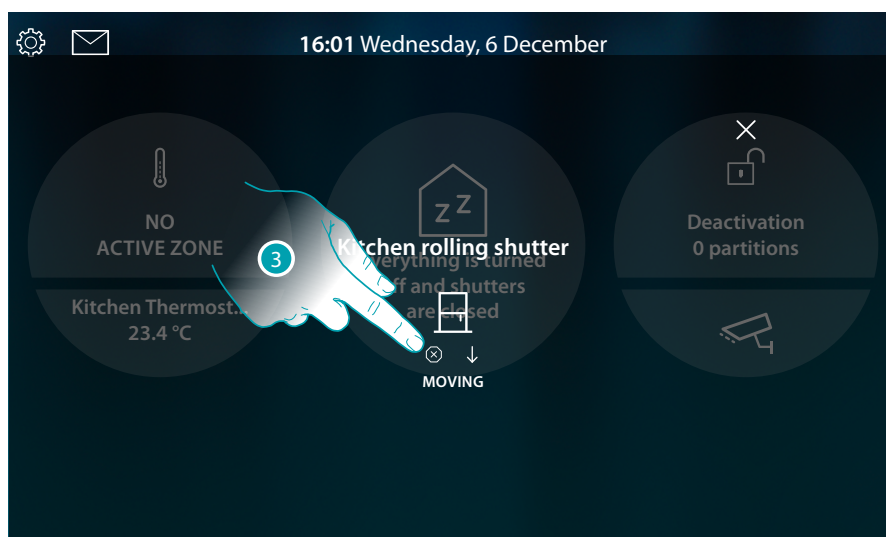

3. Touch to stop the rolling shutter

When a rolling shutter is moving, a pop-up message appears in the Home Page

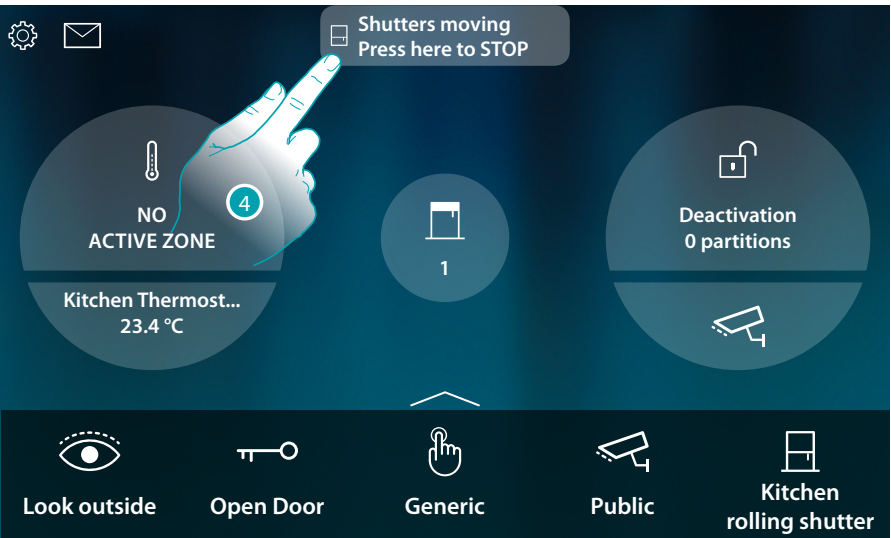

4. Touch to stop the rolling shutter

Note: rolling shutters without preset are not displayed in the Home Status screen, and therefore are not considered by the general rolling shutters Off command.

Rolling shutter with opening level adjustment



A Rolling shutter status

B Rolling shutter name




Open



Closed

1. Touch to rise/lower the shutter

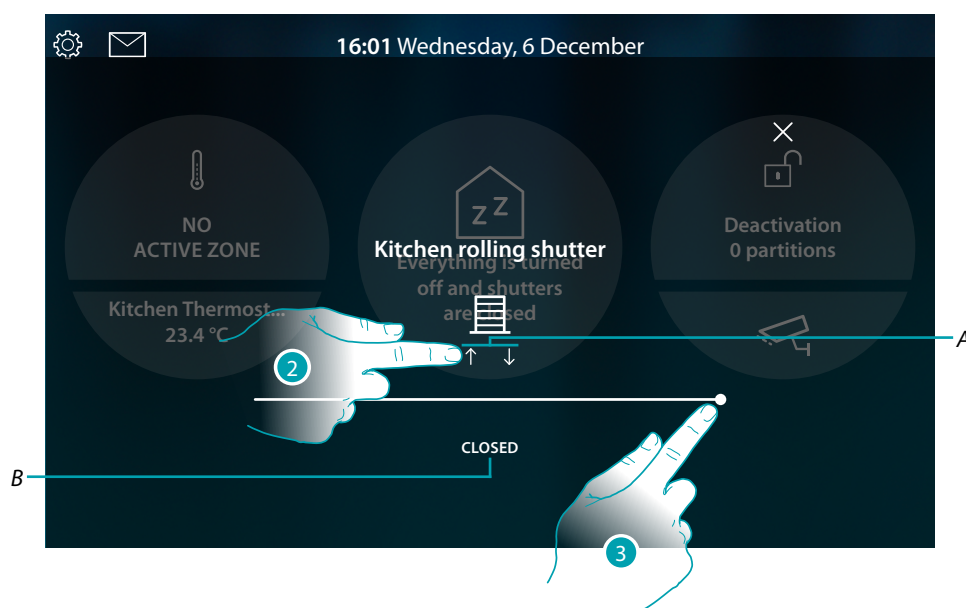

A Commands



Rise the rolling shutter



Lower the rolling shutter



Stop the rolling shutter

B Rolling shutter status

Open: rolling shutter open, even if not completely

Moving: rolling shutter moving

Closed: rolling shutter fully closed

2. Touch to raise the rolling shutter to the end of travel


Or

3. Touch and scroll left to open the rolling shutter to the point required.
The command is performed when you stop pressing.



4. Touch to stop the rolling shutter

When a rolling shutter is moving, a pop-up message appears in the Home Page

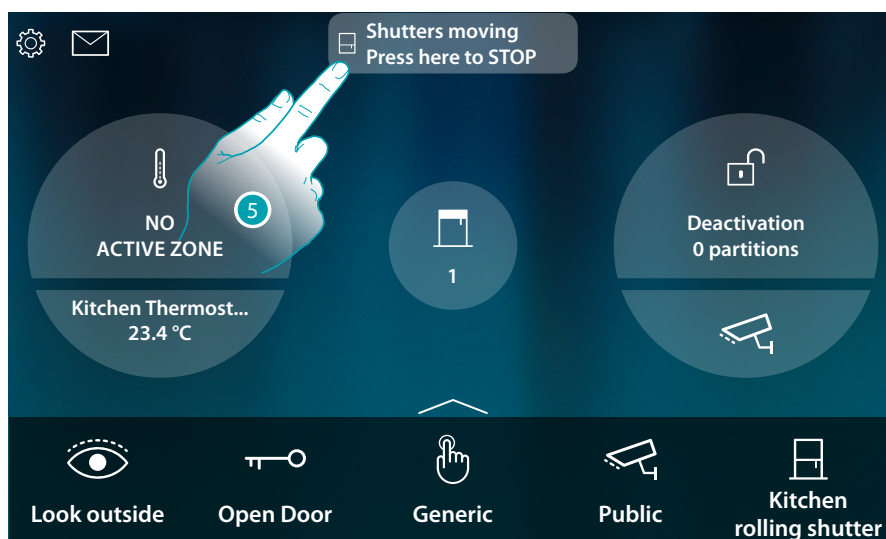


5. Touch to stop the rolling shutter

Control the object from [Home Status](#)



When a rolling shutter is open, an indication appears in the Home Status preview screen

1. Touch to open the page

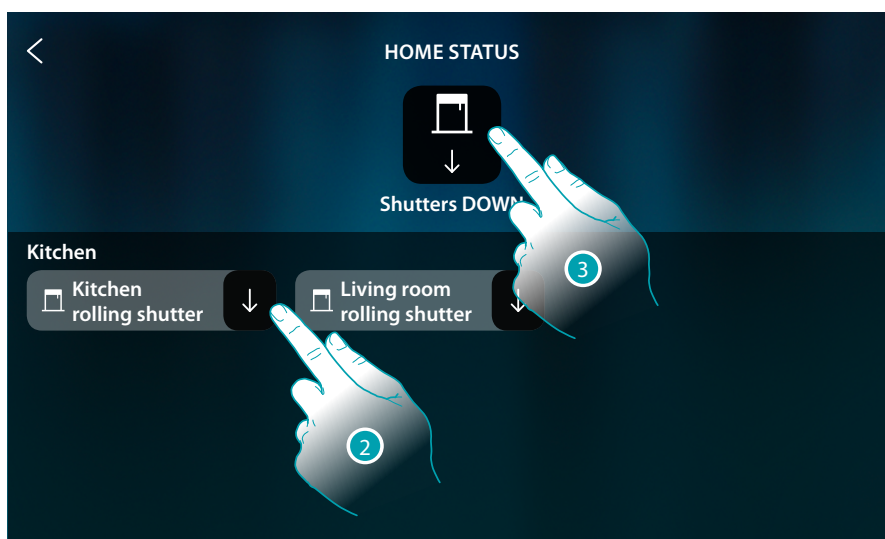


2. Touch to change the status of the rolling shutter (from this page it is not possible to adjust the rolling shutter opening level).
If closed, the rolling shutter will only be available in this page until the screen turns off. For more information, see the [Home Status](#) section

In this page it is also possible to lower all the rolling shutters of the system using the **general rolling shutters command**.

The command icon also appears if even only one rolling shutter is open.

3. Touch to close all the rolling shutters

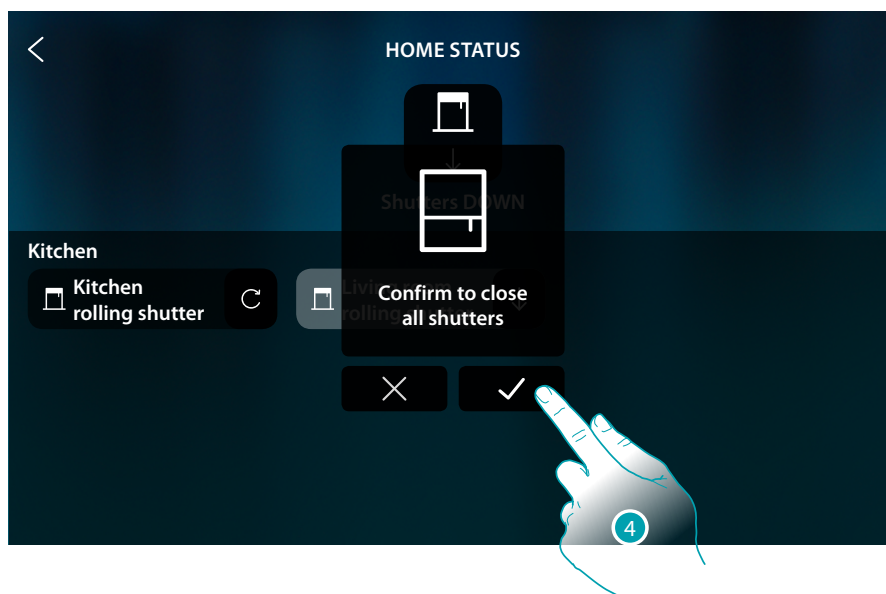


4. Touch to confirm

Player

This object allows you to control a Nuvo or Sonos* music player, playing music tracks or listening to radio stations selected in the MyHOME_Up player object.

***Note:** the device may not be compatible with some models or their firmware versions.

BTicino is not responsible for any present and future malfunctionings or incompatibilities which can be attributed to third-party devices.

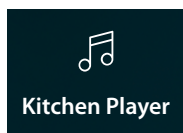

Plays/pauses and controls the volume of a music track or radio station selected in the MyHOME_Up Player object.

Control the object from [Favourites](#)



A Player name

1. Touch to play the track or listen to the radio



A Shows the track or radio station selected in the MyHOME_Up Player object


2. Touch to start the playback
3. Touch and scroll to the left/right to decrease/increase the volume

Control the object from [Home Status](#)



When a track is being played, an indication appears in the Home Status preview screen

1. Touch to open the page

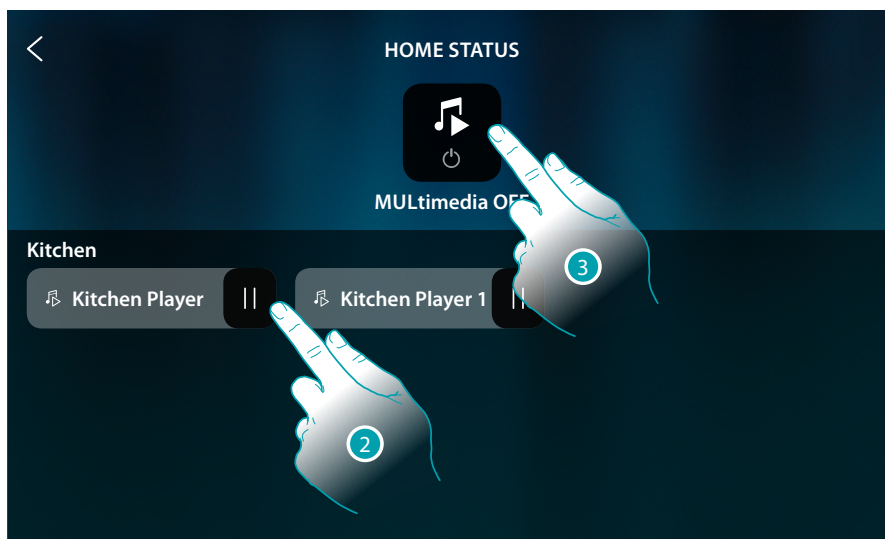


2. Touch to pause the track (from this page it is not possible to start music play or adjust the volume).
If paused, the music player will only be available in this page until the screen turns off.
For more information, see the [Home Status](#) section

In this page it is also possible to switch all the system players off using the **multimedia OFF** command.

The command icon also appears if even only one player is in operation


3. Touch to switch off all the system music players

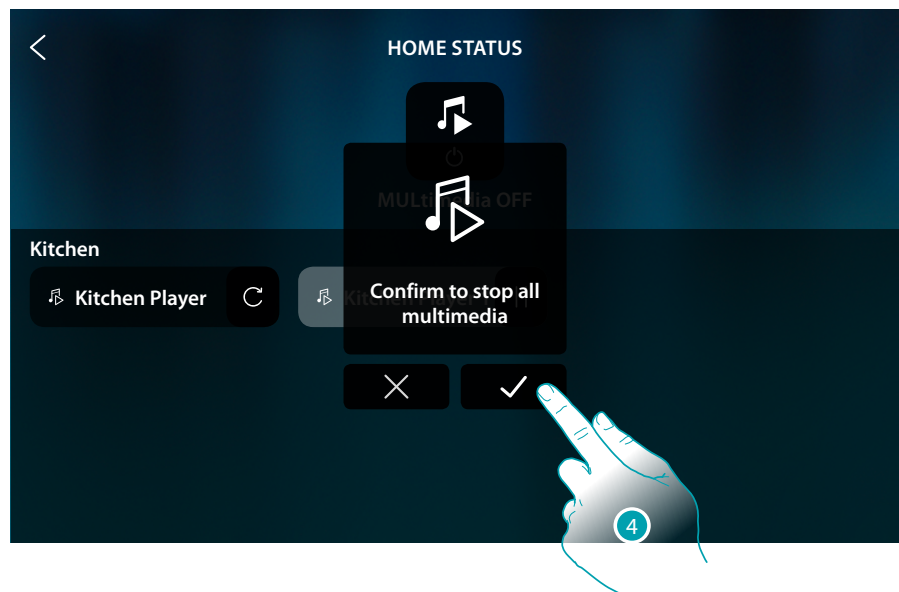

4. Touch to confirm

Controlled socket

This object supplies a controlled socket

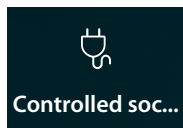

ON/OFF: controlled socket power supply


ON/OFF

Control the object from [Favourites](#)



A *Controlled socket name*

1. Touch to supply the socket

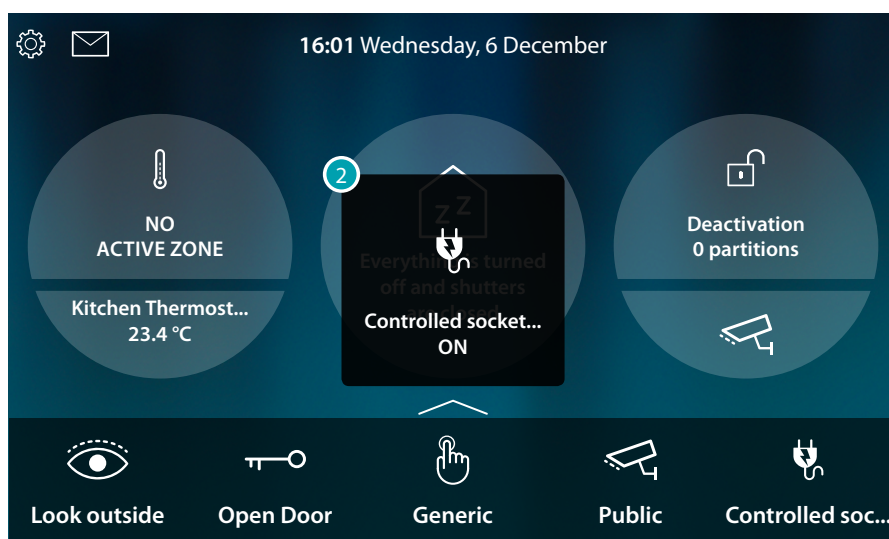


2. A message indicates that the socket is powered

Control the object from [Home Status](#)



When a socket is powered, an indication appears in the Home Status preview screen


1. Touch to open the page

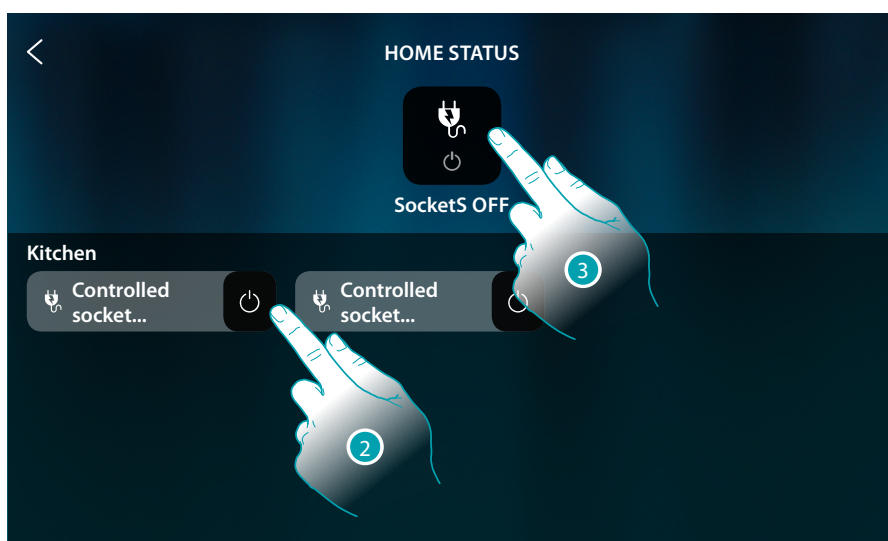

2. Touch to change the status of the socket
If the socket is switched off, it will only be available in this page until the screen turns off. For more information, see the [Home Status](#) section

In this page it is also possible to switch all the system sockets off using the **sockets off command**. The command icon also appears if even only one controlled socket is powered.


3. Touch to switch all the sockets off

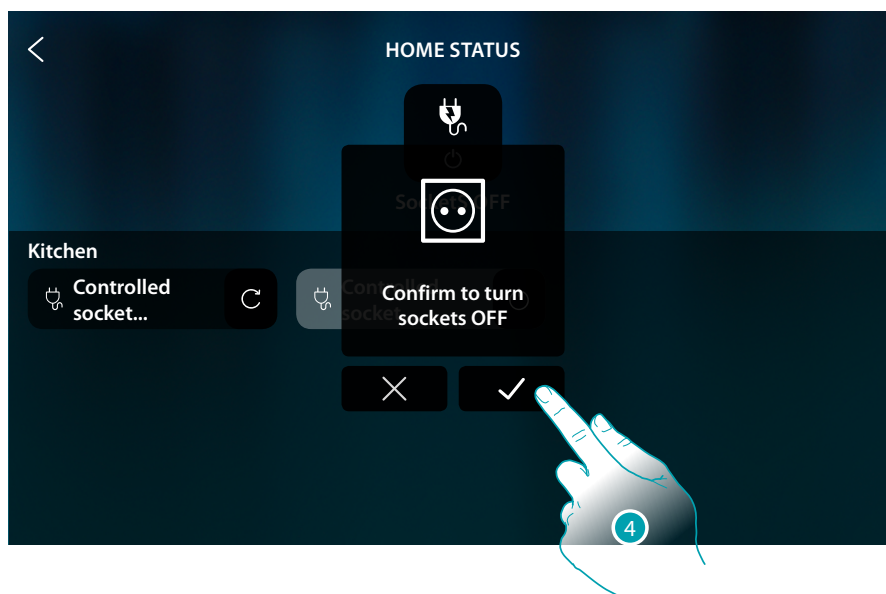

4. Touch to confirm

Scenarios

This object allows you to start a scenario created in MyHOME_Up

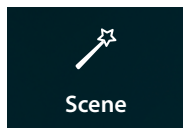


Starts a scenario created in MyHOME_Up

Control the object from [Favourites](#)



A Scenario name

1. Touch to start the scenario

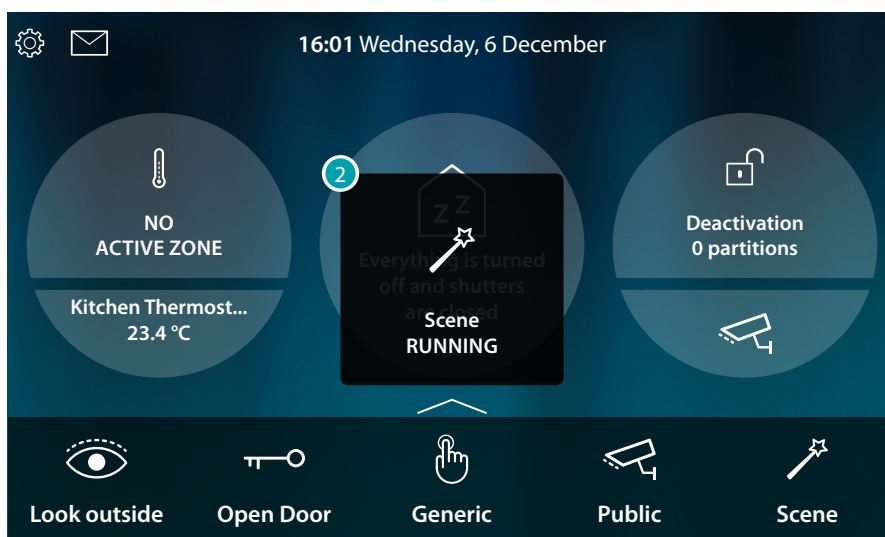

2. A message indicates that the scenario has been started

Temperature control

In this section it is possible to manage the thermostats of your system in order to adjust the temperature of your home



A Indicates through the colour (red heating, blue air conditioning) that at least one of the zones is active

B Indicates the system mode set



Heating mode




Cooling mode

C Indicates the number of active zones

D Favourite thermostat

It is possible to set one of the thermostats as **favourite**, in this way, the Home Page will directly show some details, such as name, temperature measured and if the zone is active or not (band colour: red = heating; blue = air conditioning).


1. Touch to manage the temperature control system

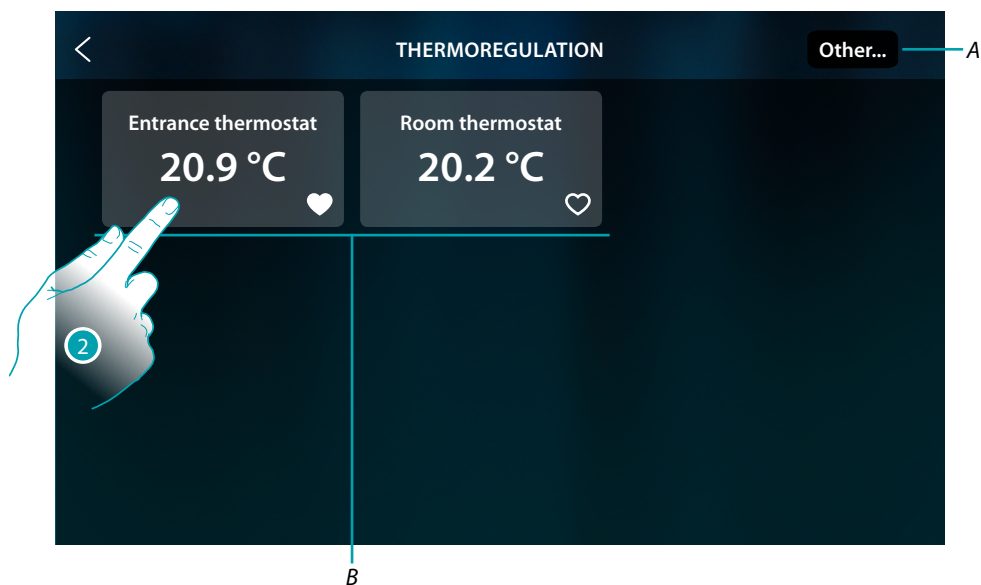

A Opens the panel to set the operating mode of the system


B System zones

This page includes the thermostats of your home; the object background shows the status of the zone:

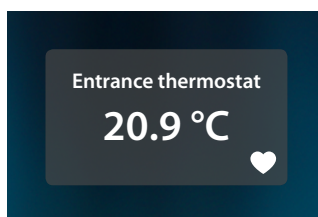


Pale background

Zone in manual mode in **Idle** status

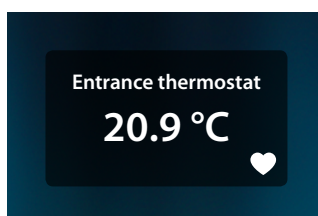


Dark background

Zone in thermal protection/antifreeze mode in **Idle** status

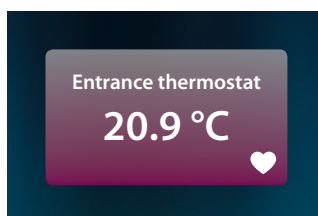

Red background

Zone in one of the two modes and in **Active** status because the measured temperature is below the set temperature (system in Heating mode)

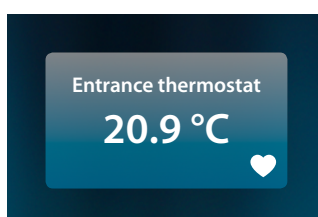


Blue background


Zone in one of the two modes and in **Active** status because the measured temperature is higher than the set temperature (system in air conditioning mode)

Note: The **Active** status switches back to **Idle** when the measured zone temperature reaches the set temperature value


2. Touch to open the zone management panel

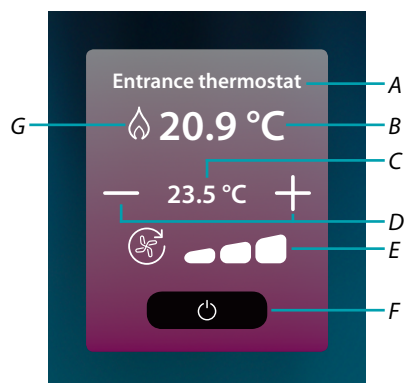

- A Zone name
- B Displays the measured temperature
- C Displays the set temperature
- D **Manual mode:**
Touch to increase/decrease the temperature in manual mode
- E Set the speed of the fan-coil fan
- F **Thermal protection/antifreeze mode:**
Touch to set Antifreeze Mode (heating). The system activates when the measured temperature falls below 7°C.
Touch to set Thermal Protection Mode (heating). The system activates when the measured temperature exceeds 35°C.
- G **Active status indication**

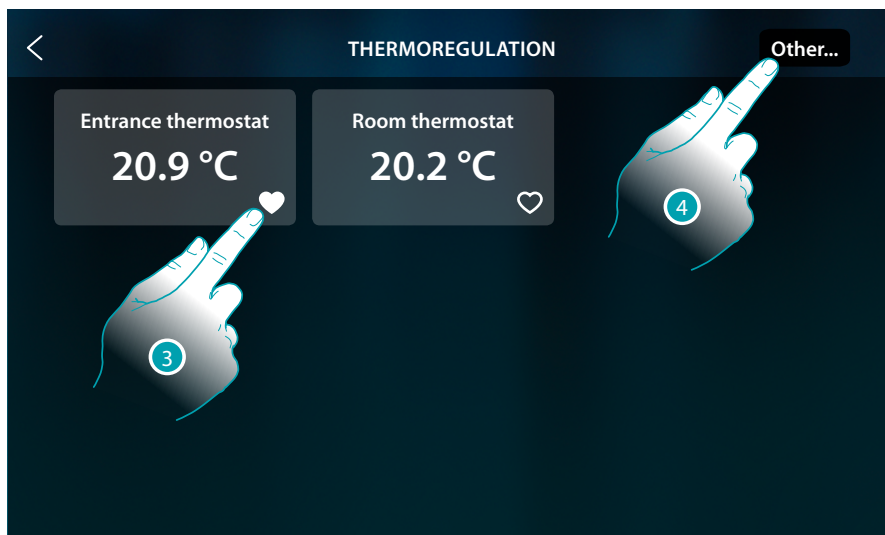

- 3. Touch to set the thermostat as favourite (the parameters are directly displayed in the Home Page)
- 4. Touch to set the system operating mode, either heating or air conditioning

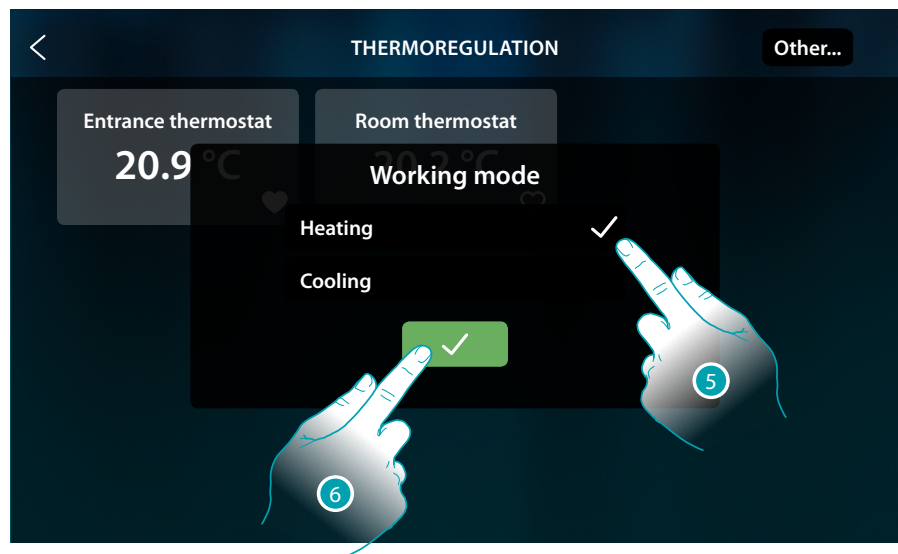


5. Select the operating mode
6. Touch to confirm

Burglar alarm

In this section you can display the Burglar Alarm system status, the current faults, display the status, activate the partitions and switch the Burglar Alarm system on by means of the insertion scenarios.

Note: this function is only present if you have a BTicino Burglar Alarm system (alarm control units 4200, 4201, 4203) and have made the connection with the control unit following the procedure.

Caution: not all the functions shown in this manual are available for all countries. Check with your retailer which functions are available for your market

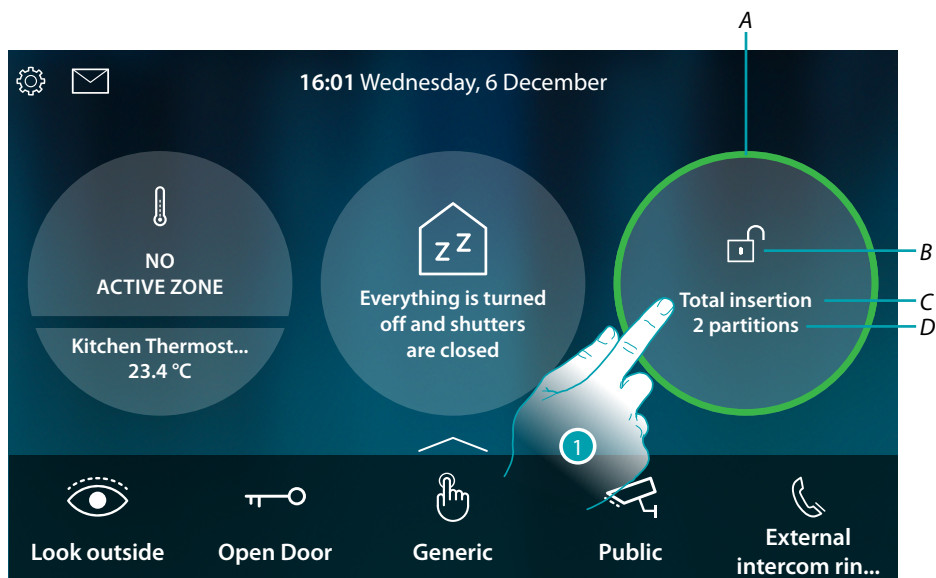

- A** Colour indication of the status of the system:
- No colour** = burglar alarm system not inserted
 - Green** = burglar alarm system inserted (at least one scenario or partition inserted)
 - Red steady** = an alarm has triggered and has been acknowledged (seen but not resolved by deactivating the system and removing the cause of the alarm)
 - Flashing red** = alarm in progress


- B** Icon indication of the status of the system:
- Burglar-alarm system connected
 - Burglar-alarm system disconnected
 - Alarm on the burglar-alarm system (an alarm on at least one partition)

C Insertion scenario active

"Scenario name" (e.g. Night)	Partitions inserted according to the control unit preset scenario
"Partially inserted"	Partitions manually added the Partitions page

D No. of inserted partitions

1. Returns to the Home Page

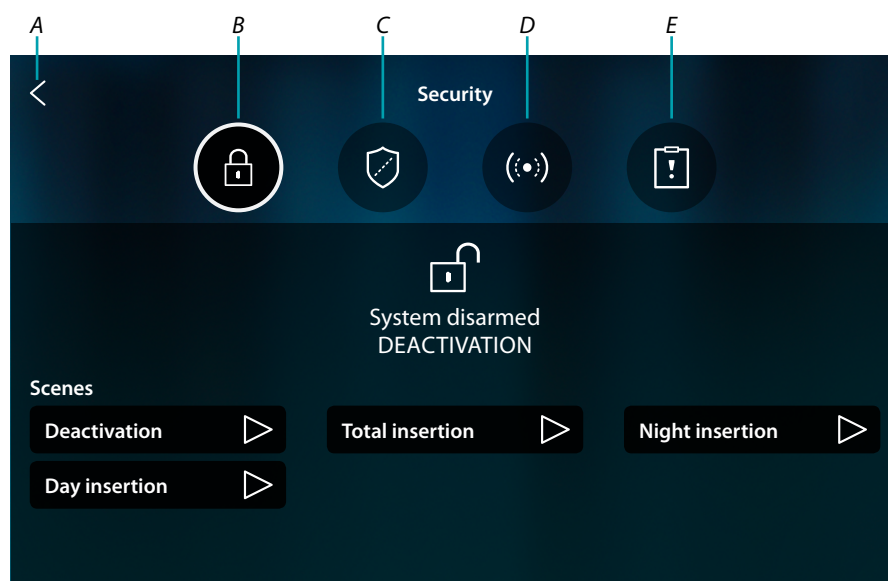

A Returns to the Home Page

B Insertion scenarios

C Partitions

D Zones

E Alarms/faults

Fundamental concepts

This section explains the terms used in reference to Burglar Alarm System concepts and functions.

Partitions:

partitions are the areas in which the home is split following a logic and functional aggregation. For example, the "night volumetric" partition includes the bathroom and the main bedroom.

Zones:

the zones are the intrusion detection devices making up the Burglar Alarm System. For example, the contact of the steel-reinforced door, the kitchen IR detector, etc.

Insertion scenarios:


the insertions are Burglar Alarm System activation scenarios.

for example, the "night insertion" scenario activates the burglar alarm in the internal perimeter, external perimeter, daytime area and volumetric external partitions, but not in the night volumetric partition.

In this way, the system will be active everywhere in the house and outside, with the exception of the bedroom and the bathroom (night-time volumetric partition), where you will be able to move freely.

Insertion scenarios

This page can be used to insert the burglar alarm system using the insertion scenarios.

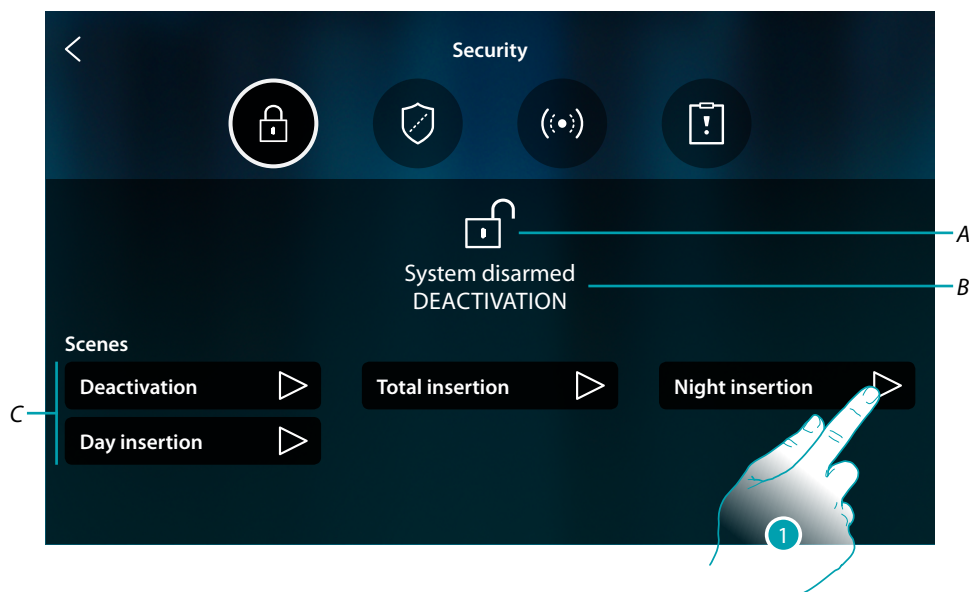


A Shows the status of the system

B Shows the active insertion scenario

C Insertion scenarios available in the burglar-alarm system


1. Touch the desired insertion scenario among the ones available

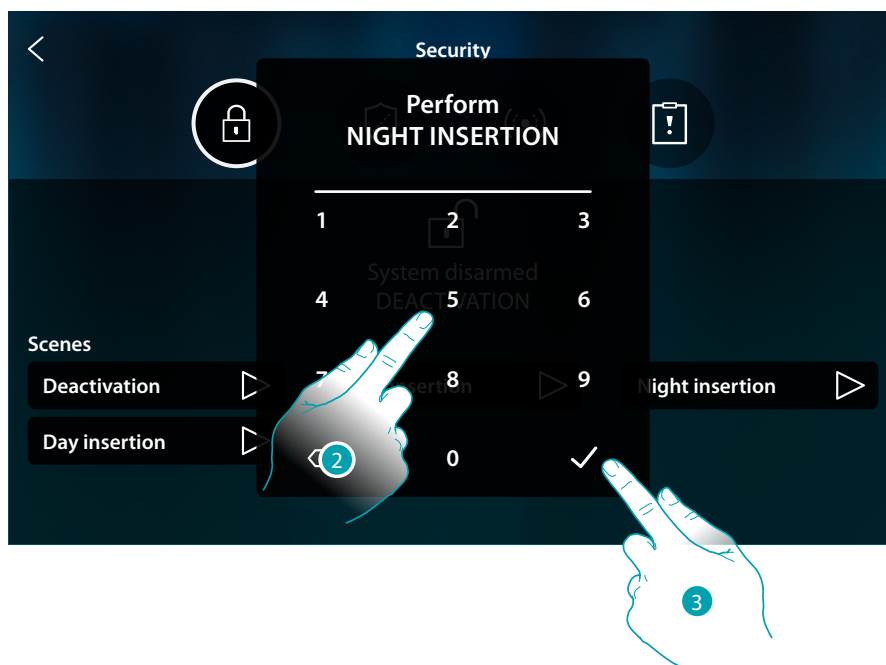

2. If required enter the code


3. Touch to confirm

A message indicates that the insertion scenario has been activated and that the system for the partitions of that scenario has been activated.

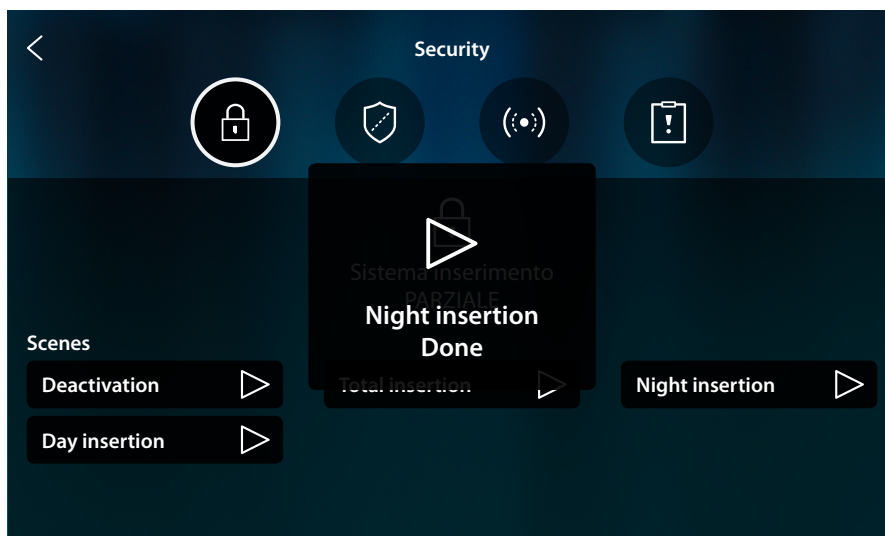

Partitions

In this page you can display and switch the partitions of your burglar-alarm system on regularly without using the insertion scenarios.

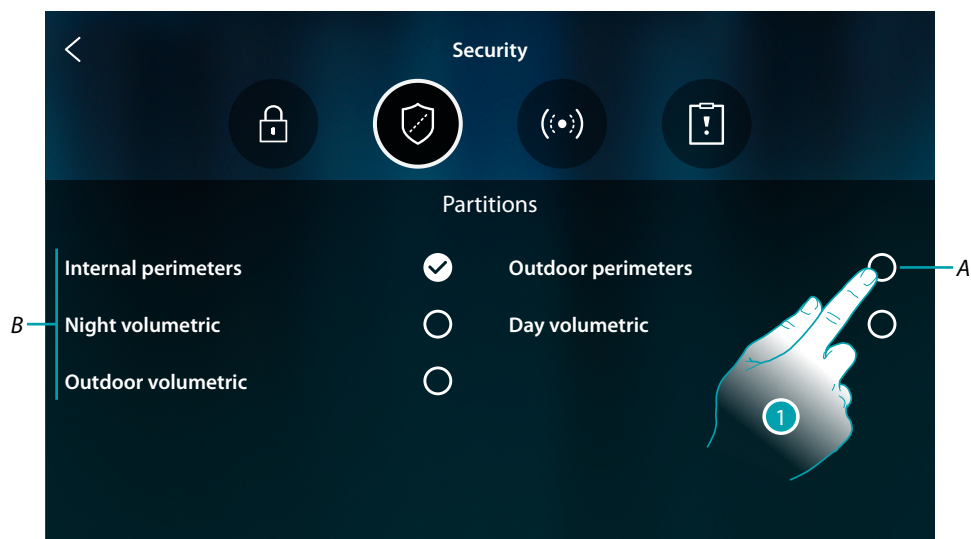


A Shows the status of the partition:

- ☐ The partition is switched off
- ☒ The partition is switched on
- ☐ Partition in alarm

B Shows the partitions making up your system:


1. Touch to insert the partition

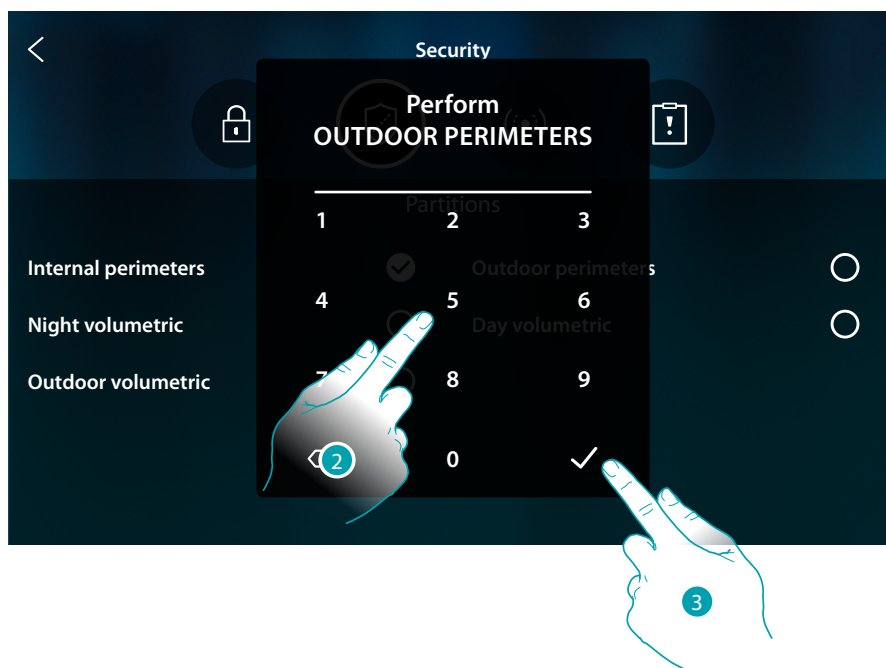

2. If required enter the code


3. Touch to confirm

A message indicates that the system for the indicated partition has been activated.

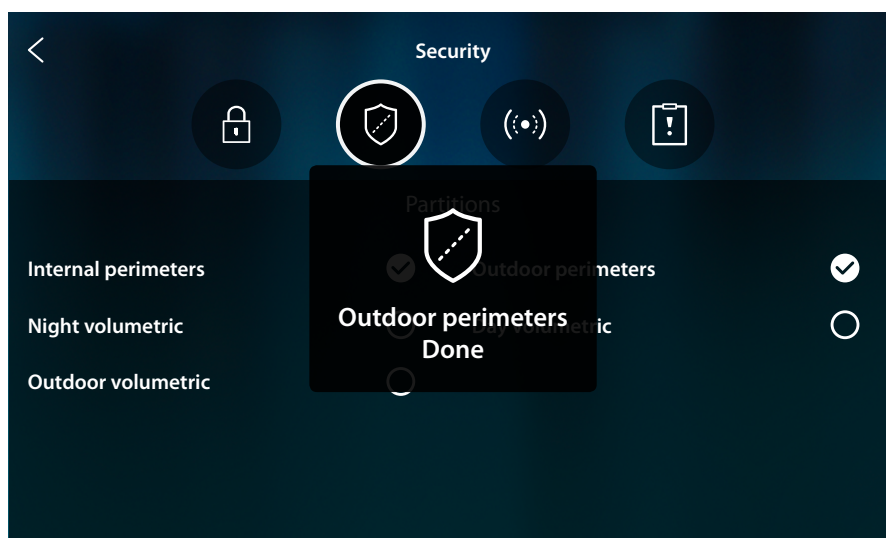

Zones

In this page it is possible to display the list of the zones of the system and if necessary disable them, for example to exclude the sensor of a window that you might not want to protect.

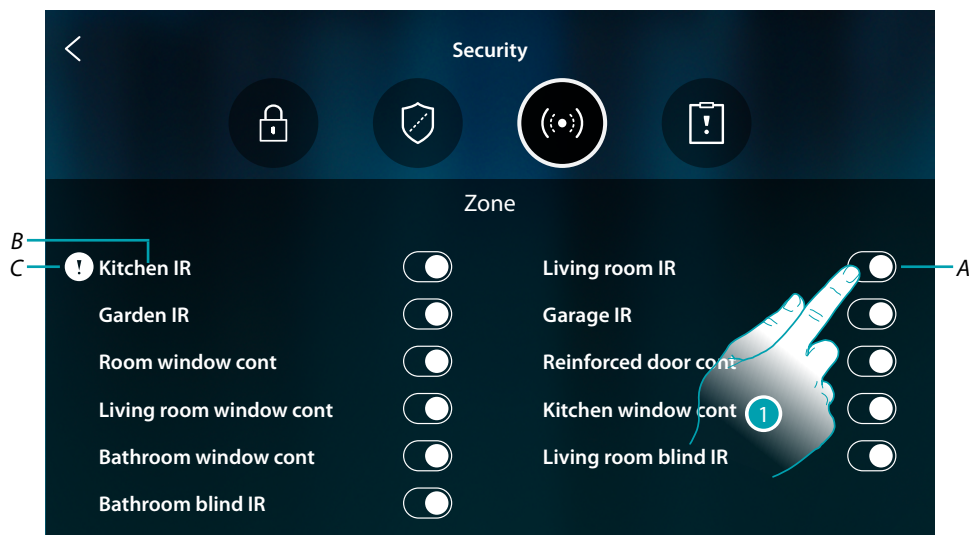


A Includes/excludes the zone from the system

B Zone name


C Zone in alarm

1. Touch the zone that you want to exclude from the system

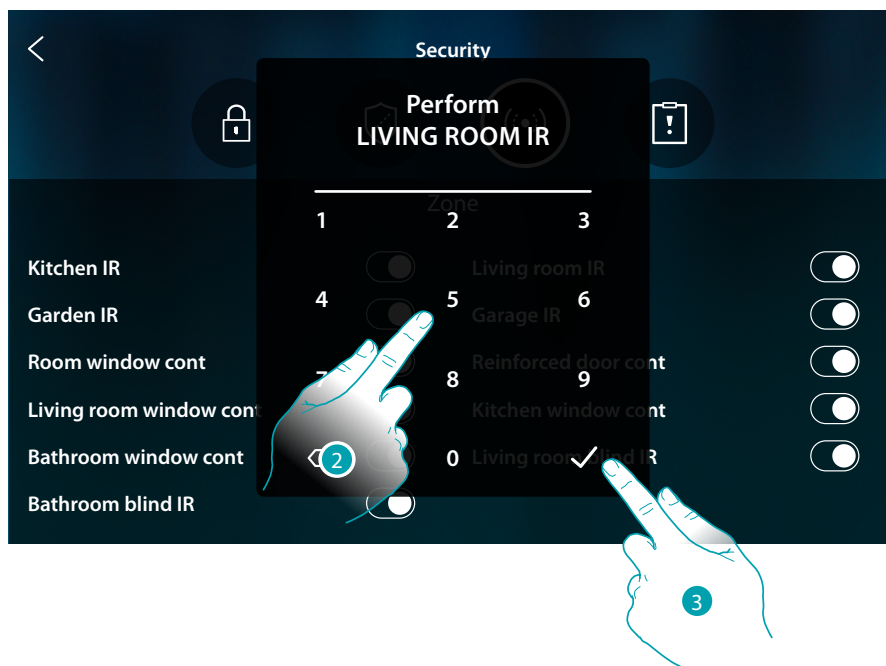

2. If required enter the code

3. Touch to confirm

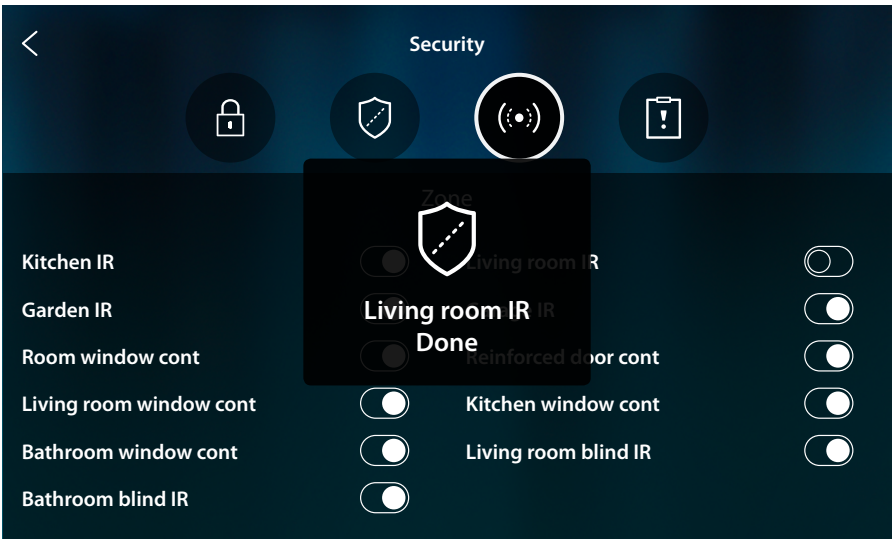


A message indicates that the zone has been excluded from the system and will not be re-included automatically; touch again to re-include it

Note: to ensure correct operation, your installer must appropriately configure the exclusion of the zone.

Alarms and Faults

In this page it is possible to display the faults and alarms in progress in the system

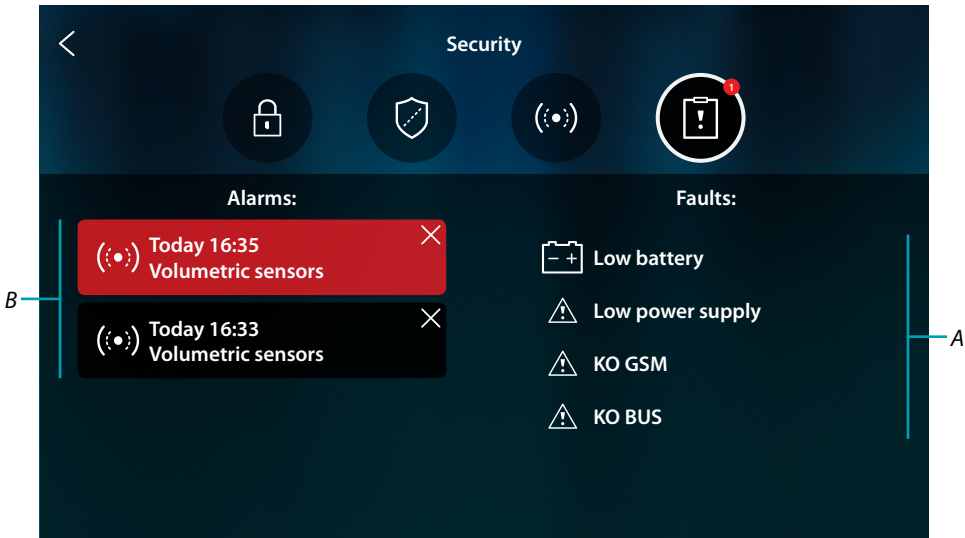

A List of current faults


B List of alarms

Alarms

In case of burglar alarm system alarm, a message appears in the Home Page (flashing red band)




1. Touch to display the alarm

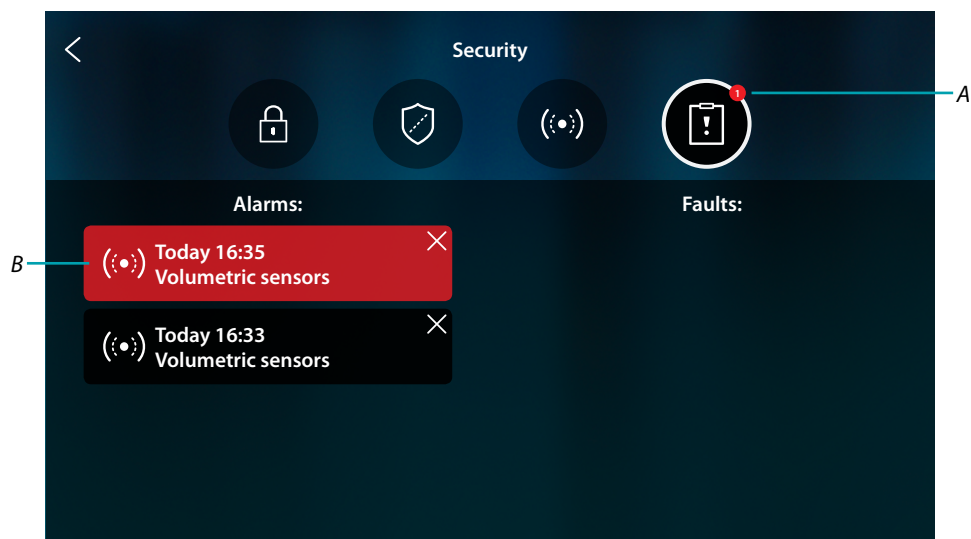

A Number of current alarms

 B Alarm panel



a Date/time of the alarm

b Remove the alarm display

c Partition where the alarm has occurred


d Background colour:








 

Red = alarm in progress

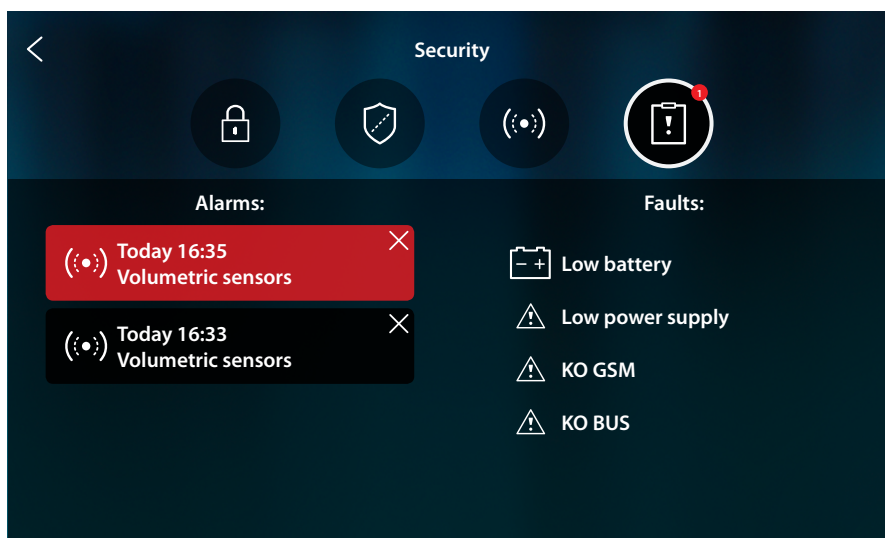Dark = alarm acknowledged (already displayed)

Faults

In this page it is possible to display the faults in progress in the system



	Battery exhausted: battery power charge below the threshold (if no mains power supply connected)
	KO BUS: BUS wiring or connection problem
	KO Ethernet: Ethernet network problem (not available or faulty)
	KO fuses: thermal fuse in protection status
	KO GSM: GSM network not available or faulty
	KO PSTN: PSTN network not available or faulty
	KO power supply: no power supply to the control unit and/or the wireless repeater
	Low power supply: the power supply output voltage is below the acceptable threshold
	No power supply: power supply unit faulty and unable to supply the necessary current to the system

Use of the functions from MyHOME_Up

The home automation functions can be managed locally using the Home Page icons and the dedicated pages, shown in the previous paragraphs, or remotely using the objects and functions available in the MyHOME_Up App.


Download the MyHOME_Up App from the Stores...



...and use it to remotely control your home

For more information see the MyHOME_Up system manual available from the following website:


www.homesystems-legrandgroup.com

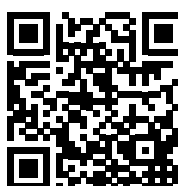


Settings

After installing and connecting HOMETOUCH, it will be necessary to complete the basic setup before being able to use the device.



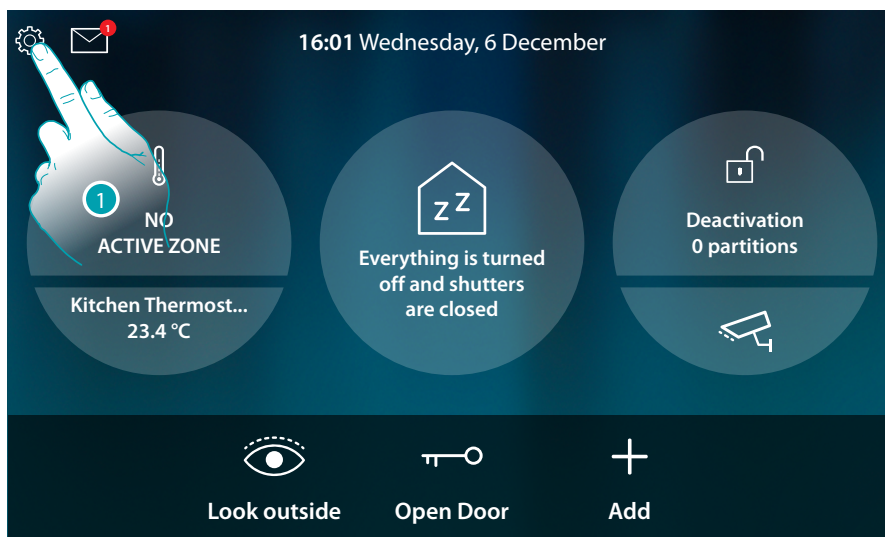



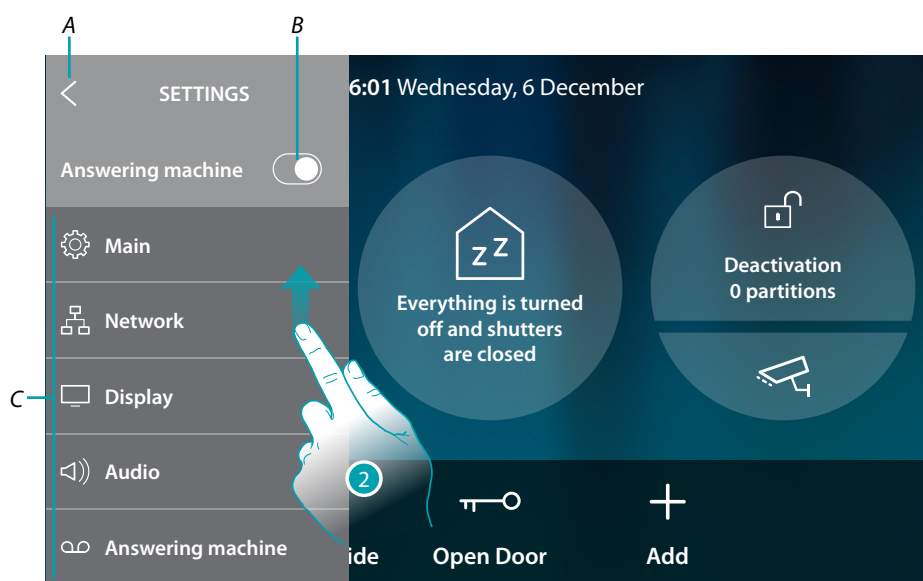


Note: the available functions and settings depend on the initial choice (video door entry system, home automation, both) and the functions of the associated MyHOMEserver1.



1. Touch to open the Settings pull-down menu




- A Close the pull-down menu
 - B Enable/disable the [answering machine function](#)
 - C List of settings
2. Scroll to display the other settings

 Main	Set the general parameters such as: Date and time / Language / Information
 Network	It displays/modifies the mean of connection of your device to the home network (Wi-Fi, Ethernet) and modifies its parameters
 Display	It adjusts the brightness and changes the background image of the display; it enables/disables the proximity sensor.
 Audio	It associates specific ringtones to certain events, and adjusts their volume
 Answering machine	It enables/disables the answering machine, sets the quality of the recorded video feed, enables/disables and records the welcome message.
 Account	It displays the list of users associated to your device and the smartphones connected to the same. It disconnects the single smartphones or the user.
 Check updates	It shows if any firmware updates are available, and if required proceeds to their download and installation.
 Report a problem	It points out a problem which has occurred and sends a notification to the after-sales service
 Advanced settings	The modification of the advanced settings can cause problems with certain functions and should only be attempted by a qualified installer


General

This section contains the general settings.

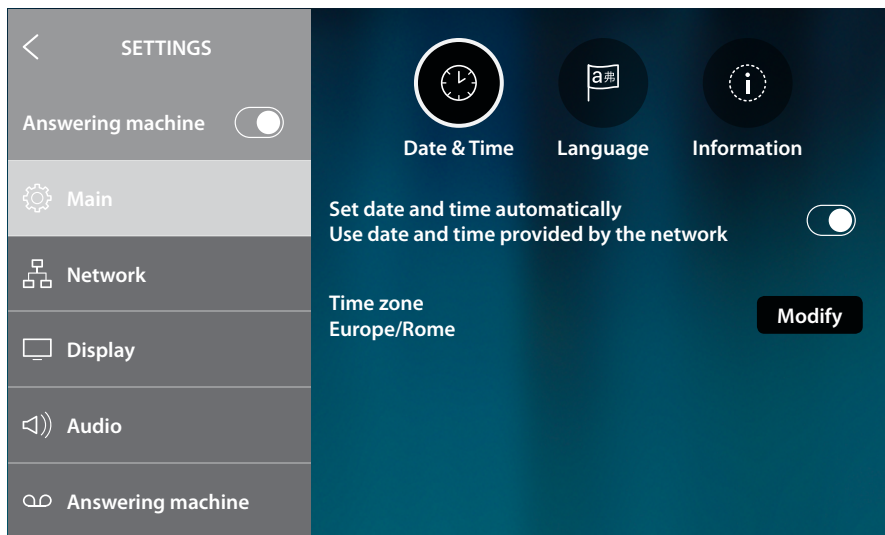

Date and time

Set the current date and time.

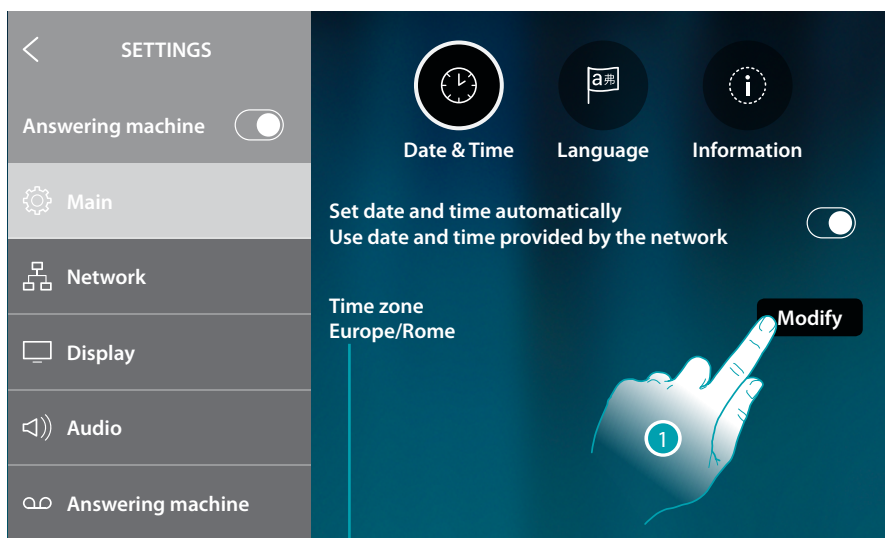


A


A Indication of current time zone

By default, time and date are automatically updated by an NTP server. The Network Time Protocol (NTP) is a protocol to synchronise the system watches automatically, taking the correct data from the Internet.


1. Touch to modify the time zone

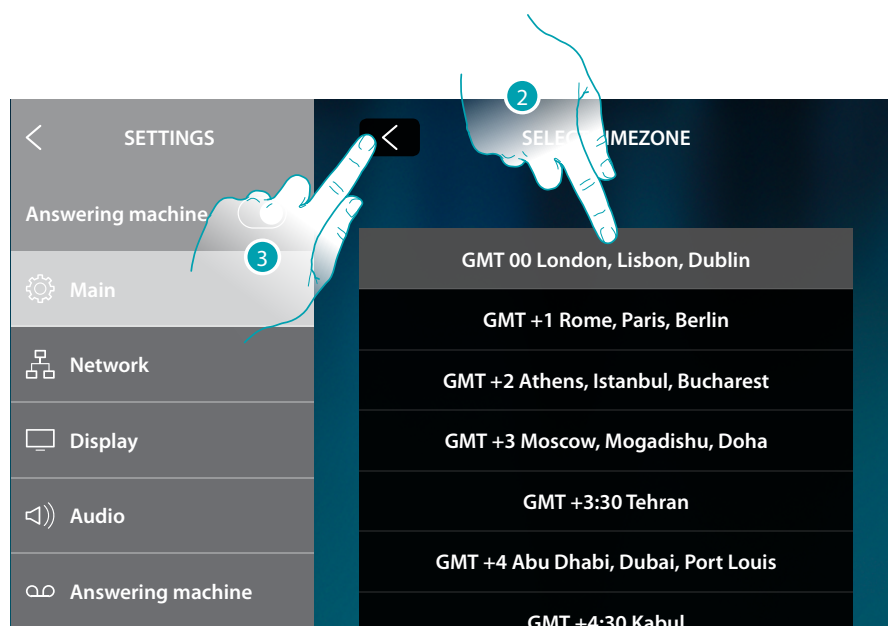


2. Select your time zone
3. Touch to confirm

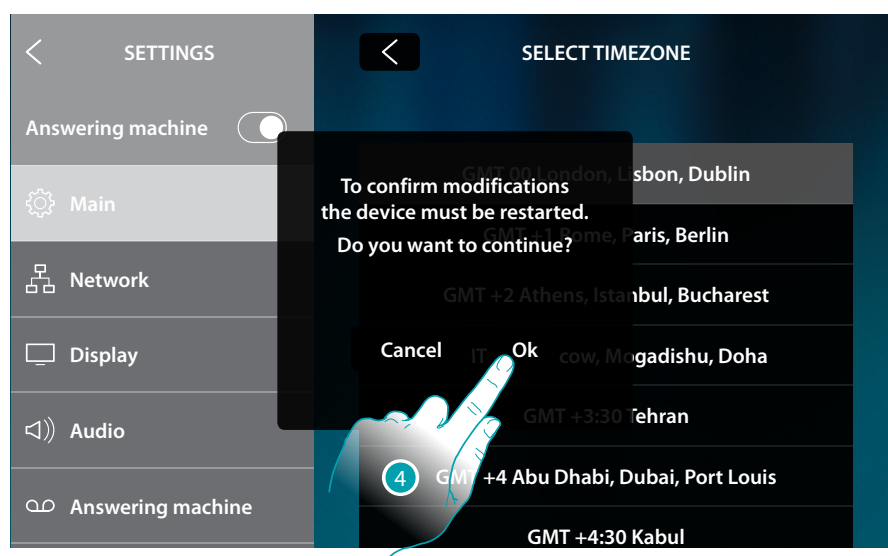

4. For the change of time zone to become effective, the device must be restarted. Touch to continue

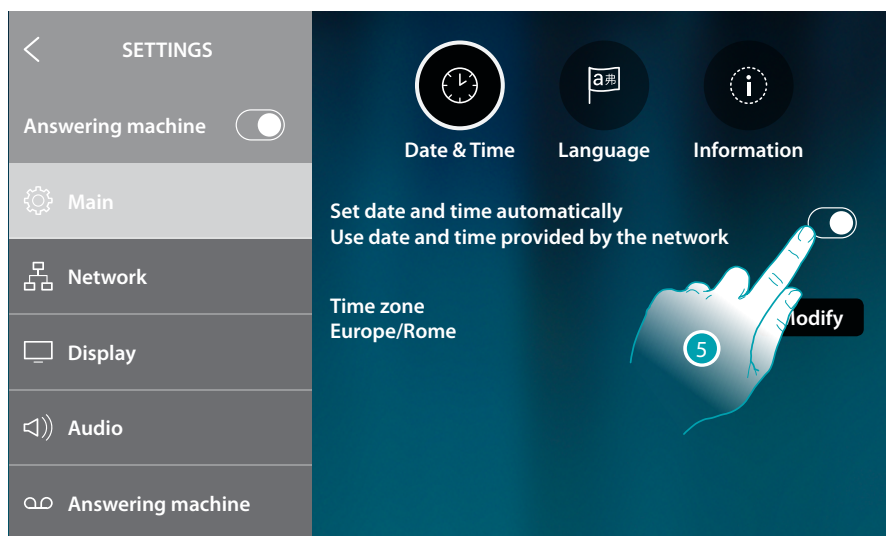


5. Touch if you want to disable the automatic date and time function and to manually set date and time

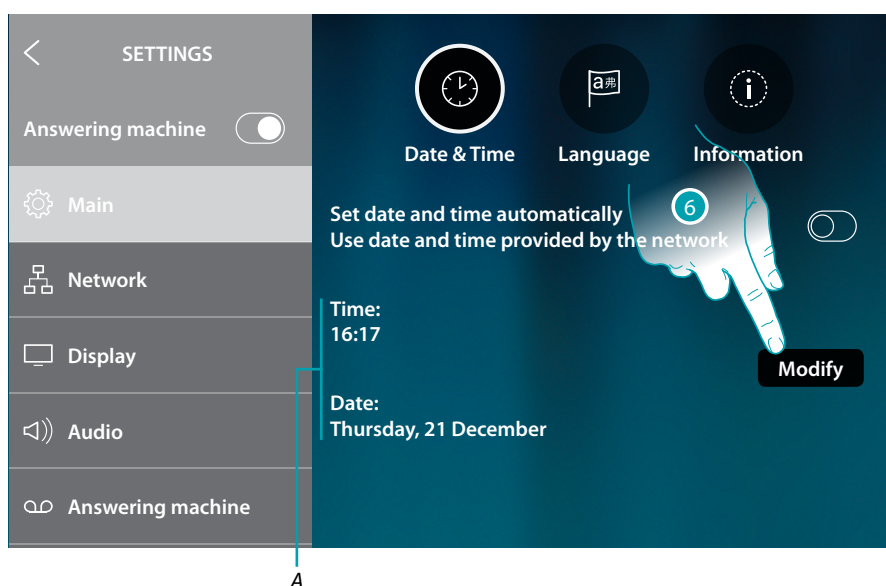

A Current date and time


1. Touch to manually modify time and date

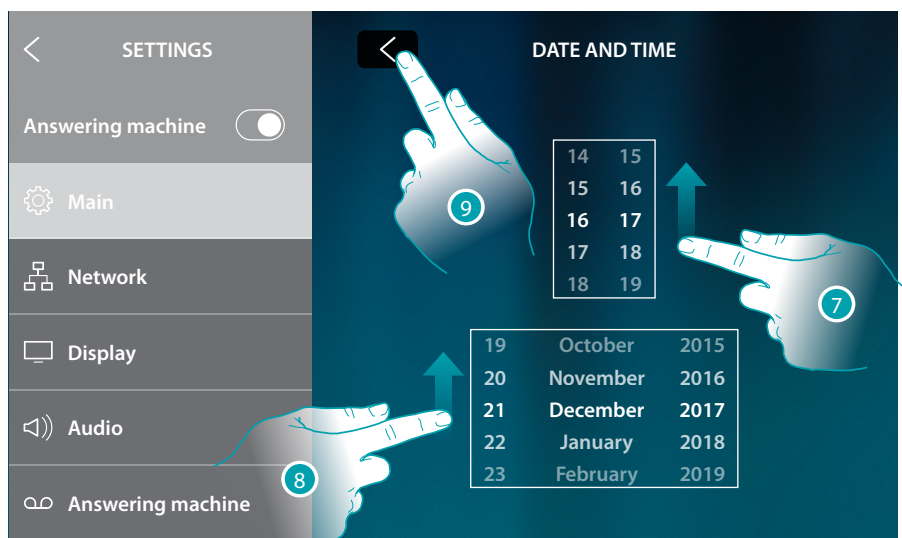

7. Scroll to set the time
8. Scroll to set the date
9. Touch to end

Language


Set the device language

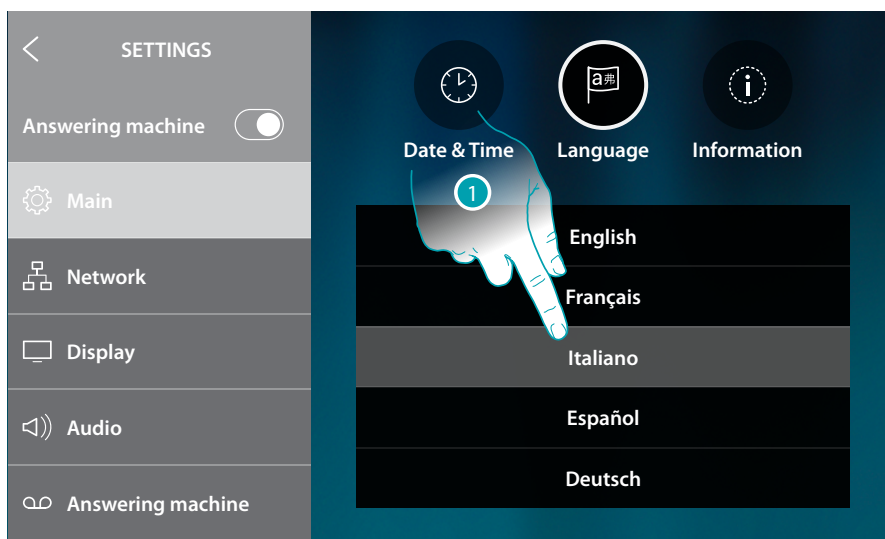

1. Touch the icon for the desired language

Information

In this section it is possible to display some information concerning the configuration of the device

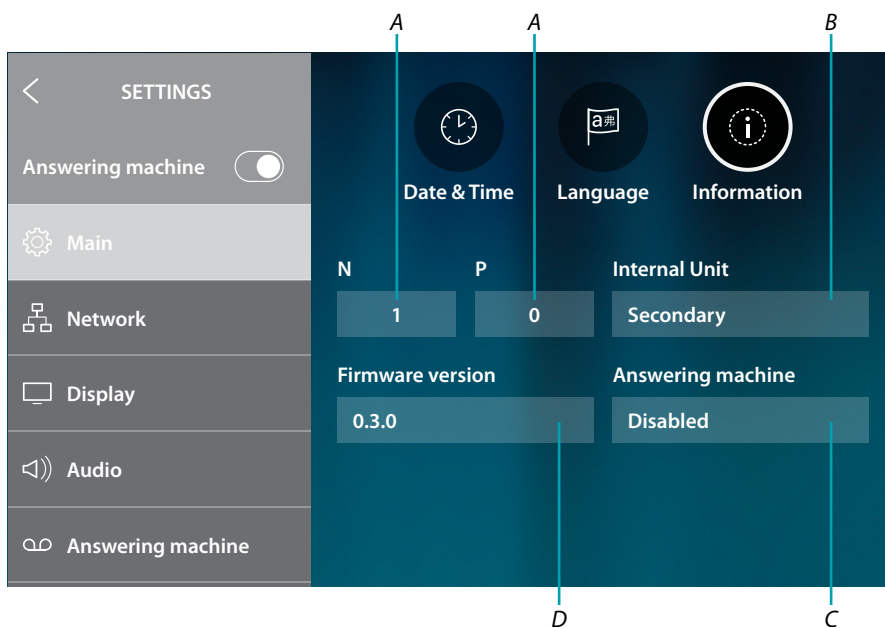


- A It shows the value of the N configurator (device address) and the P configurator (address of the EP of which the door lock can be opened with the IU idle and to which the auto-on command can be sent)
- B It shows if the device is a main or secondary device.
The main device is the only one enabled for transferring incoming calls to the App and to manage the answering machine. Each home can only have one main device
- C It shows if the answering machine is enabled or disabled
- D Firmware version installed

Network

In this section, it is possible to view how the device is connected to the home network (Wi-Fi or Ethernet), and if required change the way of connection or its parameters.

Note: the selection of a connection method will disable the other one available.
The selection may be modified at any time.

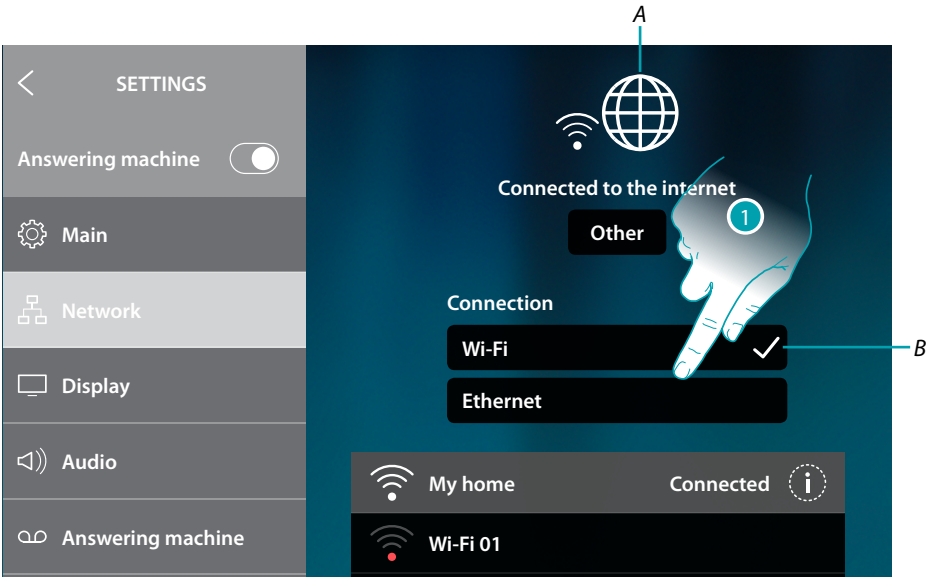


A Connection status and type

WI-FI connection		Ethernet connection	
	Wi-Fi technology selected Internet KO		Ethernet technology selected Internet KO
	Wi-Fi technology selected Internet OK		Ethernet technology selected Internet OK

B Type of active connection

1. Touch to select the type of connection

Connection to the network using Wi-Fi technology

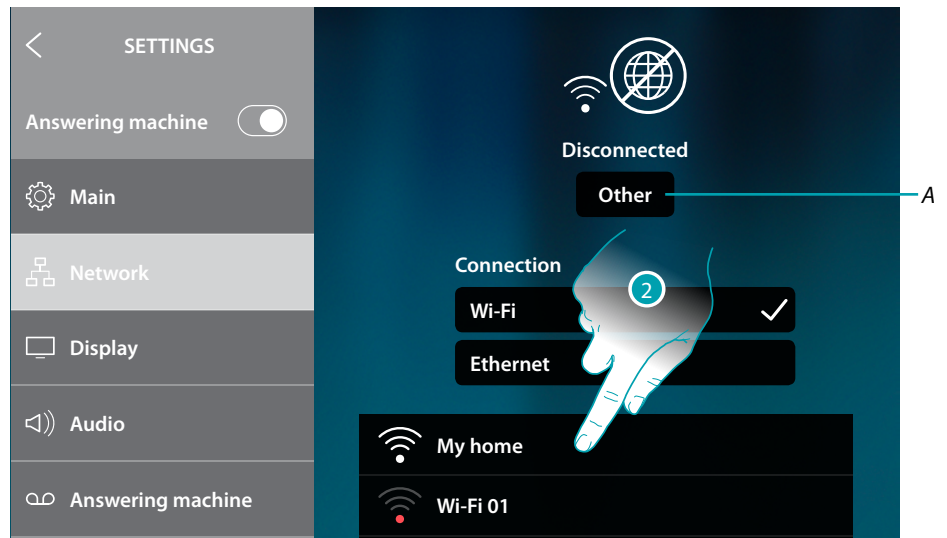

A Opens the "hidden network" selection page

2. Select the domestic network to which you want to connect the device

Note: your domestic network must have the following features:


- IEEE 802.11 b/g/n (2,4 GHz) 13 channels
- Encrypting and authentication methods supported:
 - OPEN WPA-PSK networks
 - TKIP WPA2-PSK included
 - included AES WEP 64 bits (ASCII 5 figure or hexadecimal 10 figure codes)
 - WEP 128 bits (ASCII 13 figure or hexadecimal 26 figure codes)
 - WPS authentication (supported for WPA2-PSK)



3. Enter the password (if required)

4. Touch to display the unencrypted password


5. Touch to confirm

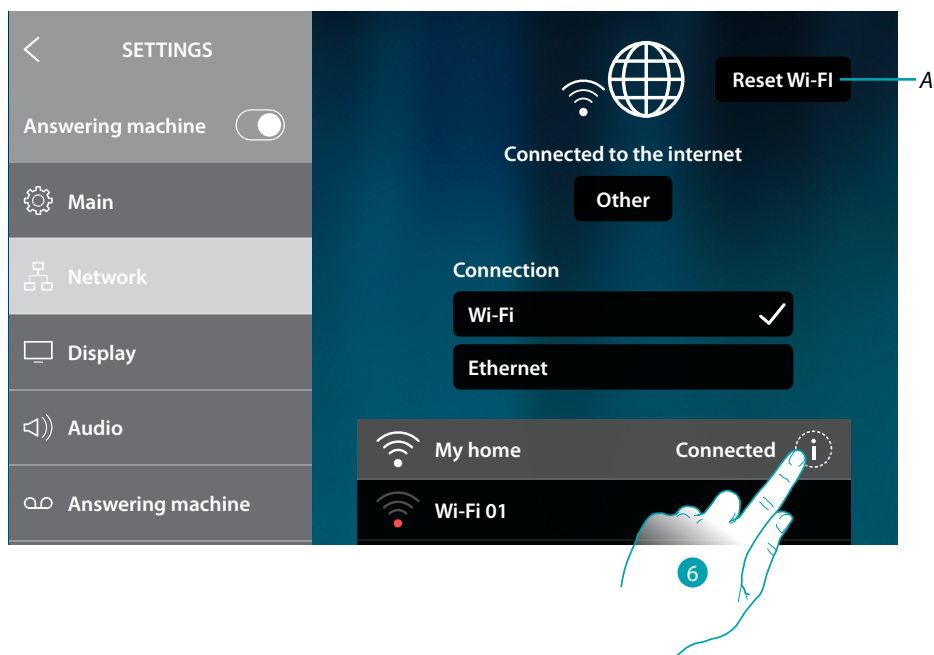

A It resets all Wi-Fi settings

Note: after resetting all Wi-Fi settings, it will be necessary to re-enter the password for the desired Wi-Fi network.

6. Touch to display or modify the network connection parameters, or to forget the network.

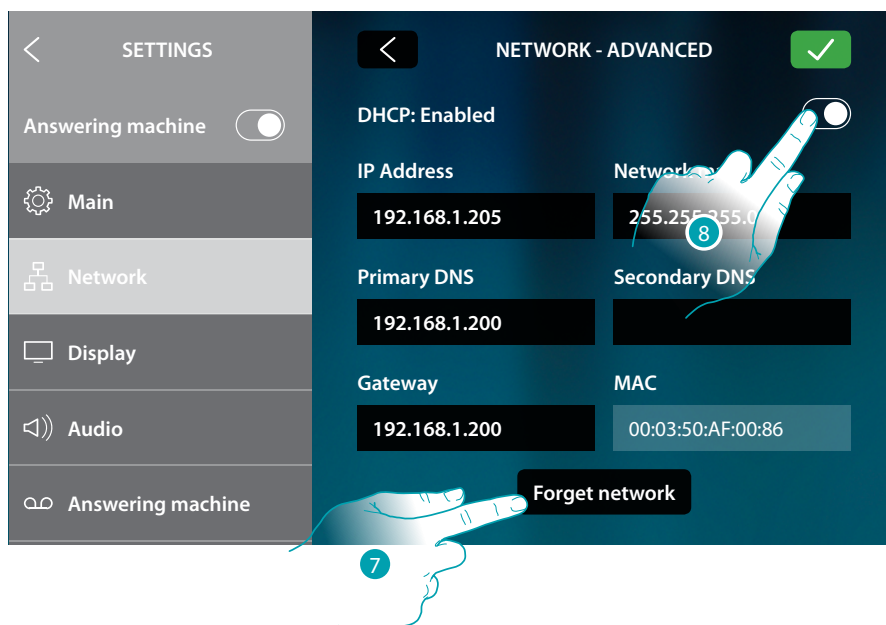


DHCP is enabled as standard.

After connection, the network settings will be saved by the device and it will no longer be necessary to re-enter the password when connecting in the future.

7. Touch to forget the network; when reconnecting to this network, you will need to re-enter the password.

Warning: when this icon is pressed, the action will be completed immediately, without asking for confirmation before proceeding.

8. Touch to disable the DHCP mode and to manually modify the parameters

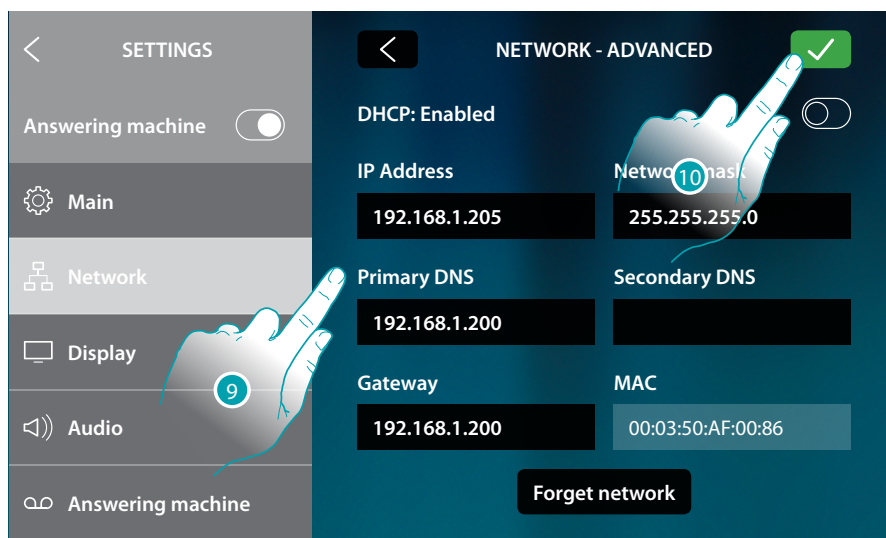

9. Enter the new network parameters


- **IP address, network mask and DNS:** typical parameters of TCP/IP protocol networks, necessary for the identification of the device within the local network.
- **Gateway:** IP address of the router/access point.

Note: before changing the default values, contact the network administrator.


In addition to preventing the service from becoming active, wrong values can cause malfunctioning during the communication of other network devices.

10. Touch to confirm

Connection to the network using Ethernet technology

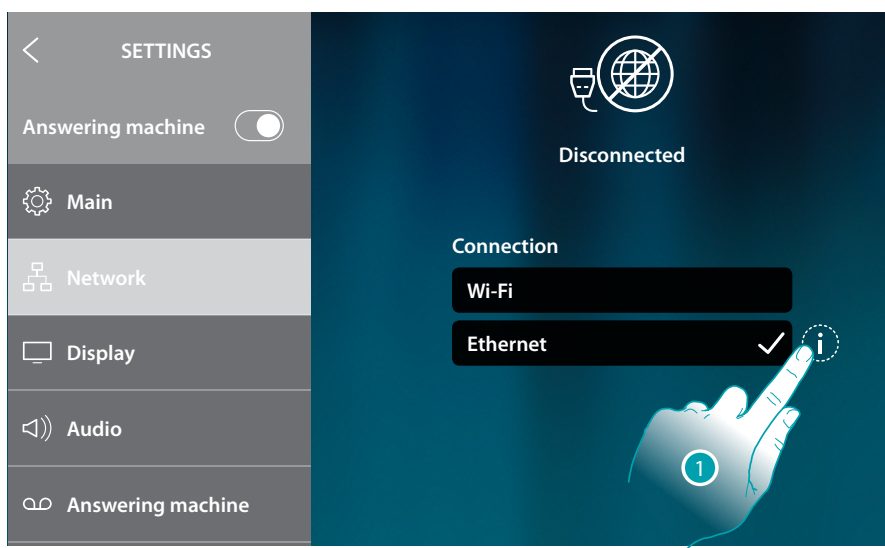


1. Touch to display or modify the network parameters

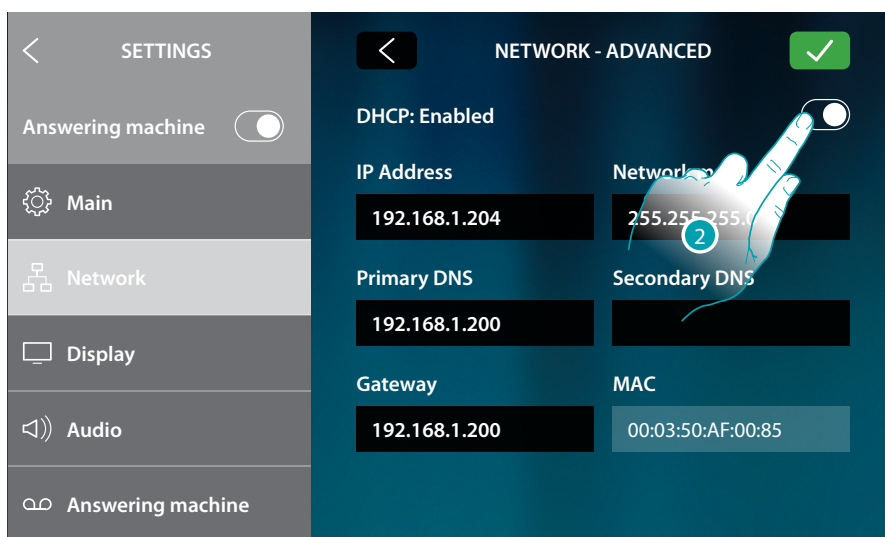

DHCP is enabled as standard.

2. Touch to disable the DHCP mode and to manually modify the parameters.

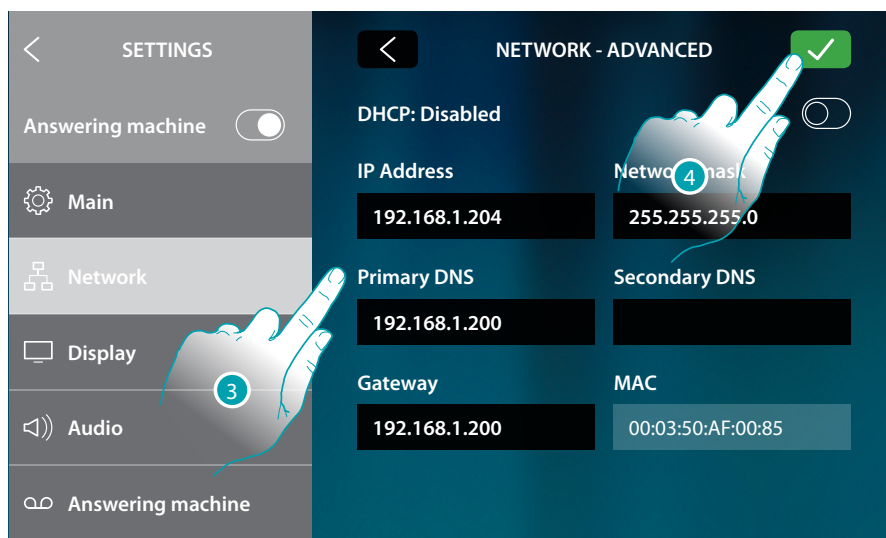


3. Enter the new network parameters

- **IP address, network mask and DNS:** typical parameters of TCP/IP protocol networks, necessary for the identification of the device within the local network.
- **Gateway:** IP address of the router/access point.

Note: before changing the default values, contact the network administrator.

In addition to preventing the service from becoming active, wrong values can cause malfunctioning during the communication of other network devices.


4. Touch to confirm

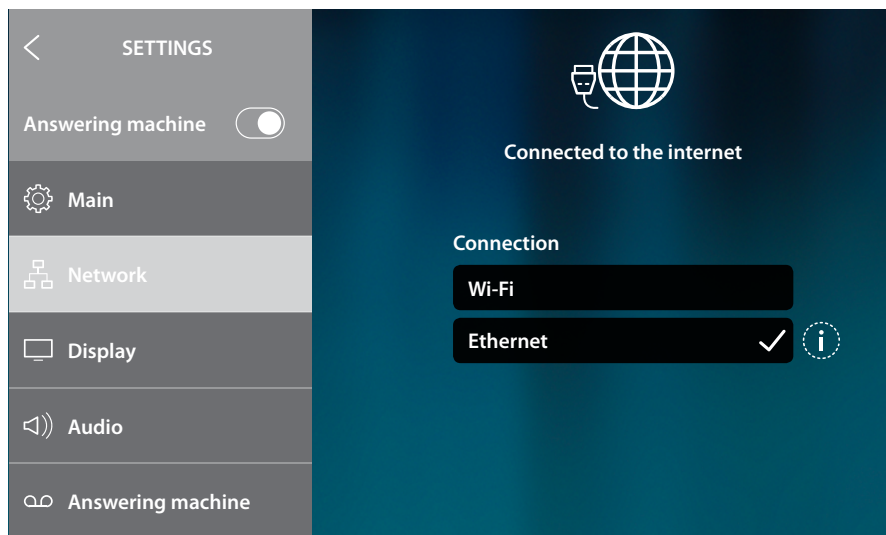

The device is now connected through the Ethernet network

Screen

This section can be used to adjust the brightness and change the background of the display, and to enable/disable the proximity sensor.

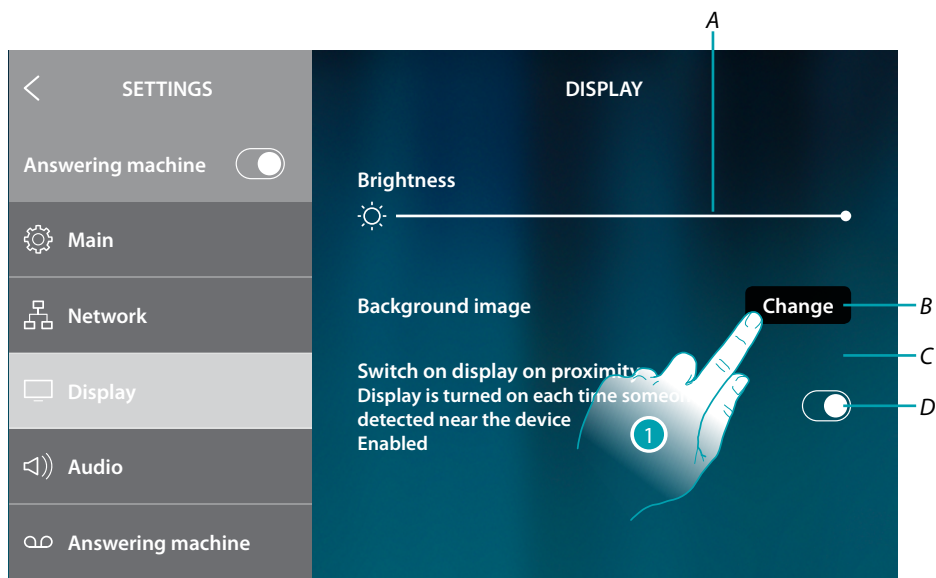

A It adjusts the brightness: move the cursor to adjust the brightness


B It changes the background image, choosing among the ones available

C Current background image

D It enable/disables the proximity sensor

Note: the sensor detection efficiency depends not only on distance, but also on other factors, such as temperature and reflectance of the material of the object in front of the sensor.

1. Touch to modify the background image

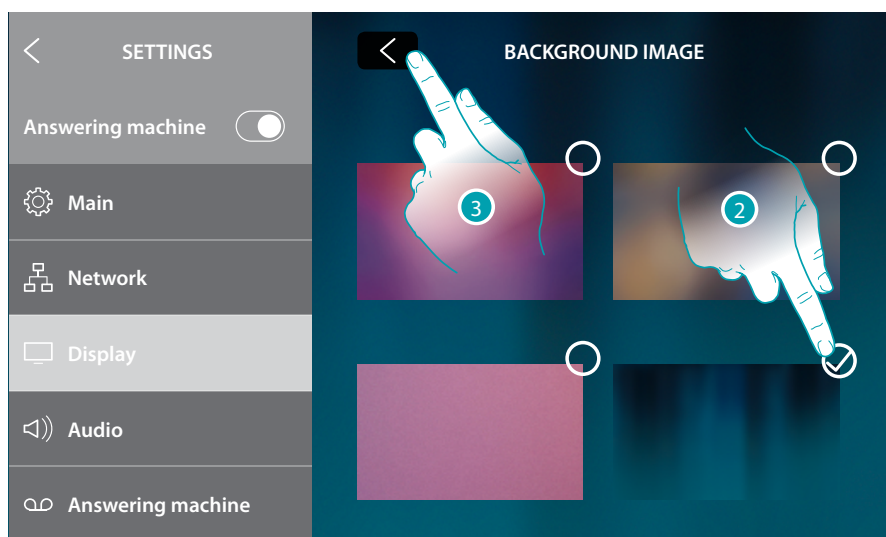


2. Touch to select the new background image

3. Touch to end

Audio

This section can be used to associate specific ringtones to certain events, and to adjust their volume

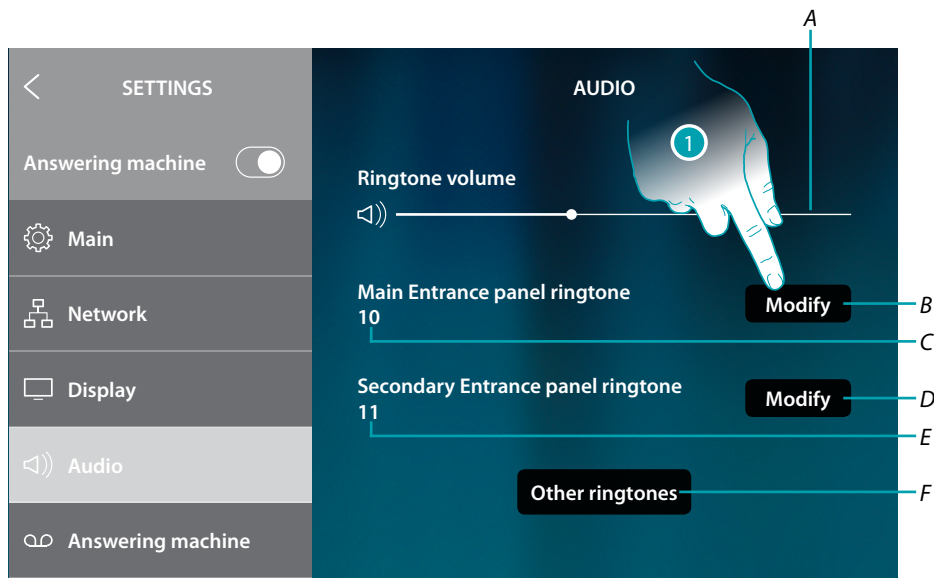

- A It displays and adjusts the ringtone volume
 - B It modifies the ringtone for calls received from the main Entrance Panels
 - C Number of the ringtone set for calls from the main Entrance Panel
 - D It modifies the ringtone for calls received from a secondary Entrance Panel
 - E Number of the ringtone set for calls from secondary Entrance Panels
 - F It opens a page where it is possible to associate ringtones to other events
1. Touch to modify the ringtone


In the "Other ringtones" page, it is possible to associate a ringtone to the following events:

S2, S3 Entrance Panel: call from the SECONDARY Entrance Panel (S2, S3)

Call to the floor: call from the pushbutton outside your entrance door

Internal intercom: call from an intercom in your apartment.


External intercom: call from an intercom of another apartment

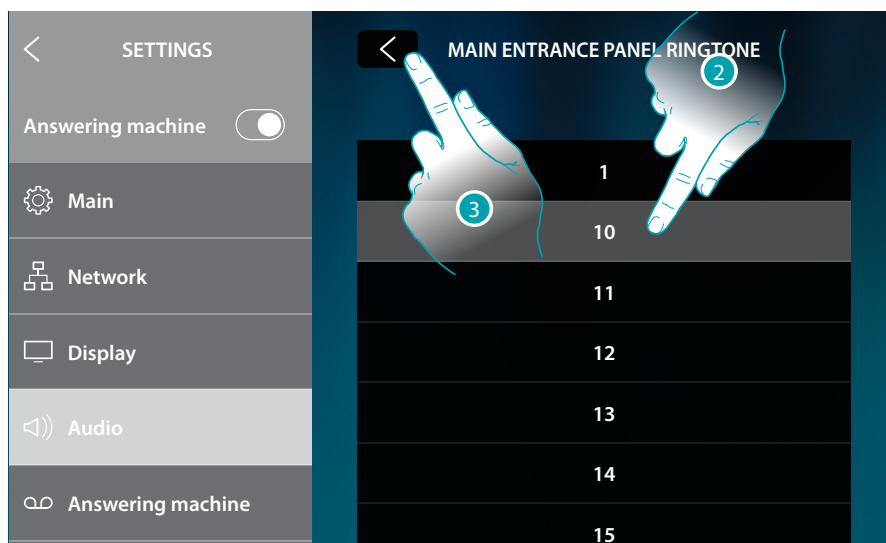

2. Scroll and touch the available ringtones (16); they will be played back as you scroll through them
3. Touch to go back and save the settings

Answering machine


This section can be used to enable/disable the answering machine, set the quality of the recorded video feed, enable/disable and record the welcome message.

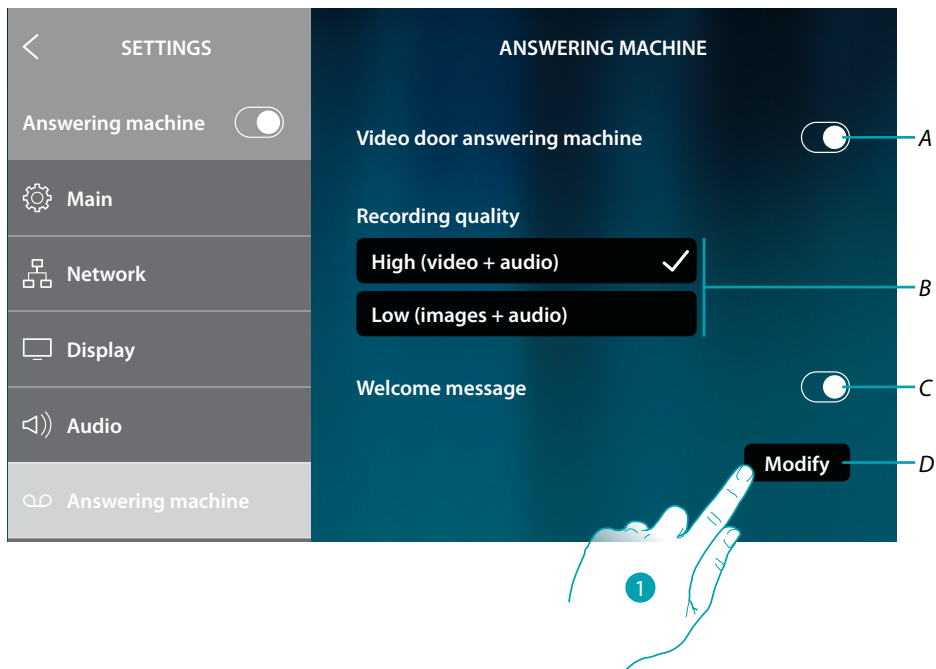

- A Enable/disable the answering machine
- B Set if video messages must be recorded in high resolution (maximum 25 x 15 sec. messages), or in low resolution (maximum 150 x 15 sec. messages).
- C Enable/disable the welcome message
- D Record the welcome message


Note: the welcome message is the welcome message that will be played to the visitor by the Entrance Panel when the video door entry system answering machine is enabled. If the message is not recorded or the answering machine is disabled, nothing will be played back.

1. Touch to record the welcome message

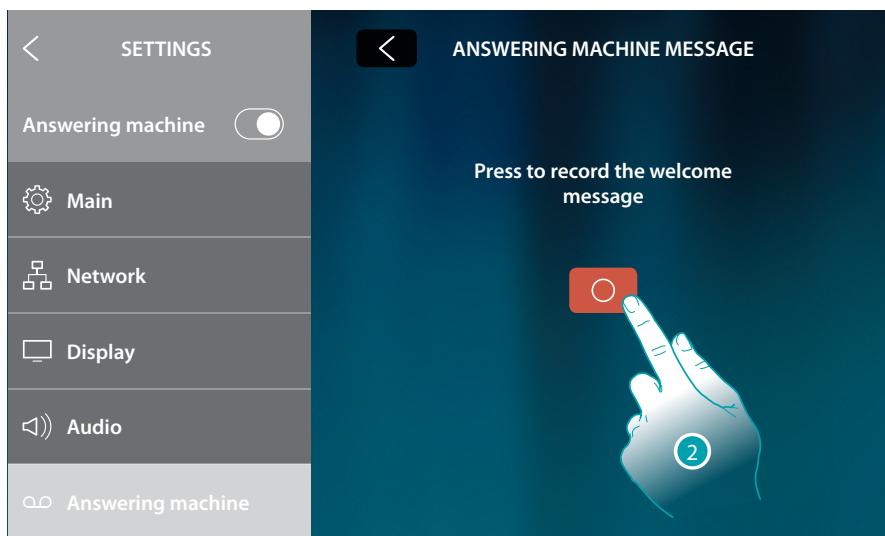


2. Touch to start the recording

Record the welcome message

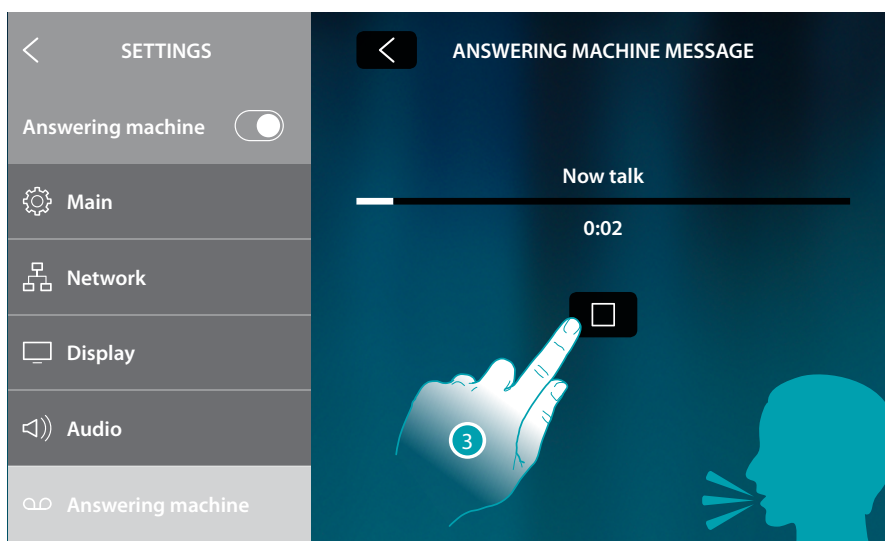

3. Touch to end the recording

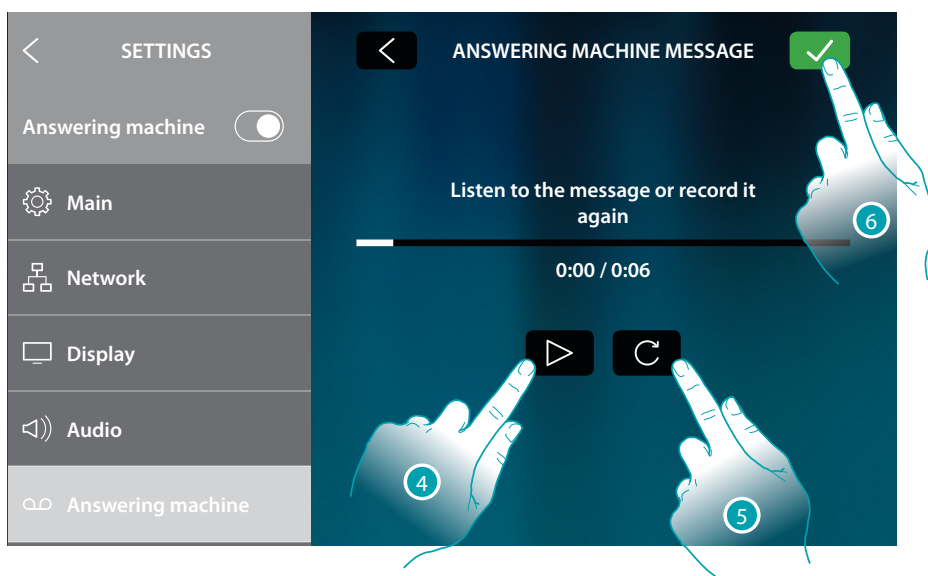

4. Touch to listen to the recording, and if required...

5. Touch to record it again

6. Touch to save


Note: the most recent message overwrites the oldest one, which can no longer be recovered

Account

In this section it is possible to display the list of the users associated to your device and the smartphones connected to the accounts.

It is also possible to disconnect the single smartphones or the user.


Warning: the user section only appears if the [device has been associated to the App](#)

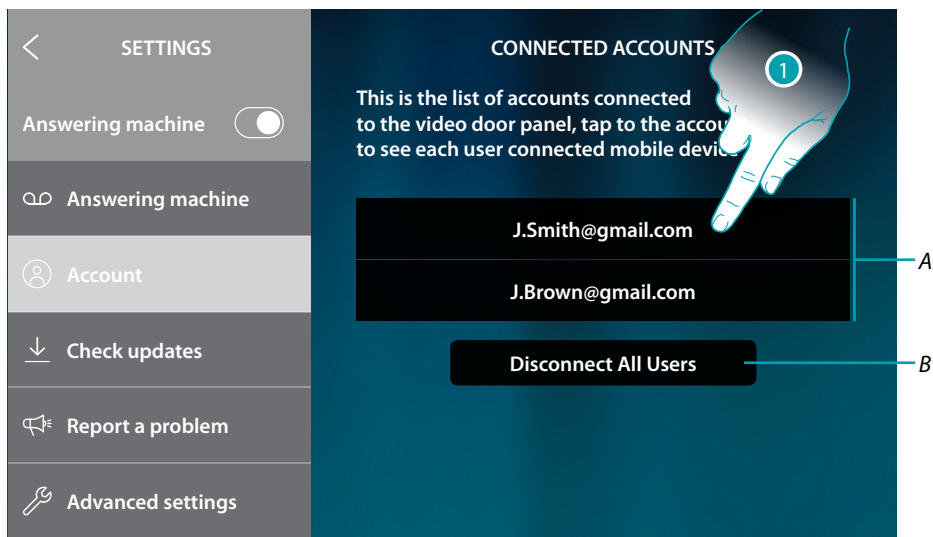

A List of associated users

B Disconnect all the users


1. Touch to manage the user

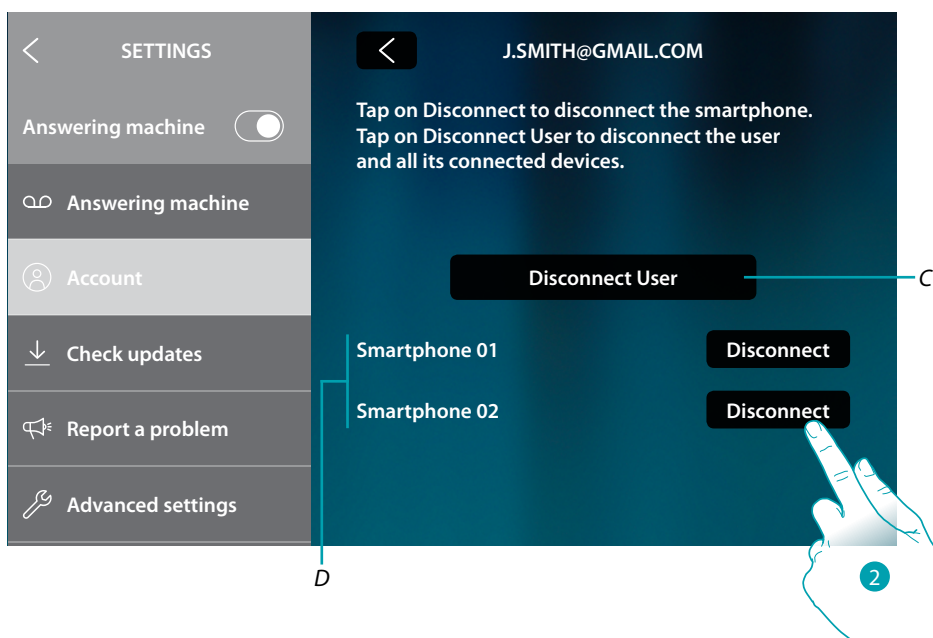

C Disconnect the single user


D List of smartphones connected to the user

2. Touch to disconnect the smartphone

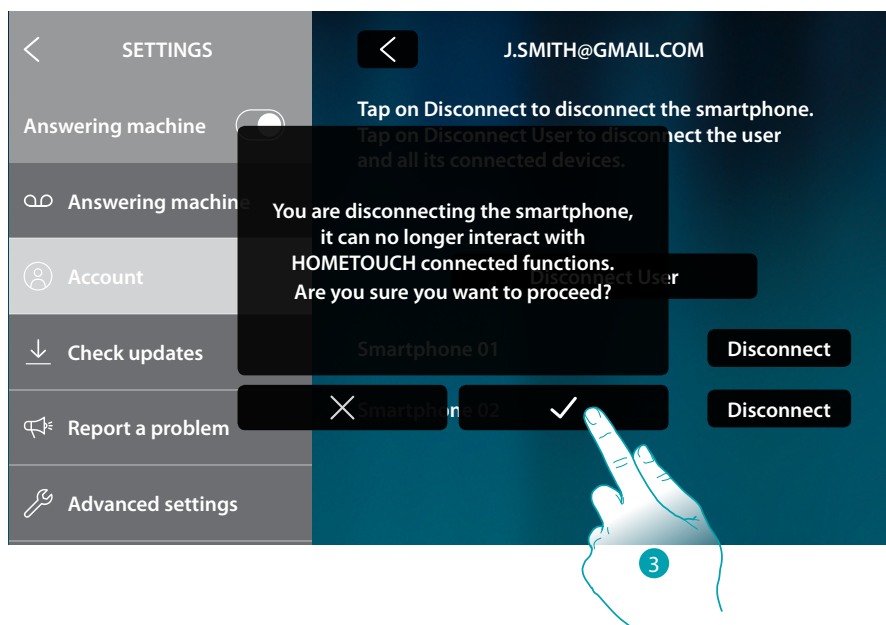


3. Touch to confirm

To connect the smartphone to the device again, authenticate using the DOOR ENTRY for HOMETOUCH App

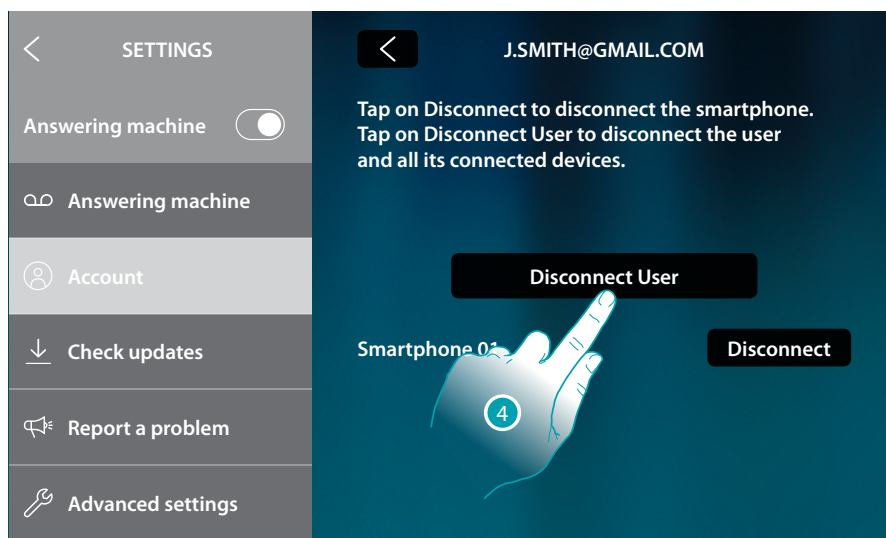

4. Touch to disconnect the user and consequently all the connected smartphones

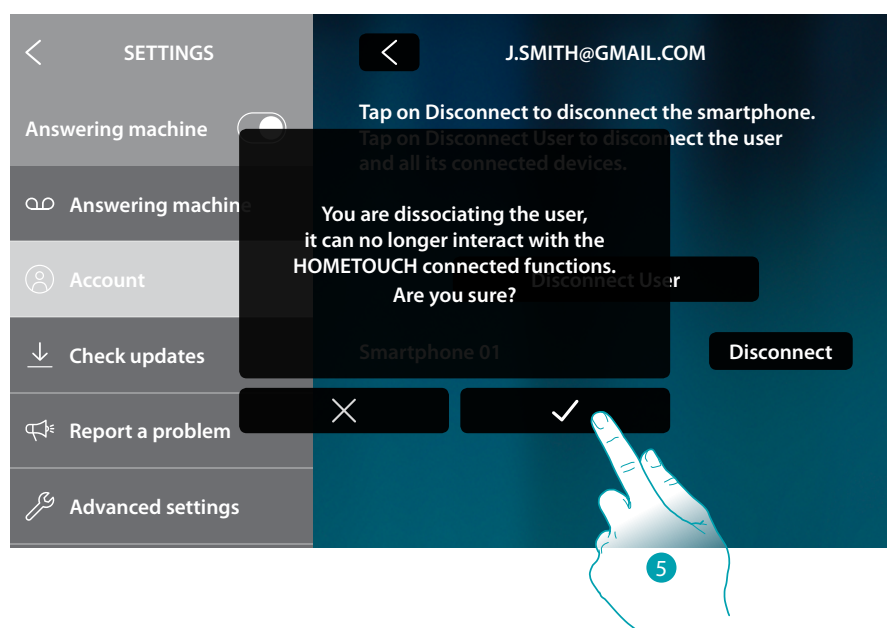


5. Touch to confirm

To associate your user again, it is necessary that another user invites you or, if there are no other users, make the association procedure again.


Note: if only one smartphone is connected to the user, when you disconnect it, you automatically disassociate the user.

Check updates


This section can be used to see if any firmware updates are available, which can then be downloaded and installed.

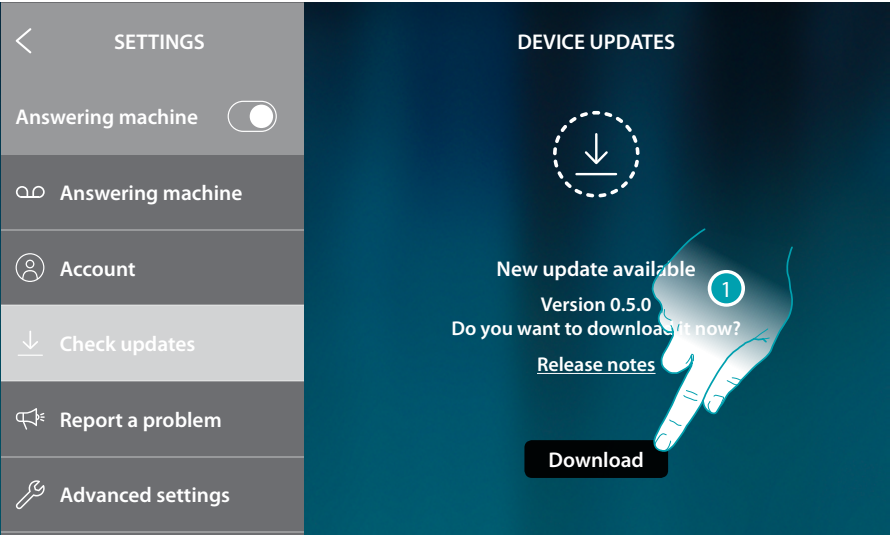


1. If available, touch to download the update

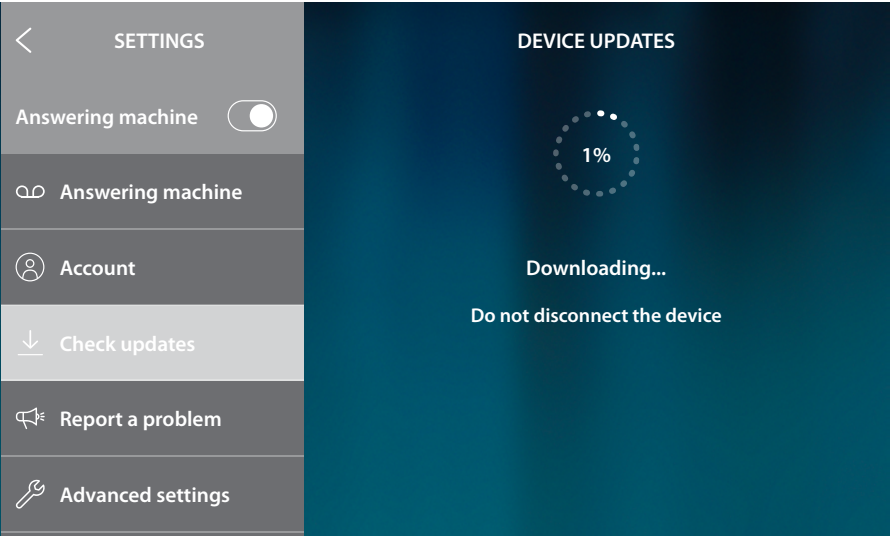

Do not switch the HOMETOUCH off or disconnect it until the end of the procedure.

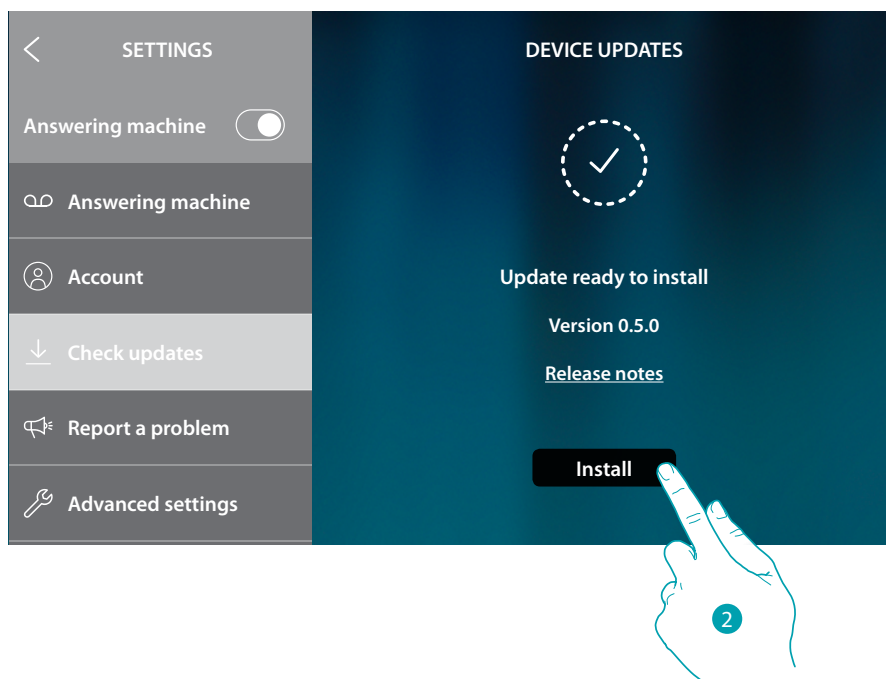

2. At the end touch to install the update.
Do not switch the HOMETOUCH off or disconnect it until the end of the procedure

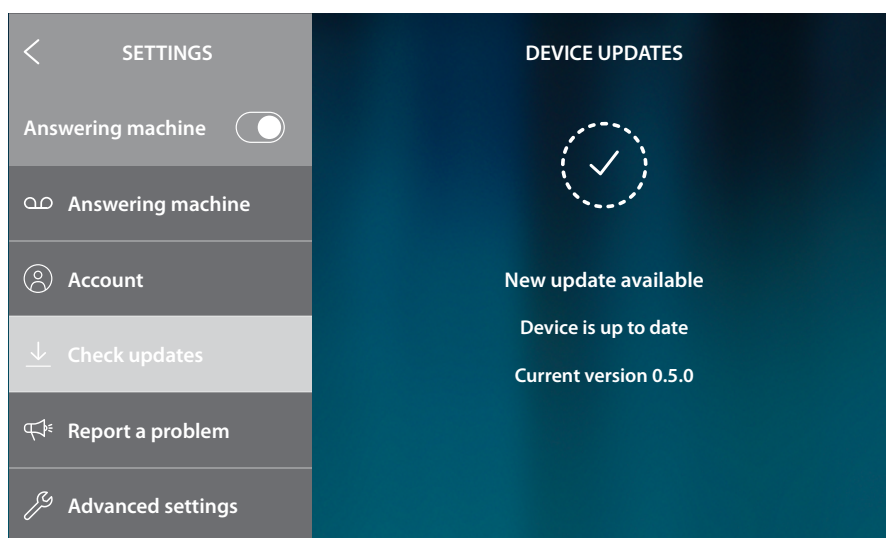


At the end of the procedure the device will be switched on again

Notify a problem

This section can be used to notify any issues to the support team.

The support team will analyse the problem and contact you as soon as possible.

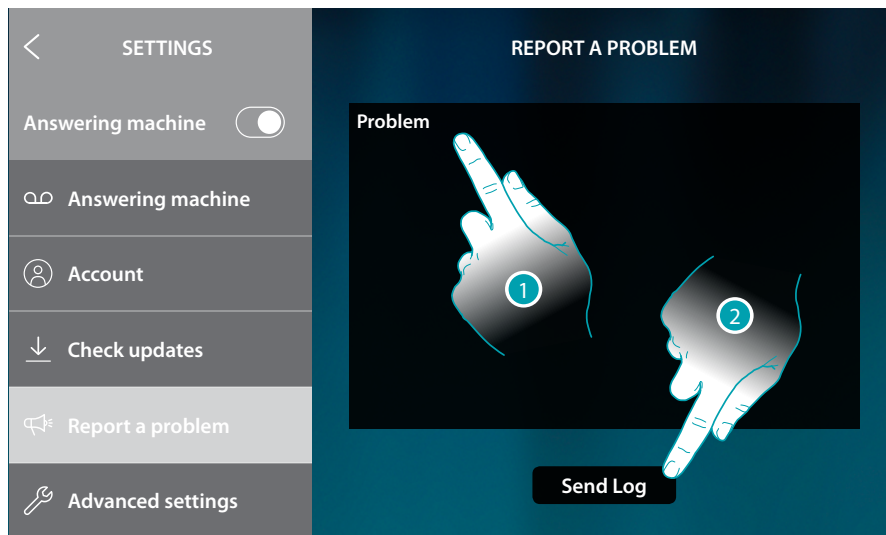

1. Describe the problem you want to point out in the correct field

2. Touch to send the message to the after-sales service


A message will confirm that your query has been forwarded. In case of error, repeat the operation

Advanced settings

This section can be used for the configuration of the video door entry system advanced settings, creating commands, intercoms and cameras.

Once created, they can be entered in the [favourites](#) and used.

It is also possible to complete the synchronization with the MyHOMEserver1 connected to the system, therefore acquiring some home automation functions.

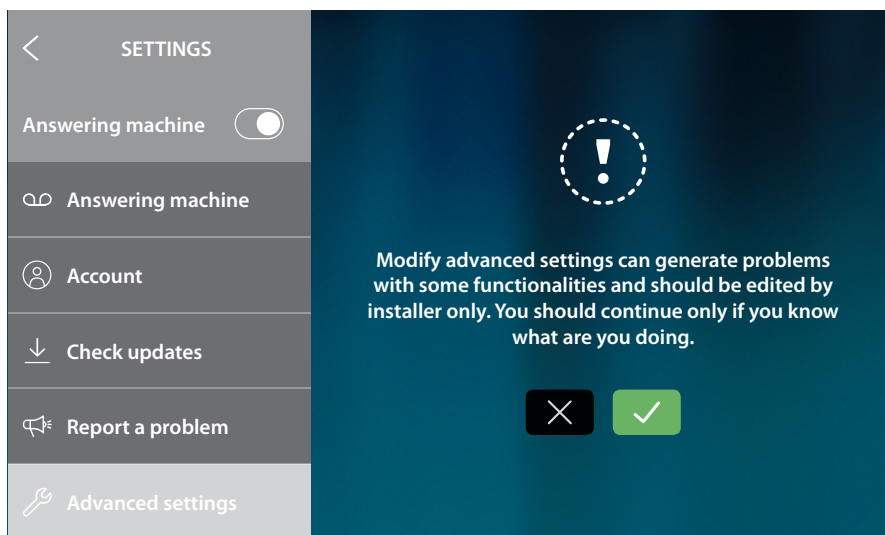

For more information see the Installer Manual, available from the following website:

www.homesystems-legrandgroup.com



Warning: access to the Advanced Settings should only be attempted by experienced people, as wrong actions could compromise the operation of the device

Legrand SNC
128, av. du Maréchal-de-Lattre-de-Tassigny
87045 Limoges Cedex - France
www.legrand.com

BTicino SpA
Viale Borri, 231
21100 Varese
www.bticino.com